

A background image of a microchip with a grid pattern of circuitry in shades of blue and green.

# Marvell<sup>®</sup> ESXCLI Plug-in for VMware vSphere<sup>®</sup>

2500, 2600, 2700, and 2800 Series Marvell QLogic<sup>®</sup> Fibre Channel Adapters  
3400, 8400, 41000, and 45000 Series Marvell FastLinQ<sup>®</sup> Ethernet Adapters

**User's Guide**

THIS DOCUMENT AND THE INFORMATION FURNISHED IN THIS DOCUMENT ARE PROVIDED "AS IS" WITHOUT ANY WARRANTY. MARVELL AND ITS AFFILIATES EXPRESSLY DISCLAIM AND MAKE NO WARRANTIES OR GUARANTEES, WHETHER EXPRESS, ORAL, IMPLIED, STATUTORY, ARISING BY OPERATION OF LAW, OR AS A RESULT OF USAGE OF TRADE, COURSE OF DEALING, OR COURSE OF PERFORMANCE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

This document, including any software or firmware referenced in this document, is owned by Marvell or Marvell's licensors, and is protected by intellectual property laws. No license, express or implied, to any Marvell intellectual property rights is granted by this document. The information furnished in this document is provided for reference purposes only for use with Marvell products. It is the user's own responsibility to design or build products with this information. Marvell products are not authorized for use as critical components in medical devices, military systems, life or critical support devices, or related systems. Marvell is not liable, in whole or in part, and the user will indemnify and hold Marvell harmless for any claim, damage, or other liability related to any such use of Marvell products.

Marvell assumes no responsibility for the consequences of use of such information or for any infringement of patents or other rights of third parties that may result from its use. You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning the Marvell products disclosed herein. Marvell and the Marvell logo are registered trademarks of Marvell or its affiliates. Please visit [www.marvell.com](http://www.marvell.com) for a complete list of Marvell trademarks and guidelines for use of such trademarks. Other names and brands may be claimed as the property of others.

### **Copyright**

Copyright © 2023. Marvell and/or its affiliates. All rights reserved.

# Table of Contents

	<b>Preface</b>	
	Intended Audience . . . . .	xii
	What Is in This Guide . . . . .	xii
	Related Materials . . . . .	xiii
	Documentation Conventions . . . . .	xiii
	Technical Support . . . . .	xv
	Downloading Updates and Documentation . . . . .	xv
<b>1</b>	<b>Introduction</b>	
	Hardware Requirements . . . . .	1
	Software Requirements . . . . .	1
	User Privilege Requirements . . . . .	1
<b>2</b>	<b>Installation, Update, and Removal</b>	
	Overview . . . . .	2
	Installing the Marvell ESXCLI VMware Plug-in . . . . .	3
	Updating the Marvell ESXCLI VMware Plug-in . . . . .	4
	Removing the Marvell ESXCLI VMware Plug-in . . . . .	4
<b>3</b>	<b>Ethernet CLI Command Extensions</b>	
	Extending ESXCLI Commands . . . . .	7
	Extension Command Format . . . . .	8
	Syntax . . . . .	8
	Format . . . . .	9
	Extension Module Functional Specification . . . . .	9
	QCC Namespace-level Commands and Sub-namespaces . . . . .	10
	Namespace Commands and Sub-namespaces . . . . .	10
	List Adapters . . . . .	11
	Update Adapters . . . . .	12
	Adapter Information . . . . .	13
	Get Adapter Information . . . . .	13
	Adapter Mode . . . . .	14
	Get Adapter Mode . . . . .	15
	Set Adapter Mode . . . . .	15

Adapter Default Configuration . . . . .	16
Get Default Configuration . . . . .	17
Set Default Configuration File . . . . .	18
Set Default Configuration . . . . .	20
Adapter NPAR Configuration . . . . .	21
Get NPAR Configuration . . . . .	21
Set NPAR Port Configuration . . . . .	23
Set NPAR Function Configuration . . . . .	25
Set NPAR Configuration . . . . .	29
Adapter SR-IOV Configuration . . . . .	31
Get SR-IOV Information . . . . .	31
Set SR-IOV File . . . . .	32
Set SR-IOV . . . . .	35
Adapter VPD . . . . .	36
Get VPD . . . . .	36
Adapter Port Mode Configuration . . . . .	38
Get Port Mode Configuration . . . . .	38
Set Port-Mode Configuration . . . . .	39
Adapter QinQ Configuration . . . . .	40
Get QinQ Configuration . . . . .	41
Set QinQ Port Configuration . . . . .	43
Set QinQ Function Configuration . . . . .	45
Set QinQ Configuration . . . . .	47
Adapter Port Namespace Commands and Sub-namespaces . . . . .	49
Adapter Port List . . . . .	50
Adapter Port Information . . . . .	51
Get Port Information . . . . .	51
Adapter Port FCoE Boot Configuration (3400/8400 Series) . . . . .	52
Get FCoE Boot Configuration . . . . .	53
Set FCoE Boot Configuration General Parameters . . . . .	54
Set FCoE Boot Configuration Target Parameters . . . . .	56
Set FCoE Boot Configuration . . . . .	58
Adapter Port FCoE Boot Configuration (41000/45000 Series) . . . . .	60
Get FCoE Boot Configuration . . . . .	60
Set FCoE Boot Configuration General Parameters . . . . .	62
Set FCoE Boot Configuration Target Parameters . . . . .	63
Set FCoE Boot Configuration . . . . .	65

Adapter Port iSCSI Boot Configuration (3400/8400 Series) . . . . .	66
Get iSCSI Boot Configuration . . . . .	67
Set iSCSI Boot Configuration General Parameters . . . . .	69
Set iSCSI Boot Configuration Initiator Parameters . . . . .	71
Set iSCSI Boot Configuration Target Parameters . . . . .	74
Set iSCSI Boot Configuration MPIO Parameters . . . . .	77
Set iSCSI Boot Configuration . . . . .	79
Adapter Port iSCSI Boot Configuration (41000/45000 Series) . . . . .	81
Get iSCSI Boot Configuration . . . . .	82
Set iSCSI Boot Configuration General Parameters . . . . .	83
Set iSCSI Boot Configuration Initiator Parameters . . . . .	86
Set iSCSI Boot Configuration Target Parameters . . . . .	89
Set iSCSI Boot Configuration . . . . .	91
Adapter Port MBA Boot Configuration Namespace Commands and Sub-namespaces . . . . .	93
Get MBA Boot Configuration . . . . .	94
Set MBA Boot Configuration . . . . .	95
Adapter Port Diagnostics Namespace Commands and Sub-namespaces . . . . .	97
Run Port Diagnostics Test . . . . .	97
Adapter Port DCBX Namespace Commands and Sub-namespaces . . . . .	98
Get DCBX Port Information . . . . .	98
Adapter Port Link Settings (SmartAN) Namespace Commands and Sub-namespaces . . . . .	100
Get Port Link Settings Information . . . . .	101
Set Port Link Settings Information . . . . .	101
Adapter Port DMI Namespace Commands and Sub-namespaces . . . . .	103
Get Port DMI Information . . . . .	103
Adapter NIC Namespace Commands and Sub-namespaces . . . . .	108
List NIC Ports . . . . .	108
Adapter NIC Information . . . . .	109
Get NIC Information . . . . .	109
Adapter NIC Statistics . . . . .	110
Get NIC Statistics . . . . .	110
Adapter NIC Advanced Parameters Namespace Commands and Sub-namespaces . . . . .	111
Get NIC Advanced Parameter Information . . . . .	112
Set NIC Advanced Parameter Information . . . . .	113

Adapter FCoE Namespace Commands and Sub-namespaces . . . . .	114
List FCoE Ports . . . . .	114
Adapter FCoE Info Namespace Commands and Sub-namespaces . .	115
Get FCoE Information. . . . .	115
Adapter FCoE VN_Port Namespace Commands and Sub-namespaces	116
List VN_Ports . . . . .	116
Adapter FCoE VN_Port Info Namespace Commands and Sub-namespaces . . . . .	117
Get FCoE VN_Port Info . . . . .	117
View FCoE VN_Port Statistics . . . . .	118
Get FCoE VN_Port Statistics . . . . .	118
Adapter FCoE Target Namespace Commands and Sub-namespaces	119
List FCoE Targets . . . . .	120
Adapter FCoE Target Information Namespace Commands and Sub-namespaces . . . . .	120
Get FCoE Target Information . . . . .	120
Adapter FCoE LUN Namespace Commands and Sub-namespaces .	121
List FCoE LUNs . . . . .	122
Adapter FCoE LUN Info Namespace Commands and Sub-namespaces	122
Get FCoE LUN Information . . . . .	123
Adapter iSCSI Namespace Commands and Sub-namespaces . . . . .	123
List iSCSI Ports . . . . .	124
Adapter iSCSI Info Namespace Commands and Sub-namespaces . .	124
Get iSCSI Info. . . . .	125
Adapter iSCSI Portal Namespace Commands and Sub-namespaces	126
List iSCSI Portals . . . . .	127
iSCSI Portal Info . . . . .	127
Get iSCSI Portal Info . . . . .	127
Adapter iSCSI Target Namespace Commands and Sub-namespaces	130
List iSCSI Targets . . . . .	130
Adapter iSCSI Target Info Namespace Commands and Sub-namespaces . . . . .	131
Get iSCSI Target Info . . . . .	131
Adapter iSCSI LUN Namespace Commands and Sub-namespaces .	132
List iSCSI LUNs . . . . .	133
Adapter iSCSI LUN Info Namespace Commands and Sub-namespaces . . . . .	133
Get iSCSI LUN Info . . . . .	133

<b>4</b>	<b>Fibre Channel CLI Command Extensions</b>	
	Extension Command Format . . . . .	136
	Usage Guidelines . . . . .	136
	Syntax . . . . .	136
	Format . . . . .	137
	Extension Module Functional Specification . . . . .	138
	QCC Namespace-level Commands and Sub-namespaces . . . . .	138
	Adapter Namespace Commands and Sub-namespaces . . . . .	139
	List Adapters . . . . .	139
	Update Adapters . . . . .	140
	Adapter Information . . . . .	141
	Get Adapter Information . . . . .	142
	Adapter Personality . . . . .	143
	Get Adapter Personality . . . . .	143
	Set Adapter Personality . . . . .	144
	Adapter Flash Information . . . . .	145
	Get Adapter Flash Information . . . . .	146
	Adapter Port Namespace Commands and Sub-namespaces . . . . .	147
	Adapter Port List . . . . .	149
	Adapter Port Update NVRAM . . . . .	149
	Adapter Port Information . . . . .	150
	Get Port Information . . . . .	150
	Adapter Port Statistics . . . . .	152
	Get Port Statistics . . . . .	152
	Reset Port Statistics . . . . .	154
	Adapter Port SFP DMI Information . . . . .	155
	Get Port SFP DMI Information . . . . .	155
	Get Port Raw SFP DMI Information . . . . .	162
	Adapter Port VPD Information . . . . .	163
	Get Port VPD . . . . .	163
	Adapter Port HBA Parameters Configuration . . . . .	164
	Get Port HBA Parameters . . . . .	165
	SetFile Port HBA Parameters . . . . .	166
	Set Port HBA Parameters . . . . .	169
	Restore Default Port HBA Parameters . . . . .	170
	Save Port HBA Parameters . . . . .	171

Adapter Port Buffer-To-Buffer Credit Recovery Configuration . . . . .	172
Get Port BBCR Configuration . . . . .	172
SetFile Port BBCR Configuration . . . . .	173
Set Port BBCR Configuration . . . . .	174
Adapter Port Forward-Error-Correction Configuration . . . . .	175
Get Port FEC Configuration . . . . .	176
Set Port FEC Configuration . . . . .	176
Adapter Port Boot Configuration . . . . .	177
Get Port Boot Configuration . . . . .	178
SetFile Port Boot Configuration . . . . .	180
Set Port Boot Configuration . . . . .	183
Adapter Port Boot Configuration (Extended) . . . . .	185
Get Port Boot Configuration (Extended) . . . . .	186
SetFile Port Boot Configuration (Extended) . . . . .	190
Set Port Boot Configuration (Extended) . . . . .	195
Adapter Port Firmware Dump Information . . . . .	198
Get Port Firmware Dump Information . . . . .	199
Adapter Port Beacon Configuration . . . . .	199
Get Port Beacon Configuration . . . . .	200
Set Port Beacon Configuration . . . . .	200
Adapter Port Diagnostics (DPort) Configuration . . . . .	201
Get DPort Configuration . . . . .	202
Set DPort Configuration . . . . .	202
Run DPort Diagnostics . . . . .	203
Adapter Port Common Pass-thru (CT) Diagnostics . . . . .	205
Run Port CT Diagnostics . . . . .	205
Adapter Port Echo ELS Diagnostics . . . . .	206
Run Port Fibre Channel Echo ELS Diagnostics . . . . .	207
Adapter Port Ping Diagnostics . . . . .	208
Run Port Fibre Channel Ping Diagnostics . . . . .	209
Adapter Port Read Port Diagnostics (RDP) Information . . . . .	210
Get Read Port Diagnostics Information . . . . .	210
Adapter Port Loopback Diagnostics . . . . .	214
Run Port Loopback Diagnostics . . . . .	214
Adapter Port Read and Write Buffer Diagnostics . . . . .	216
Run Port Read and Write Buffer Diagnostics . . . . .	216
Adapter Port Universal SAN Congestion Mitigation Status . . . . .	218
Get Initiator Port USCM Status . . . . .	218



Adapter Port Universal SAN Congestion Mitigation Statistics . . . . .	221
Get Initiator Port USCM Statistics . . . . .	222
Clear Initiator Port and Connected Targets USCM Statistics . . . . .	225
Adapter Port Universal SAN Congestion Mitigation Profile . . . . .	226
Get Port Universal SAN Congestion Mitigation Profile . . . . .	226
Set Port Universal SAN Congestion Mitigation Profile . . . . .	227
Adapter Target Namespace Commands and Sub-namespaces . . . . .	230
Adapter Target List . . . . .	231
Adapter Target Information . . . . .	232
Get Target Information . . . . .	232
Adapter Target Universal SAN Congestion Mitigation Status . . . . .	234
Get Target USCM Status . . . . .	234
Adapter Target Universal SAN Congestion Mitigation Statistics . . . . .	236
Get Target USCM Statistics . . . . .	237
Adapter Target iiDMA Configuration . . . . .	240
Get Target iiDMA Configuration . . . . .	240
Set Target iiDMA Configuration. . . . .	241
Target Link Statistics . . . . .	242
Get Target Link Statistics . . . . .	243
Adapter LUN Namespace Commands and Sub-namespaces . . . . .	244
Adapter LUN List . . . . .	244
Adapter LUN Information. . . . .	245
Get LUN Information. . . . .	245

## **A**      **Revision History**

## List of Figures

Figure		Page
2-1	Installing Marvell ESXCLI VMware Plug-in for Fibre Channel and Ethernet . . . . .	2
3-1	ESXCLI Extension Module Flow Chart . . . . .	7

## List of Tables

<b>Table</b>		<b>Page</b>
4-1	USCM Initiator Port Status . . . . .	219
4-2	USCM Initiator Port Congestion Mitigation Statistics . . . . .	224
4-3	USCM Adapter Port Profiles . . . . .	228
4-4	USCM Target Port Status . . . . .	236
4-5	USCM Target Port Congestion Mitigation Statistics . . . . .	238

# Preface

This user's guide provides information on installing and using the Marvell® ESXCLI VMware® Plug-in. The ESXCLI plug-in extends the capabilities of the ESX® command line interface to manage the following adapters installed in VMware ESX/ESXi hosts.

- Marvell FastLinQ® 3400/8400 (578xx-based), 41000, and 45000 Series Ethernet Adapters
- Marvell QLogic® 2500/2600/2700/2800 Series Fibre Channel Adapters

These adapters are collectively referred to as *Marvell Adapters* throughout this guide.

## Intended Audience

This guide is intended for use by administrators who are planning to deploy or have deployed one of the supported Marvell adapters in their VMware ESX/ESXi environments.

## What Is in This Guide

This user's guide contains information you need to install and use the Marvell ESXCLI VMware Plug-in. This preface explains the purpose of the plug-in, identifies this guide's intended audience, describes the typographic conventions used in this guide, refers you to the license agreements, and provides technical support and contact information.

The remainder of this user's guide is organized into the following chapters:

- [Chapter 1 Introduction](#) provides the hardware and software required for using the Marvell ESXCLI VMware Plug-in.
- [Chapter 2 Installation, Update, and Removal](#) provides instructions for installing, updating, and removing the Marvell ESXCLI VMware Plug-in on VMware ESX/ESXi.
- [Chapter 3 Ethernet CLI Command Extensions](#) describes the functions of the various software components added to extend the capabilities of the Marvell ESXCLI VMware Plug-in software for Marvell Adapters.

- [Chapter 4 Fibre Channel CLI Command Extensions](#) describes the functions of the various software components added to extend the capabilities of the Marvell ESXCLI VMware Plug-in software for Marvell Adapters.
- [Appendix A Revision History](#) contains a list of changes made to this guide since the last revision.

At the end of this guide is an index to help you quickly locate the information you need.

## Related Materials

For information about downloading documentation from the Marvell Web site, see [“Downloading Updates and Documentation” on page xv](#).

## Documentation Conventions

This guide uses the following documentation conventions:

- **NOTE** provides additional information.
- **CAUTION** without an alert symbol indicates the presence of a hazard that could cause damage to equipment or loss of data.
- Text in [blue](#) font indicates a hyperlink (jump) to a figure, table, or section in this guide, and links to Web sites are shown in [underlined blue](#). For example:
  - ❑ [Table 9-2](#) lists problems related to the user interface and remote agent.
  - ❑ See [“Installation Checklist” on page 3-6](#).
  - ❑ For more information, visit [www.marvell.com](http://www.marvell.com).
- Text in **bold** font indicates user interface elements such as a menu items, buttons, check boxes, or column headings. For example:
  - ❑ Click the **Start** button, point to **Programs**, point to **Accessories**, and then click **Command Prompt**.
  - ❑ Under **Notification Options**, select the **Warning Alarms** check box.
- Text in `Courier` font indicates a file name, directory path, or command line text. For example:
  - ❑ To return to the root directory from anywhere in the file structure:  
Type `cd /root` and press ENTER.
  - ❑ Issue the following command: `sh ./install.bin`

- Key names and key strokes are indicated with UPPERCASE:
  - Press CTRL+P.
  - Press the UP ARROW key.
- Text in *italics* indicates terms, emphasis, variables, or document titles. For example:
  - For a complete listing of license agreements, refer to the applicable *Software End User License Agreement*.
  - What are *shortcut keys*?
  - To enter the date type *mm/dd/yyyy* (where *mm* is the month, *dd* is the day, and *yyyy* is the year).
- Topic titles between quotation marks identify related topics either within this guide or in the online help, which is also referred to as *the help system* throughout this document.
- Command line interface (CLI) command syntax conventions include the following:
  - Plain text indicates items that you must type as shown. For example:
    - `qaucli -pr nic -ei`
  - `< >` (angle brackets) indicate a variable whose value you must specify. For example:
    - `<serial_number>`

---

#### NOTE

For CLI commands only, variable names are always indicated using angle brackets instead of *italics*.

---

- `[ ]` (square brackets) indicate an optional parameter. For example:
  - `[<file_name>]` means specify a file name, or omit it to select the default file name.
- `|` (vertical bar) indicates mutually exclusive options; select one option only. For example:
  - `on|off`
  - `1|2|3|4`

- ❑ . . . (ellipsis) indicates that the preceding item may be repeated. For example:
  - $x \dots$  means *one* or more instances of  $x$ .
  - $[x \dots]$  means *zero* or more instances of  $x$ .
- ❑ Vertical ellipses within command example output indicate where portions of repetitious output data have been intentionally omitted.
- ❑ ( ) (parentheses) and { } (braces) are used to avoid logical ambiguity. For example:
  - $a|b\ c$  is ambiguous
  - $\{(a|b)\ c\}$  means  $a$  or  $b$ , followed by  $c$
  - $\{a|(b\ c)\}$  means either  $a$ , or  $b\ c$

## Technical Support

Customers should contact their authorized maintenance provider for technical support of their Marvell QLogic and FastLinQ products.

## Downloading Updates and Documentation

The Marvell Web site provides periodic updates to product firmware, software, and documentation.

### To download firmware, software, and documentation:

1. Go to [www.marvell.com](http://www.marvell.com).
2. Click **Support**, and then under **Tools & Resources**, click **Driver Downloads**.
3. In the Marvell Drivers window:
  - a. (MUST) Under CATEGORY, select either FIBRE CHANNEL ADAPTERS or CONVERGED NETWORK ADAPTERS.
  - b. (optional) Under PLATFORM/OS, select the platform/OS that matches your system.
  - c. (optional) Under PART NUMBER, select the part number for your adapter.
  - d. (optional) Under KEYWORDS, type a keyword describing what you are looking for.
4. Click **Apply**.

5. Locate the firmware (boot code), software (drivers, management tools), or document (documentation for user's guides) you need, and then do one of the following:
  - a. Click the [blue](#) text in the DESCRIPTION column.
  - b. Click the arrow in the DOWNLOAD column.

---

**NOTE**

Marvell recommends downloading the associated Read Me and Release Notes for more information. To find them, enter either **Read Me** or **Release Notes** in the KEYWORDS search box.

---

A message may appear asking you to review and accept the Marvell Limited Use License Agreement.

6. If applicable, read the agreement, select the check box, and then click **I ACCEPT** to accept the end license agreement and start the download.



# 1 Introduction

This chapter provides the hardware and software required for using the Marvell ESXCLI VMware Plug-in.

## Hardware Requirements

The Marvell ESXCLI VMware Plug-in requires a VMware ESX/ESXi server with one or more of the following installed:

- Marvell FastLinQ 3400/8400 (578xx-based), 41000, 45000 Series Ethernet Adapters
- Marvell QLogic 2500/2600/2700/2800 Series Fibre Channel Adapters

## Software Requirements

The VMware ESX/ESXi server requires one of the following VMware vSphere® ESX/ESXi versions:

- 7.0 or later
- 8.0 or later

For remote operation, install the VMware vSphere CLI software on the local workstation. For more information about obtaining, installing, and operating the VMware software, see the VMware documentation for your system.

## User Privilege Requirements


Root privileges are required on the ESX/ESXi server to install the Marvell ESXCLI VMware Plug-in, and optionally, the VMware vSphere CLI for remote plug-in operation.

# 2 Installation, Update, and Removal

## Overview

The Marvell ESXCLI VMware Plug-in comes as a vSphere installation bundle (VIB) file. The VIB file contains the set of files and binaries required to install the provider on VMware ESX/ESXi. The `offline-bundle.zip` file contains the VIB and the necessary metadata to install the plug-in on VMware ESX/ESXi.

The Marvell ESXCLI VMware Plug-in installation has CLI stacked components, which differ for Fibre Channel and Ethernet, as shown in [Figure 2-1](#) and described in the following paragraphs.

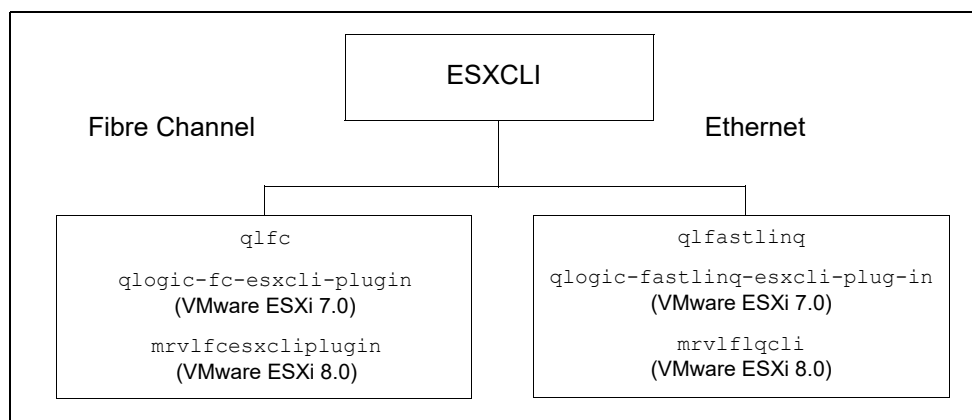

**Figure 2-1. Installing Marvell ESXCLI VMware Plug-in for Fibre Channel and Ethernet**

### Fibre Channel

- ESXCLI Namespace: `qlfc`
  - ❑ VIB package `qlogic-fc-esxcli-plugin` (ESXi 7.0)
  - ❑ VIB package `mrvlfcexcliplugin` (ESXi 8.0)

### Ethernet

- ESXCLI Namespace: qlfastlinq
  - ❑ VIB package qllogic-fastlinq-esxcli-plugin (ESXi 7.0)
  - ❑ VIB package mrvlflqcli (ESXi 8.0)

## Installing the Marvell ESXCLI VMware Plug-in

### To install the Marvell ESXCLI VMware Plug-in:

1. Download the Marvell ESXCLI VMware Plug-in from the Marvell Web site:  
[www.Marvell.com](http://www.Marvell.com)  
For instructions, see “Downloading Updates and Documentation” on page xv.
2. Copy the appropriate file into a directory on the ESXi server. Following are example file names.
  - ❑ Fibre Channel Adapters  
MRVL-QLogic-FC-Esxcli-Plugin\_<Version>-1OEM.700.  
1.0.15843807\_<number>.zip (VMware ESXi 7.0) or  
MRVL-QLogic-FC-ESXCLI-Plugin\_<Version>-1OEM.800.1.0.20143090\_  
<number>.zip (VMware 8.0)
  - ❑ Ethernet Adapters  
qllogic-fastlinq-esxcli-plugin.zip
3. Issue the appropriate command, where <dir> is the directory in which the plug-in zip file resides.
  - ❑ Fibre Channel and Ethernet Adapters

```
# esxcli software vib install -d  
/<path-to-package>/<package-name-zip-file>  
(All VMware ESXi OSs) or  
  
# esxcli software component apply -d  
/<path-to-package>/<package-name-zip-file>  
(VMware ESXi 7.0 and later)
```
4. Reboot the system.

## Updating the Marvell ESXCLI VMware Plug-in

### To update the Marvell ESXCLI VMware Plug-in:

1. Remove the existing installation (see [“Removing the Marvell ESXCLI VMware Plug-in”](#) on page 4).
2. Download and install the new version (see [Installing the Marvell ESXCLI VMware Plug-in](#)).

## Removing the Marvell ESXCLI VMware Plug-in

### To remove the Marvell ESXCLI VMware Plug-in:

1. Find the name of the plug-in by issuing one of the following commands to show the VIB or component list:

```
# esxcli software vib list  
(All VMware ESXi OSs) or
```

```
# esxcli software component list  
(VMware ESXi 7.0 and later)
```

The `component list` command output indicates either `MRVL-FastlinQ-Esxcli-Plugin` for Ethernet adapters or `MRVL-QLogic-FC-Esxcli-Plugin` for Fibre Channel adapters

2. Using the name that you found in [Step 1](#) (`qlogic-fastlinq-esxcli-plugin`, `qlogic-fc-esxcli-plugin`, or `mrvlfcexcliplugin`), issue the appropriate command to remove the Marvell ESXCLI VMware Plug-in:

❑ Fibre Channel Adapters

```
# esxcli software vib remove --vibname qlogic-fc-esxcli-plugin -f  
(VMware ESXi 7.0) or
```

```
# esxcli software component remove -n  
MRVL-QLogic-FC-Esxcli-Plugin  
(VMware ESXi 7.0 and later) or
```

```
# esxcli software vib remove --vibname mrvlfcexcliplugin -f  
(VMware ESXi 8.0)
```

❑ Ethernet Adapters

```
# esxcli software vib remove --vibname  
qlogic-fastlinq-esxcli-plugin -f  
(VMware ESXi 7.0) or
```

```
# esxcli software component remove -n  
MRVL-FastlinQ-Esxcli-Plugin  
(VMware ESXi 7.0 and later) or
```

```
# esxcli software vib remove --vibname mrvlflqcli -f  
(VMware ESXi 8.0 )
```


# 3 Ethernet CLI Command Extensions

This chapter describes the functions of the various software components added to extend the capabilities of the Marvell ESXCLI VMware Plug-in software for the Marvell FastLinQ Ethernet Adapters.

Sections provided in this chapter include the following:

- [“Extending ESXCLI Commands” on page 7](#)
- [“Extension Command Format” on page 8](#)
- [“Extension Module Functional Specification” on page 9](#)
- [“QCC Namespace-level Commands and Sub-namespaces” on page 10](#)
- [“Namespace Commands and Sub-namespaces” on page 10](#)
- [“Adapter Port Namespace Commands and Sub-namespaces” on page 49](#)
- [“Adapter NIC Namespace Commands and Sub-namespaces” on page 108](#)
- [“Adapter FCoE Namespace Commands and Sub-namespaces” on page 114](#)
- [“Adapter iSCSI Namespace Commands and Sub-namespaces” on page 123](#)

Figure 3-1 shows the Marvell ESXCLI extension module block diagram.

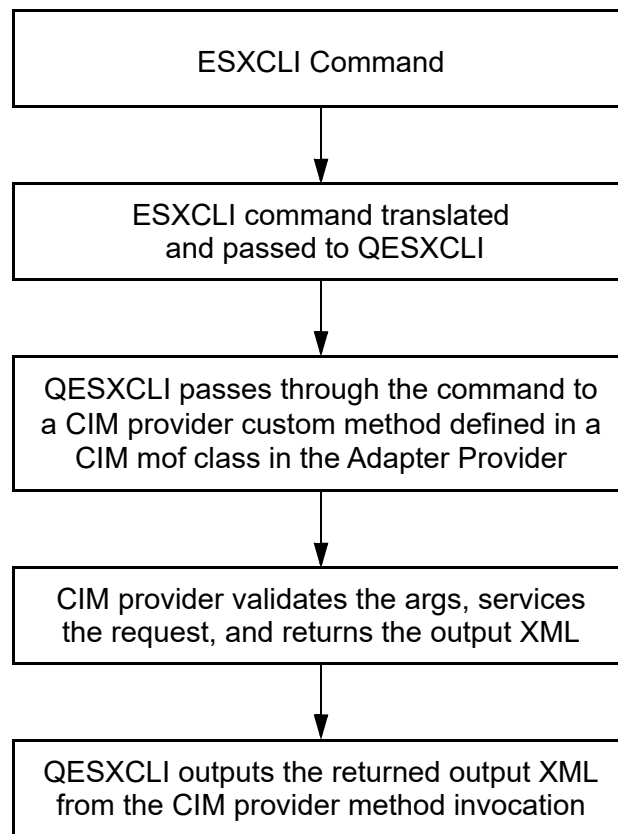

**Figure 3-1. ESXCLI Extension Module Flow Chart**

## Extending ESXCLI Commands

The ESXCLI command line tool infrastructure allows ESXi to provide an extensible set of commands. The ESXCLI infrastructure builds each ESXCLI command using metadata that describe the input, output, and other properties for that command. Using the metadata, the infrastructure builds a set of commands that users can execute on a local or remote prompt. The Marvell ESXCLI VMware Plug-in extension is a wrapper around a standard command line executable.

The ESXCLI infrastructure presents ESXCLI commands on a local or remote prompt. Users can execute commands using predefined command line options. All Marvell ESXCLI VMware Plug-in commands are defined by metadata for input, output, and execution properties for that command. The infrastructure builds a full set of commands using the metadata for each command.

For details on how to extend ESXCLI commands, conventions, and guidelines, refer to the “Extending ESXCLI Commands Using the vCLI” section in the *VMware Host Extensions Developer’s Guide*. Access to this guide requires a VMware {code} login:

[https://vdc-repo.vmware.com/vmwb-repository/dcr/915b8e00-9d0d-4ca5-ab50-de4b6ece4067/fbd6c4c0-cbb0-4e39-b97d-7e5e616b2066/HostExtensionsDevGuide.pdf?vdcDownload=1412034785\\_274c3924a6a76a77c987cb3ebdcaca28](https://vdc-repo.vmware.com/vmwb-repository/dcr/915b8e00-9d0d-4ca5-ab50-de4b6ece4067/fbd6c4c0-cbb0-4e39-b97d-7e5e616b2066/HostExtensionsDevGuide.pdf?vdcDownload=1412034785_274c3924a6a76a77c987cb3ebdcaca28)

## Extension Command Format

The ESXCLI commands are organized as a hierarchy of *namespaces*. If you are a VMware partner, and you are creating your own ESXCLI commands, organize the commands in a consistent, logical manner to improve usability of your own commands and of ESXCLI as a whole.

### Syntax

ESXCLI commands in this chapter have the following syntax:

```
esxcli [dispatcher options] <namespace1 [namespace2] ...>  
<command> [input parameters]
```

- **Dispatcher options.** Predefined options for connection information such as target host, user name, and so on. Extension developers have no control over dispatcher options and do not need to be concerned about them.
- **Namespace.** Organizational structure that groups a quantity of ESXCLI objects. One namespace is required; additional namespaces are possible.

Examples of namespaces include:

- ❑ `nmp`  
VMware native multipathing commands.
- ❑ `swiscsi`  
Commands in the software iSCSI namespace.
- ❑ `corestorage`  
VMware core storage commands.
- **Command.** The command reports on or modifies the state on the system. Commands are the leaf nodes in the ESXCLI syntax. Commands are the verbs that act on the objects defined by the namespaces.
- **Input parameters.** Multiple input parameters are supported.



All ESXCLI commands in this section have examples of command usage with both a local host and a remote host. The remote host in the examples has the following credentials:

- IP address: 172.27.9.144
- Password: password
- User name: root

## Format

For a local host, command syntax is as follows:

```
esxcli qlfastlinq qcc <namespace> <command> <options>
```

For a remote host, the command syntax is as follows:

```
esxcli --server <ip_address> --username <username> --password  
<password> qlfastlinq qcc namespace [command] [options]
```

where `<ip_address>`, `<username>`, and `<password>` are the IP address and credentials for the remote host. The keywords `--server`, `--username`, and `--password` can be abbreviated `-s`, `-u`, and `-p` respectively.

To obtain detailed information for a specific command, type the command without arguments or with the `--help` option.

---

### NOTE

For remote operation, the VMware vSphere CLI software must be installed on the local workstation. For more information about obtaining, installing, and operating the VMware software, see the VMware documentation for your system.

---

## Extension Module Functional Specification

QESXCLI is the standard command line executable module invoked by the Marvell ESXCLI VMware Plug-in plug-in extension wrapper. The QESXCLI command line executable module supports multiple sets of input arguments for different commands and produces XML output for the Marvell ESXCLI VMware Plug-in extension wrapper to consume.

The non-interactive commands that are supported by QESXCLI must be published to the ESXCLI plug-in extension wrapper using an extension XML file that adheres to the metadata specification. Together, the QESXCLI and the extension XML file enable users to view and execute commands through ESXCLI (both locally as well as remotely). All of the commands are published as part of the `qlfastlinq.qcc` sub-namespace (ESXCLI namespace).

## QCC Namespace-level Commands and Sub-namespaces

At the top-most level—the Marvell QConvergeConsole® (QCC) namespace level—the following commands and sub-namespaces are exposed:

```
~ # esxcli qlfastling qcc
```

### Syntax

```
esxcli qlfastling qcc {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
adapter	QCC CLI for operations on adapters
fcoe	QCC CLI for operations on FCoE functions
iscsi	QCC CLI for operations on iSCSI functions
nic	QCC CLI for operations on NIC functions
port	QCC CLI for operations on port functions

## Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc adapter
```

### Syntax

```
esxcli qlfastling qcc adapter {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
defCfg	QCC CLI for adapter default configuration information
info	QCC CLI for adapter information
mode	QCC CLI for adapter mode information
nparCfg	QCC CLI for adapter NPAR information
portmode	QCC CLI for splitting the adapter in various port modes
qinq	QCC CLI for VLAN QinQ information
sriov	QCC CLI for adapter SR-IOV information
vpd	QCC CLI for VPD information

## Available Commands

`list`

Lists identifiers for the Marvell Adapters discovered on the host. See [List Adapters](#).

`update`

Updates the flash on a Marvell Adapter. See [Update Adapters](#).

## List Adapters

To list all supported 3400/8400 Series and 41000/45000 Series Adapters, issue the `list` command as follows on the local host:

```
~ # esxcli qlfastlinq qcc adapter list
```

The following example shows the `list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter list
```

The output for both commands is:

```
Adapters  
-----  
Adapter_17_0  
Adapter_27_0
```

The output contains the PCI bus and device number in decimal format as part of the adapter identifier.

## Update Adapters

To update the flash on a Marvell Adapter, issue the `adapter update` command as follows:

```
~ # esxcli qlfastling qcc adapter update
```

### Syntax

```
esxcli qlfastling qcc adapter update [cmd options]
```

### Keywords

- `-f|--flashfile <str>` = Flash file (required)
- `-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter update` command on a local host:

```
~ # esxcli qlfastling qcc adapter update -i Adapter_10_0 -f /scratch/dell_ah_100020.bin
```

The flash file must be on the remote host before issuing the `adapter update` command as described in the following steps.

1. Determine the name of the volume on the remote host in which to store the flash file. You will use the volume name and VMFS UUID in subsequent steps.

```
# esxcli -s 172.27.9.144 -u root -p password storage vmfs extent list
```

Volume Name	VMFS UUID	Extent Number	Device Name
datastore1 (3)	4d435b11-2d3d0b17-a566-000af73e458c		0

2. Create a temporary directory on the remote host in which to store the flash file using the name of the volume that you obtained in [Step 1](#). The following command creates a directory called `tmp` on the volume `datastore1 (3)`. You will specify this directory when you update the flash in [Step 4](#).

```
# vifs.pl --server 172.27.9.144 --username root --password password --mkdir "[datastore1 (3)] tmp"
```

3. Upload the flash file to the remote host.

```
# vifs.pl --server 172.27.9.144 --username root --password password --put ql_mbi_8712.bin "[datastore1 (3)] tmp/ql_mbi_8712.bin"
```

4. Update the adapter flash on the remote host. The flash file path is indicated in `/vmfs/volumes/<vmfs_uuid>/tmp/ql_mbi_8712.bin`, where the value for `<vmfs_uuid>` comes from [Step 1](#).

The following example shows the `adapter update` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter  
update -i Adapter_10_0 -f /vmfs/volumes/  
4d435b11-2d3d0b17-a566-000af73e458c/tmp/dell_ah_100020.bin
```

The output for both commands is:

```
Message: Success  
Reboot Required: true
```

## Adapter Information

To obtain information about a specific Marvell Adapter, issue the `info` command as follows:

```
~ # esxcli qlfastling qcc adapter info
```

### Syntax

```
esxcli qlfastling qcc adapter info {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the adapter. See [Get Adapter Information](#).

## Get Adapter Information

To obtain information about a Marvell Adapter, issue the `get` command as follows:

```
~# esxcli qlfastling qcc adapter info get
```

### Syntax

```
esxcli qlfastling qcc adapter info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter info get` command on a local host:

```
~# esxcli qlfastling qcc adapter info get -i Adapter_17_0
```

The following example shows the `adapter info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter  
info get -i Adapter_17_0
```

The output for both commands is:

Adapter Information:

General Parameters:

```
Asic Version: QL41401S A2  
Bus Width: PCI-E (8X)  
Description: HPE StoreFabric CN1300R 10/25Gb CNA  
Device Id: 0x8070  
Fw Versions: Bootcode Version:8.37.6.0,  
PXE Boot Version:PCI30 MBA 2.0.18;EFI x64 4.1.5.6,  
MBI Version:8.37.7  
Manufacturer: QLogic Corporation  
Port Mode: NA  
Serial Number: REE1740B20939  
Subsystem Device Id: 0x21b  
Subsystem Vendor Id: 0x1590  
Temperature In Celsius: 63  
Title: HPE StoreFabric CN1300R 10/25Gb CNA  
Vendor Id: 0x1077
```

Message: Success

## Adapter Mode

To display and set the adapter's current mode (Single-Function or Multi-Function), issue the `adapter mode namespace` command as follows:

```
~# esxcli qlfastlinq qcc adapter mode
```

### Syntax

```
esxcli qlfastlinq qcc adapter mode {cmd} [cmd options]
```

### Available Commands

`get`

Shows mode information for the specified Marvell Adapter. See [Get Adapter Mode](#).

`set`

Sets the mode for the specified Marvell Adapter. See [Set Adapter Mode](#).

## Get Adapter Mode

To read the mode of a Marvell Adapter, issue the `adapter mode get` command as follows:

```
~# esxcli qlfastling qcc adapter mode get
```

### Syntax

```
esxcli qlfastling qcc adapter mode get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter mode get` command on a local host:

```
~# esxcli qlfastling qcc adapter mode get -i Adapter_17_0
```

The following example shows the `adapter mode get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter mode get -i Adapter_17_0
```

The output for both commands is:

```
Message: Success
      Mode: Single-Function
```

## Set Adapter Mode

To set the mode of a Marvell Adapter to Single-Function or Multi-Function, issue the `adapter mode set` command as follows:

```
~# esxcli qlfastling qcc adapter mode set
```

### Syntax

```
esxcli qlfastling qcc adapter mode set [cmd options]
```

## Keywords

- e|--ep-mode<str> = EP mode (Dell® 41000/45000 Series adapters only)
- i|--identifier<str> = Adapter identifier (required)
- m|--mode<str> = Adapter mode (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Adapter identifier from the adapter list command
mode	Single-Function, Multi-Function, or UFP. UFP mode is supported on selected IBM and Lenovo 3400/8400 Series Adapters.
ep-mode	Enabled, Disabled (for Dell 41000/45000 Series Adapters only)

## Example

The following example shows the `adapter mode set` command on a local host:

```
~# esxcli qlfastling qcc adapter mode set -i Adapter_17_0 -m Single-Function
```

The following example shows the `adapter mode set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter mode set -i Adapter_17_0 -m Single-Function
```

The output for both commands is:

```
Message: Success
  Mode: Single-Function
  Reboot Required: true
```

The command output shows the new setting, which will be active after reboot.

## Adapter Default Configuration

To display adapter data and change adapter protocol settings when the mode is set to Single-Function, issue the `adapter defCfg` namespace command:

```
~# esxcli qlfastling qcc adapter defCfg
```

### Syntax

```
esxcli qlfastling qcc adapter defCfg {cmd} [cmd options]
```

### Available Commands

get

Shows default configuration information for the specified Marvell Adapter. See [Get Default Configuration](#).



`setFile`  
Sets default configuration information for the specified Marvell Adapter in a file. See [Set Default Configuration File](#).

`set`  
Sets default configuration information for the specified Marvell Adapter using a cached file. See [Set Default Configuration](#).

## Get Default Configuration

To view default configuration data for a Marvell Adapter that is in Single-Function mode (Multi-Function mode is not supported), issue the `defCfg get` command as follows:

```
~# esxcli qlfastlinq qcc adapter defCfg get
```

### Syntax

```
esxcli qlfastlinq qcc adapter defCfg get [cmd options]
```

### Keywords

`-i|--identifier<str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter defCfg get` command on a local host:

```
~# esxcli qlfastlinq qcc adapter defCfg get -i Adapter_17_0
```

The following example shows the `adapter defCfg get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter defCfg get -i Adapter_17_0
```

The output for both commands is:

```
Default Configuration:
  Default Config:
    Port Config:
      Ethernet: Enabled
      Fcoe: Enabled
      Iscsi: Enabled
      Iwarp: NA
      Port Number: 0
      Roce: Disabled

  Ethernet: Enabled
```

```
Fcoe: Enabled
Iscsi: Enabled
Iwarp: NA
Port Number: 1
Roce: Disabled
Message: Supported Mode
Mode: Single-Function
```

## Set Default Configuration File

To save user-provided data in a temporary cache file for a Marvell Adapter that is in Single-Function mode (Multi-Function mode is not supported), issue the `adapter defCfg setFile` command as follows:

```
~# esxcli qlfastling qcc adapter defCfg setFile
```

The `setFile` command creates a cache file of the default configuration on the test system, which is used by the `set` command to save the setting in the flash.

### Syntax

```
esxcli qlfastling qcc adapter defCfg setFile [cmd options]
```

### Keywords

```
-f|--fcoe <str> = FCoE
-i|--identifier <str> = Adapter identifier (required).
-c|--iscsi <str> = iSCSI
-w|--iwarp <str> = Internet wide area RDMA protocol (iWARP) (for
41000/45000 Series adapters only; currently not
supported by VMware)
-r|--roce <str> = RDMA over Converged Ethernet (RoCE)
(for 41000/45000 Series adapters only)
-p|--port-number <long> = Port number (required)
```

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Adapter identifier from the <code>adapter list</code> command
<code>port-number</code>	Physical port number of the adapter: 0 for Single port 0-1 for Dual port 0-3 for Quad-Port

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
fcoe	Enabled, Disabled
iscsi	Enabled, Disabled
roce	Enabled, Disabled
iwarp	Enabled, Disabled

### Example

The following example shows the `adapter defCfg SetFile` command on a local host:

```
~# esxcli qlfastlinq qcc adapter defCfg setFile -i Adapter_17_0 -p 0 -f Enabled
```

The following example shows the `adapter defCfg SetFile` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter defCfg setFile -i Adapter_17_0 -p 0 -f Enabled
```

The output for both commands is:

```
Default Configuration:
  Default Config:
    Port Config:
      Ethernet: Enabled
      Fcoe: Enabled
      Iscsi: Enabled
      Iwarp: NA
      Port Number: 0
      Roce: Disabled

      Ethernet: Enabled
      Fcoe: Enabled
      Iscsi: Enabled
      Iwarp: NA
      Port Number: 1
      Roce: Disabled
Message: Supported Mode
  Mode: Single-Function
```

The command output includes a combination of the existing settings and the user-modified settings saved in the cache file.

## Set Default Configuration

The `adapter defCfg set` command sets user-provided or default configuration data from a temporary cache file to the flash when the adapter is in Single-Function mode (not supported in Multi-Function mode). This command fails if the cache file is not present. On successful completion, the `defCfg set` command cache file is deleted.

```
~# esxcli qlfastling qcc adapter defCfg set
```

### Syntax

```
esxcli qlfastling qcc adapter defCfg set [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter defCfg set` command on a local host:

```
~# esxcli qlfastling qcc adapter defCfg set -i Adapter_17_0
```

The following example shows the `adapter defCfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter defCfg set -i Adapter_17_0
```

The output for both commands is:

```
Default Configuration:
  Default Config:
    Port Config:
      Ethernet: Enabled
      Fcoe: Disabled
      Iscsi: Enabled
      Iwarp: NA
      Port Number: 0
      Roce: Enabled

    Ethernet: Enabled
    Fcoe: Enabled
    Iscsi: Enabled
    Iwarp: NA
    Port Number: 1
    Roce: Enabled
```

```
Message: Supported Mode  
Mode: Single-Function  
Reboot Required: true
```

The output shows the new setting, which becomes active after a reboot.

## Adapter NPAR Configuration

To display adapter data and change adapter function settings when the mode is set to Multi-Function (not supported in Single-Function mode), issue the `adapter nparCfg` namespace command:

```
~# esxcli qlfastlinq qcc adapter nparCfg
```

### Syntax

```
esxcli qlfastlinq qcc adapter nparCfg {cmd} [cmd options]
```

### Available Commands

`get`

Shows NPAR information for a specific Marvell Adapter. See [Get NPAR Configuration](#).

`setportcfg`

Sets NPAR port level configuration information for a specific Marvell Adapter in a file. See [Set NPAR Port Configuration](#).

`setfunccfg`

Sets NPAR function level configuration information for a specific Marvell Adapter in a file. See [Set NPAR Function Configuration](#).

`set`

Sets NPAR configuration for a specific Marvell Adapter. See [Set NPAR Configuration](#).

## Get NPAR Configuration

The `adapter nparCfg get` command displays data when the adapter is in Multi-Function mode (not supported in Single-Function mode). To get NPAR information about the specified Marvell Adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter nparCfg get
```

### Syntax

```
esxcli qlfastlinq qcc adapter nparCfg get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

## Example

The following example shows the `adapter nparCfg get` command on a local host:

```
~# esxcli qlfastling qcc adapter nparCfg get -i Adapter_16_0
```

The following example shows the `adapter nparCfg get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter nparCfg get -i Adapter_16_0
```

The output for both commands is:

Npar Configuration:

Message: Supported Mode

Mode: Multi Function

NPAR:

EPMode: Disabled

Functions:

Ethernet: Enabled

Fcoe: Disabled

Function Number: 0

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

Ethernet: Enabled

Fcoe: Disabled

Function Number: 1

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

.

.

```
.  
  
Ethernet: Enabled  
Fcoe: Disabled  
Function Number: 15  
Iscsi: Disabled  
Iwarp: Disabled  
Maximum Bandwidth: 100  
Relative Bandwidth Weight: 0  
Roce: Disabled  
Ports:  
Flow Control: Rx/Tx  
Port Number: 0  
  
Flow Control: Rx/Tx  
Port Number: 1
```

## Set NPAR Port Configuration

The adapter `nparCfg setportcfg` command saves user-provided port-level data in a temporary cache file when the adapter is in Multi-Function mode (not supported in Single-Function mode; that is, the system must be in NPAR mode). This cache file is used by the `set` command to save settings in the flash. To set NPAR port configuration information for a specified Marvell Adapter in a file, issue the following command:

```
~# esxcli qlfastlinq qcc adapter nparCfg setportcfg
```

### Syntax

```
esxcli qlfastlinq qcc adapter nparCfg setportcfg [cmd options]
```

### Keywords

```
-f|--flow-control <str> = Flow control  
-i|--identifier <str> = Adapter identifier (required)  
-p|--port-number <long> = Port number (required)
```

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
identifier	Adapter identifier from the adapter list command
port-number	Physical port number of the adapter: 0 for Single port 0-1 for Dual port 0-3 for Quad port
flow-control	Auto, Tx, Rx, Rx/Tx, Disabled

### Example

The following example shows the `adapter nparCfg setportcfg` command on a local host. This example sets the flow control value for port 0 of the adapter named `Adapter_16_0`.

```
~# esxcli qlfastling qcc adapter nparCfg setportcfg -i  
Adapter_16_0 -p 0 -f Rx/Tx
```

The following example shows the `adapter nparCfg setportcfg` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter  
nparCfg setportcfg -i Adapter_16_0 -p 0 -f Rx/Tx
```

The output for both commands is:

Npar Configuration:

Message: Supported Mode

Mode: Multi Function

NPAR:

EPMode: Disabled

Functions:

Ethernet: Enabled

Fcoe: Disabled

Function Number: 0

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

Ethernet: Enabled

Fcoe: Disabled

Function Number: 1

Iscsi: Disabled

Iwarp: Disabled



```
Maximum Bandwidth: 100
Relative Bandwidth Weight: 0
Roce: Disabled
.
.
.
Ethernet: Enabled
Fcoe: Disabled
Function Number: 15
Iscsi: Disabled
Iwarp: Disabled
Maximum Bandwidth: 100
Relative Bandwidth Weight: 0
Roce: Disabled
Ports:
Flow Control: Rx/Tx
Port Number: 0

Flow Control: Rx/Tx
Port Number: 1
```

The command output is a combination of existing settings and the user-modified settings saved in the cache file.

## Set NPAR Function Configuration

The adapter `nparCfg setfuncCfg` command saves user-provided function-level data in a temporary cache file when the adapter is in Multi-Function mode (not supported in Single-Function mode). This cache file is used by the `set` command to save settings in the flash. To set NPAR function configuration information on a specified Marvell Adapter in a file, issue the following command:

```
~# esxcli qlfastling qcc adapter nparCfg setfuncCfg
```

### Syntax

```
esxcli qlfastling qcc adapter nparCfg setfuncCfg [cmd options]
```

### Keywords

```
-e|--ethernet <str> = Ethernet
-f|--fcoe <str> = FCoE
-n|--function-number <long> = Function number (required)
-i|--identifier <str> = Adapter identifier (required)
-c|--iscsi <str> = iSCSI
```

-p|--iwarp <str> = iWARP (for 41000/45000 Series adapters)  
-r|--roce <str> = RDMA over Converged Ethernet (RoCE)  
(for 41000/45000 Series adapters)  
-w|--max-bw <long> = Maximum bandwidth  
-m|--min-bw <long> = Minimum bandwidth

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
identifier	Adapter identifier from the adapter <code>list</code> command
function-number	Function number of the adapter: 0-7 for 3400/8400 Series adapters. For more information, see <a href="#">Note 1</a> . 0-15 for 41000/45000 Series adapters. For more information, see <a href="#">Note 2</a> .
ethernet	Enabled, Disabled
iscsi	Enabled, Disabled
iwarp	Enabled, Disabled.
fcoe	Enabled, Disabled
roce	Enabled, Disabled
max-bw	Maximum bandwidth (0-100)
min-bw	Minimum bandwidth (0-100). For more information, see <a href="#">Note 3</a> .

### Note 1

The 3400/8400/57800-based adapters support up to 8 functions in NPAR mode (except for the single port 3441/57811-based adapters and quad port 57800-based adapters). These adapters do not support 16 functions in NPAReP mode.

The dual 1GbE and dual 10GbE port 57800-based adapters support functions 0-5, but the 1GbE partitions (functions 2-3) do not support the NPAR feature. The single port 3441/57811-based adapters support functions 0-3.

See also footnotes [1](#) and [2](#).

## Note 2

When the `Function-number` value is 0–15 (41000/45000 Series adapters):

- The 41000/45000 adapters support up to 8 functions in NPAR<sup>1</sup> mode; and up to 16 functions in NPAReP<sup>2</sup> mode.
- VMware ESXi 7.0 and later supports up to 16 physical (functions 0–15) per adapter.
- The single/dual/quad-port 41000 Series adapters<sup>1</sup> and dual/quad-port 45000 Series adapters<sup>1</sup> support values 0–7.
- The single-port 45000 Series adapters<sup>2</sup> support values 0, 2, 4, 6, 8, 10, 12, 14.
- The single-port 45000 Series adapters<sup>1</sup> support values 0, 2, 4, 6.
- The dual 1G-port and dual 10G-port based adapters<sup>1</sup> support values 0, 1, 4, 5. Functions 2 and 3 are the two fixed speed 1GbE RJ45 ports (which do not support the any NPAR features), and therefore are not valid values. Functions 6 and 7 are not used.
- The dual 1G-port and dual 10G-port based adapters<sup>2</sup> support values 0, 1, 4, 5, 8, 9, 12, 13; the two fixed-speed 1G RJ45 ports (which use values 2 and 3) do not support the NPAReP feature. Functions 6, 7, 10, 11, 14, 15 are not used.

## Note 3

The sum total of all partitions of a single port's relative bandwidth weight (`min-bw`) value should be either 0 (all partitions are set to 0) or 100.

## Example

The following example shows the `adapter nparCfg setfunccfg` command on a local host:

```
~# esxcli qlfastling qcc adapter nparCfg setfunccfg -i  
Adapter_16_0 -n 2 -m 10
```

The following example shows the `adapter nparCfg setfunccfg` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter  
nparCfg setfunccfg -i Adapter_16_0 -n 2 -m 10
```

---

<sup>1</sup> If the server does not support PCI Alternative-Routing ID Interpretation (ARI), or the adapter is set to 8-partition NPAR mode instead of 16-partition NIC extended partitioning (NPAReP) mode.

<sup>2</sup> If the PCI ARI-supported server is set to 16-partition NPAReP mode.

The output for both commands is:

Npar Configuration:

Message: Supported Mode

Mode: Multi Function

NPAR:

EPMode: Disabled

Functions:

Ethernet: Enabled

Fcoe: Disabled

Function Number: 0

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

Ethernet: Enabled

Fcoe: Disabled

Function Number: 1

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

.  
. .  
. . .

Ethernet: Enabled

Fcoe: Disabled

Function Number: 15

Iscsi: Disabled

Iwarp: Disabled

Maximum Bandwidth: 100

Relative Bandwidth Weight: 0

Roce: Disabled

Ports:

Flow Control: Rx/Tx

Port Number: 0

```
Flow Control: Rx/Tx  
Port Number: 1
```

The output shows a combination of the existing settings and the user-modified settings that are saved in the cache file.

## Set NPAR Configuration

The `adapter nparCfg set` command imports user-provided data from a temporary cache file to the flash when the adapter is in Multi-Function mode (not supported for Single-Function mode). This command fails if the cache file is not present. On successful completion of the `adapter nparCfg set` command, the cache file is deleted.

To import NPAR information for a specified Marvell Adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter nparCfg set
```

### Syntax

```
esxcli qlfastlinq qcc adapter nparCfg set [cmd options]
```

### Keywords:

```
-i|--identifier <long> = Adapter identifier (required). Obtain the identifier from the  
adapter list output
```

### Example

The following example shows the `adapter nparCfg set` command on a local host:

```
~# esxcli qlfastlinq qcc adapter nparCfg set -i Adapter_16_0
```

The following example shows the `adapter nparCfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter  
nparCfg set -i Adapter_16_0
```

The output for both commands is:

```
Npar Configuration:  
  Message: Supported Mode  
  Mode: Multi Function  
  NPAR:  
    EPMODE: Disabled  
    Functions:  
    Ethernet: Enabled  
    Fcoe: Disabled  
    Function Number: 0
```

### 3-Ethernet CLI Command Extensions

#### Namespace Commands and Sub-namespaces

---

```
Iscsi: Disabled
Iwarp: NA
Maximum Bandwidth: 100
Relative Bandwidth Weight: 0
Roce: NA

Ethernet: Enabled
Fcoe: Disabled
Function Number: 1
Iscsi: Disabled
Iwarp: NA
Maximum Bandwidth: 100
Relative Bandwidth Weight: 0
Roce: NA

.
.
.

Ethernet: Enabled
Fcoe: Disabled
Function Number: 15
Iscsi: Disabled
Iwarp: NA
Maximum Bandwidth: 100
Relative Bandwidth Weight: 0
Roce: NA
Ports:
Flow Control: Rx/Tx
Port Number: 0

Flow Control: Rx/Tx
Port Number: 1
Reboot Required: true
```

The output shows the new settings, which become active after a reboot if the command is successful.

## Adapter SR-IOV Configuration

The SR-IOV configuration commands display SR-IOV data when the adapter is in Single-Function or Multi-Function mode (that is, SR-IOV over NPAR/NPAREP is supported on the 3400/8400/578xx-based Series adapters and 41000/45000 Series adapters).

```
~# esxcli qlfastling qcc adapter sriov
```

### Syntax

```
esxcli qlfastling qcc adapter sriov {cmd} [cmd options]
```

### Available Commands

get

Shows SR-IOV information for the specified Marvell Adapter. See [Get SR-IOV Information](#).

setFile

Saves SR-IOV information for the specified Marvell Adapter in a cache file. See [Set SR-IOV File](#).

set

Saves SR-IOV information for the specified Marvell Adapter. See [Set SR-IOV](#).

## Get SR-IOV Information

To view SR-IOV data read from flash for a Marvell Adapter, issue the following command:

```
~# esxcli qlfastling qcc adapter sriov get
```

### Syntax

```
esxcli qlfastling qcc adapter sriov get [cmd options]
```

### Keywords

`-i|--identifier <long>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output

### Example

The following example shows the `adapter sriov get` command on a local host:

```
~# esxcli qlfastling qcc adapter sriov get -i Adapter_17_0
```

The following example shows the `adapter sriov get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter sriov get -i Adapter_17_0
```

The output for both commands is:

```
SRIOV Configuration:
  Message: Success
  Mode: Single-Function
  SRIOV: Enabled
  Sriov Config:
    Pf Number: 0
    VFs Per PF: 24

    Pf Number: 1
    VFs Per PF: 32
```

## Set SR-IOV File

The `adapter sriov setFile` command saves user-provided SR-IOV data for a specified Marvell Adapter in a temporary cache file. This cache file is used by the `set` command to save settings in the flash. To set the cache file, issue the following command:

```
~# esxcli qlfastling qcc adapter sriov setFile
```

### Syntax

```
esxcli qlfastling qcc adapter sriov setFile [cmd options]
```

### Keywords

```
-i|--identifier <str> = Adapter identifier (required)

-v|--number-of-vfs <long> = Number of virtual functions
-n|--pf-number <long> = Physical function number (required)
-o|--sriov <str> = SR-IOV
```

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Adapter identifier from the <code>adapter list</code> command
pf-number	Adapter's Ethernet physical function port number: 0 for a single port 0-1 for a dual port 0-3 for a quad port in Single-Function mode 0-7 for 3400/8400 Series adapters 0-15 for 41000/45000 Series adapters in Multi-Function mode



<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>sriov</code>	Enabled, Disabled
<code>number-of-vfs</code>	Integer value of modulo 8. No VFs can be assigned to a physical function enabled with a storage personality (iSCSI offload or FCoE-offload).  Maximum values: 128 for a 3400/8400 Series adapter. For more information, see <a href="#">Notes</a> . 192 for a 41000 Series adapter. For more information, see <a href="#">Notes</a> . 240 for a 45000 Series adapter. For more information, see <a href="#">Notes</a> .

### Notes

When the `Number-of-vfs` parameter is 128:

- 64 per port on single and dual port adapter
- 32 per port on quad port adapters.

In addition, VFs can be user-distributed across Ethernet physical functions on the same port.

When the `Number-of-vfs` parameter is 192 (for a 41000 Series adapter), the actual number of VFs is hard divided across Ethernet physical functions of an adapter—the VFs are not user re-distributable. For single-port adapters, there are 64 VFs (not 192) on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first eight Ethernet physical functions and 8 VFs on the last eight Ethernet physical functions. For dual-port adapters, there are 64 VFs on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first eight Ethernet physical functions and 8 VFs on the last eight Ethernet physical functions. For quad-port adapters, there are 48 VFs on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first eight Ethernet physical functions and 8 VFs on the last eight Ethernet physical functions.

When the `Number-of-vfs` parameter is 240 (for a 45000 Series adapter), the actual number of VFs is hard divided across Ethernet physical functions of an adapter—the VFs are not user re-distributable. For single-port adapters, there are 64 VFs (not 120) on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first seven Ethernet physical functions and 8 VFs on the last Ethernet physical function. For dual-port adapters, there are 64 VFs on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first fourteen Ethernet physical functions and 8 VFs on the last two Ethernet physical functions. For quad-port adapters, there are 64 VFs on the *default* mode single Ethernet physical function per port; in NPAReP mode, there are 16 VFs on the first fourteen Ethernet physical functions and 8 VFs on the last two Ethernet physical functions.

### Example

The following example shows the `adapter sriov setFile` command on a local host:

```
~ # esxcli qlfastlinq qcc adapter sriov setFile -i Adapter_17_0 -n 1 -v 32
```

The following example shows the `adapter sriov setFile` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter sriov setFile -i Adapter_17_0 -n 1 -v 32
```

The output for both commands is:

```
SRIOV Configuration:
  Message: Success
  Mode: Single-Function
  SRIOV: Enabled
  Sriov Config:
    Pf Number: 0
    VFs Per PF: 24

    Pf Number: 1
    VFs Per PF: 32
```

The output is a combination of existing settings and user-modified settings saved in the cache file.

## Set SR-IOV

The `adapter sriov set` command imports user-provided SR-IOV information for a specified Marvell Adapter from a temporary cache file to the flash. This command fails if the cache file is not present. On successful completion of the set command, the cache file is deleted.

```
~# esxcli qlfastling qcc adapter sriov set
```

### Syntax

```
esxcli qlfastling qcc adapter sriov set [cmd options]
```

### Keywords

`-i|--identifier` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Adapter identifier from the <code>adapter list</code> command
<code>pf-number</code>	Adapter's physical function port number: 0 for a single port 0-1 for a dual port 0-3 for a quad port in Single-Function mode 0-7 for 3400/8400 Series adapters 0-15 for 41000/45000 Series adapters in Multi-Function mode
<code>sriov</code>	Enabled, Disabled
<code>number-of-vfs</code>	Integer value of modulo 8. Maximum values: 128 for a 3400/8400 Series adapter. For more information, see <a href="#">"Notes" on page 33</a> . 240 for a 45000 Series adapter, with a maximum of 64 on one function. For more information, see <a href="#">"Notes" on page 33</a> . 192 for a 41000 Series adapter, with a maximum of 64 on one function. For more information, see <a href="#">"Notes" on page 33</a> .

### Example

The following example shows the `adapter sriov set` command on a local host:

```
~# esxcli qlfastling qcc adapter sriov set -i Adapter_17_0
```

The following example shows the `adapter sriov set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter sriov set -i Adapter_17_0
```

The output for both commands is:

```
SRIOV Configuration:
  Message: Success
  Mode: Single-Function
  Reboot Required: true
  SRIOV: Enabled
  Sriov Config:
    Pf Number: 0
    VFs Per PF: 24

    Pf Number: 1
    VFs Per PF: 32
```

The output shows the new SR-IOV setting, which becomes active after a reboot.

## Adapter VPD

To view vital product data (VPD) for the selected adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter vpd
```

### Syntax

```
esxcli qlfastlinq qcc adapter vpd {cmd} [cmd options]
```

### Available Commands

`get`

Gets VPD information for the specified Marvell Adapter. See [Get VPD](#).

## Get VPD

The `adapter vpd get` command displays VPD data read from the flash.

```
~# esxcli qlfastlinq qcc adapter vpd get
```

### Syntax

```
esxcli qlfastlinq qcc adapter vpd get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Adapter identifier from the <code>adapter list</code> command

## Example

The following example shows the `adapter vpd get` command on a local host:

```
~# esxcli qlfastlinq qcc adapter vpd get -i Adapter_33_0
```

The following example shows the `adapter vpd get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter vpd get -i Adapter_33_0
```

The output for both commands is:

```
VPD Configuration:
  Message: Success
  VPDData:
    Tag: EC
    Value: A-5618

    Tag: MN
    Value: 1590

    Tag: P#
    Value: HPE Eth 4x25Gb 1p 620QSFP28 Adapter

    Tag: PN
    Value: 817760-001

    Tag: ProductName
    Value: HPE Eth 4x25Gb 1p 620QSFP28 Adapter

    Tag: SN
    Value: 6789012345

    Tag: V0
    Value: 20W PCIeGen3x16

    Tag: V1
```

Value: 4.1.3.6

Tag: V2

Value: 5901

.  
. .  
.

Tag: V7

Value: 620QSFP28

## Adapter Port Mode Configuration

Some 45000 Series QSFP-based adapters can be split from 1x100G to 4x25G or 4x10G, and from 1x40G or 2x40G to 4x10G speeds. On the 2x40G adapter, when set to 4x10G mode, the second 40G QSFP+ port is disabled.

The port mode command is used for this operation.

To set and display current port mode settings for these 45000 Series Adapters, issue the following command:

```
~# esxcli qlfastling qcc adapter portmode
```

### Syntax

```
esxcli qlfastling qcc adapter portmode {cmd} [cmd options]
```

### Available Commands

get

Shows port mode configuration for the specified Marvell Adapter. See [Get Port Mode Configuration](#).

set

Saves port mode configuration for the specified Marvell Adapter. See [Set Port-Mode Configuration](#).

## Get Port Mode Configuration

To view port mode data read from the flash for a specific Marvell Adapter, issue the following command:

```
~# esxcli qlfastling qcc adapter portmode get
```

### Syntax

```
esxcli qlfastling qcc adapter portmode get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` command.

## Example

The following example shows the `adapter portmode get` command on a local host:

```
~# esxcli qlfastlinq qcc adapter portmode get -i Adapter_4_0
```

The following example shows the `adapter portmode get` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc  
adapter portmode get -i Adapter_4_0
```

The output for both commands (on the 1x40G adapter) is:

```
Adapter Configuration:  
  Message: Success  
  Port Mode Data:  
    Current Value: 1x40  
    Description: Port Mode  
    Name: PortMode  
    Supported Values: 1x40,4x10
```

## Set Port-Mode Configuration

To set port mode data in the flash for a specific Marvell Adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter portmode set
```

## Syntax

```
esxcli qlfastlinq qcc adapter portmode set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` command output.

`-n|--name <str>` = Parameter name (required)

`-v|--value <str>` = Parameter value from list of supported values provided in the `get` command (required)

### Example

The following example shows the `adapter portmode set` command on a local host:

```
~# esxcli qlfastling qcc adapter portmode set -i Adapter_4_0 -n PortMode -v 4x10
```

The following example shows the `adapter portmode set` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc adapter portmode set -i Adapter_4_0 -n PortMode -v 4x10
```

The output for both commands (on the 1x40G adapter) is:

```
~# esxcli qlfastling qcc adapter portmode set -i Adapter_4_0 -n PortMode -v 4x10
Adapter Configuration:
Message: Success
Port Mode Data:
    Current Value: 4x10
    Description: Port Mode
    Name: PortMode
    Supported Values: 1x40,4x10
Reboot Required: true
```

The output displays the new setting, which will be active after a reboot if the command is successful.

## Adapter QinQ Configuration

QinQ, also referred to as *stacked VLANs* and *provider bridging*, is a VLAN feature that controls VLAN tagged transmit and receive frames based on various VLAN modes (Normal, Filtering, QinQ).

You can set these VLAN settings for each function (PF0–PF7, depending on the single function and NPAR modes) in the NVRAM.

These values will be used by drivers to pick/ignore transmit and receive VLAN tagged frames.

The QinQ commands set and display the VLAN QinQ table in the flash for 3400/8400 Series Adapters.

```
~# esxcli qlfastling qcc adapter qinq
```

### Syntax

```
esxcli qlfastling qcc adapter qinq {cmd} [cmd options]
```



## Available Commands

`get`

Shows QinQ configuration for the specified Marvell Adapter. See [Get QinQ Configuration](#).

`setportcfg`

Sets QinQ port configuration in a file for the specified Marvell Adapter. See [Set QinQ Port Configuration](#).

`setfunccfg`

Sets QinQ function configuration in a file for the specified Marvell Adapter. See [Set QinQ Function Configuration](#)

`set`

Saves QinQ configuration in the flash for the specified Marvell Adapter. See [Set QinQ Configuration](#).

## Get QinQ Configuration

To view QinQ VLAN table data read from the flash for a specific Marvell Adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter qinq get
```

### Syntax

```
esxcli qlfastlinq qcc adapter qinq get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` command output.

### Example

The following example shows the `adapter qinq get` command on a local host:

```
~# esxcli qlfastlinq qcc adapter qinq get -i Adapter_66_0
```

The following example shows the `adapter qinq get` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc  
adapter qinq get -i Adapter_66_0
```

The output for both commands is:

```
Qinq Configuration:  
Message: Success  
Mode: Multi Function  
QINQ:
```

### 3-Ethernet CLI Command Extensions

#### Namespace Commands and Sub-namespaces

---

Functions:

Function Number: 0

Vlan Id: 30

Vlan Id Pool: 1-64

Vlan Priority: 3

Function Number: 1

Vlan Id: 22

Vlan Id Pool: 65-128

Vlan Priority: 2

Function Number: 2

Vlan Id: 121

Vlan Id Pool: 129-192

Vlan Priority: 7

Function Number: 3

Vlan Id: 5

Vlan Id Pool: 193-256

Vlan Priority: 1

Function Number: 4

Vlan Id: 1

Vlan Id Pool: 257-320

Vlan Priority: 0

Function Number: 5

Vlan Id: 1

Vlan Id Pool: 321-384

Vlan Priority: 0

Function Number: 6

Vlan Id: 1

Vlan Id Pool: 385-448

Vlan Priority: 0

Function Number: 7

Vlan Id: 1

Vlan Id Pool: 449-510, 600, 701

Vlan Priority: 0

Ports:

Port Number: 0

```
Vlan Mode: Filtering  
  
Port Number: 1  
Vlan Mode: Filtering
```

## Set QinQ Port Configuration

The `adapter qinq setportcfg` command saves user-provided port level QinQ VLAN table data in a temporary cache file for the specified Marvell Adapter. This cache file is used by the `set` command to save settings in the flash.

```
~# esxcli qlfastlinq qcc adapter qinq setportcfg
```

### Syntax

```
esxcli qlfastlinq qcc adapter qinq setportcfg [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` command output.
- `-p|--port-number <long>` = Port number (required). Physical port number of the adapter. Valid values are:
  - 0 for Single port
  - 0-1 for Dual port
  - 0-3 for Quad port
- `-m|--vlan-mode <str>` = VLAN mode (required). Valid values are:
  - Normal
  - Filtering
  - QinQ

### Example

The following example shows the `adapter qinq setportcfg` command on a local host:

```
~# esxcli qlfastlinq qcc adapter qinq setportcfg -i Adapter_66_0  
-p 0 -m QinQ
```

The following example shows the `adapter qinq setportcfg` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc  
adapter qinq setportcfg -i Adapter_66_0 -p 0 -m QinQ
```

The output for both commands is:

```
QinQ Configuration:  
Message: Success
```

### 3-Ethernet CLI Command Extensions

#### Namespace Commands and Sub-namespaces

---

```
Mode: Multi Function
QINQ:
  Functions:
    Function Number: 0
    Vlan Id: 30
    Vlan Id Pool: 1-64
    Vlan Priority: 3

    Function Number: 1
    Vlan Id: 22
    Vlan Id Pool: 65-128
    Vlan Priority: 2

    Function Number: 2
    Vlan Id: 121
    Vlan Id Pool: 129-192
    Vlan Priority: 7

    Function Number: 3
    Vlan Id: 5
    Vlan Id Pool: 193-256
    Vlan Priority: 1

    Function Number: 4
    Vlan Id: 1
    Vlan Id Pool: 257-320
    Vlan Priority: 0

    Function Number: 5
    Vlan Id: 1
    Vlan Id Pool: 321-384
    Vlan Priority: 0

    Function Number: 6
    Vlan Id: 10
    Vlan Id Pool: 385-448
    Vlan Priority: 0

    Function Number: 7
    Vlan Id: 1
    Vlan Id Pool: 449-510,600,701
    Vlan Priority: 0 Ports:
```

```
Port Number: 0 Vlan Mode: QinQ  
  
Port Number: 1  
Vlan Mode: Filtering
```

The command output is a combination of existing settings and user-modified settings saved in a cache file.

## Set QinQ Function Configuration

The adapter `qinq setfunccfg` command saves user-provided, function-level QinQ VLAN table data in a temporary cache file for a specified Marvell Adapter. This cache file is used by the `set` command to save settings in the flash.

When issuing this command:

- All `setfunccfg` parameters (`vlan-id`, `vlan-priority`, `vlan-id-pool`) are read-only in normal VLAN mode and set to 0.
- In QinQ mode:
  - `vlan-id-pool` is read only.
  - The `vlan-id` on all the functions of a port must be mutually exclusive.
  - The `vlan-id` must be nonzero.
- In Filtering mode:
  - There must be at least one valid `vlan-id` or `vlan-id-pool` value.
  - All parameters are read and write capable.
  - The maximum active VLAN IDs in the `vlan-id-pool` and `vlan-id` per adapter is 256.

The following command sets QinQ function configuration information for the specified Marvell Adapter in a file.

```
~# esxcli qlfastlinq qcc adapter qinq setfunccfg
```

## Syntax

```
esxcli qlfastlinq qcc adapter qinq setfunccfg [cmd options]
```

## Keywords

- `-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the adapter `list` command output.
- `-n|--function-number <long>` = Function number (required). Function number of the adapter.  
Valid values are in the range of 0–7.

- d|--vlan-id <long> = VLAN ID  
Valid values are in the range of 1-4094.
- l|--vlan-id-pool <str> = VLAN ID pool. Numbers in string format. Numbers in a range are separated with a dash (-). Multiple numbers are separated with commas (,).  
Valid values are in the range of 1-4094.
- p|--vlan-priority <long> = VLAN priority.  
Valid values are in the range of 0-7.

### Example

The following example shows the `adapter qinq setfunccfg` command on a local host:

```
~# esxcli qlfastlinq qcc adapter qinq setfunccfg -i Adapter_66_0 -n 7 -l 449-510,600,701
```

The following example shows the `adapter qinq setfunccfg` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc adapter qinq setfunccfg -i Adapter_66_0 -n 7 -l 449- 510,600,701
```

The output for both commands is:

```
QinQ Configuration:
  Message: Success
  Mode: Multi Function
  QINQ:
    Functions:
      Function Number: 0
      Vlan Id: 30
      Vlan Id Pool: 1-64
      Vlan Priority: 3

      Function Number: 1
      Vlan Id: 22
      Vlan Id Pool: 65-128
      Vlan Priority: 2

      Function Number: 2
      Vlan Id: 121
      Vlan Id Pool: 129-192
      Vlan Priority: 7

      Function Number: 3
```

```
Vlan Id: 5
Vlan Id Pool: 193-256
Vlan Priority: 1

Function Number: 4
Vlan Id: 1
Vlan Id Pool: 257-320
Vlan Priority: 0

Function Number: 5
Vlan Id: 1
Vlan Id Pool: 321-384
Vlan Priority: 0

Function Number: 6
Vlan Id: 10
Vlan Id Pool: 385-448
Vlan Priority: 0

Function Number: 7
Vlan Id: 1
Vlan Id Pool: 449-510,600,701
Vlan Priority: 0 Ports:
Port Number: 0 Vlan Mode: QinQ

Port Number: 1
Vlan Mode: Filtering
```

The command output is a combination of existing settings and user-modified settings saved in a cache file.

### Set QinQ Configuration

The `adapter qinq set` command imports user-provided data from a temporary cache file to the flash. This command fails if cache file is not present. When the command completes successfully, the cache file is deleted.

To import QinQ VLAN table data for a specified Marvell Adapter, issue the following command:

```
~# esxcli qlfastlinq qcc adapter qinq set
```

### Syntax

```
esxcli qlfastlinq qcc adapter qinq set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` command output.

## Example

The following example shows the `adapter qinq set` command on a local host:

```
~# esxcli qlfastlinq qcc adapter qinq set -i Adapter_66_0
```

The following example shows the `adapter qinq set` command on a remote host:

```
~# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc  
adapter qinq set -i Adapter_66_0
```

The output for both commands is:

```
QinQ Configuration:  
  Message: Success  
  Mode: Multi Function  
  QINQ:  
    Functions:  
      Function Number: 0  
      Vlan Id: 30  
      Vlan Id Pool: 1-64  
      Vlan Priority: 3  
  
      Function Number: 1  
      Vlan Id: 22  
      Vlan Id Pool: 65-128  
      Vlan Priority: 2  
  
      Function Number: 2  
      Vlan Id: 121  
      Vlan Id Pool: 129-192  
      Vlan Priority: 7  
  
      Function Number: 3  
      Vlan Id: 5  
      Vlan Id Pool: 193-256  
      Vlan Priority: 1  
  
      Function Number: 4  
      Vlan Id: 1
```



```
Vlan Id Pool: 257-320
Vlan Priority: 0

Function Number: 5
Vlan Id: 1
Vlan Id Pool: 321-384
Vlan Priority: 0

Function Number: 6
Vlan Id: 1
Vlan Id Pool: 385-448
Vlan Priority: 0

Function Number: 7
Vlan Id: 1
Vlan Id Pool: 449-510,600,701
Vlan Priority: 0 Ports:
Port Number: 0
Vlan Mode: Filtering

Port Number: 1
Vlan Mode: Filtering
Reboot Required: true
```

The output shows the new settings, which will be active after a reboot if the command is successful.

## Adapter Port Namespace Commands and Sub-namespaces

This section provides QESXCLI information on the following:

- [Adapter Port List](#)
- [Adapter Port Information](#)
- [Adapter Port FCoE Boot Configuration \(3400/8400 Series\)](#)
- [Adapter Port FCoE Boot Configuration \(41000/45000 Series\)](#)
- [Adapter Port iSCSI Boot Configuration \(3400/8400 Series\)](#)
- [Adapter Port iSCSI Boot Configuration \(41000/45000 Series\)](#)
- [Adapter Port MBA Boot Configuration Namespace Commands and Sub-namespaces](#)
- [Adapter Port Diagnostics Namespace Commands and Sub-namespaces](#)

- [Adapter Port DCBX Namespace Commands and Sub-namespaces](#)
- [Adapter Port Link Settings \(SmartAN\) Namespace Commands and Sub-namespaces](#)

```
~# esxcli qlfastlinq qcc port
```

### Syntax

```
esxcli qlfastlinq qcc port {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
dcbx	QCC CLI for port-level DCBX information
diag	QCC CLI for port-level diagnostics
dmi	QCC CLI for port-level SFP DMI information
fcoebootcfg579xx	QCC CLI for port FCoE boot configuration information for 41000/45000 Series adapters
fcoebootcfg	QCC CLI for port FCoE boot configuration information for 3400/8400 Series adapters
info	QCC CLI for port information
iscsibootcfg	QCC CLI for port iSCSI boot configuration information for 3400/8400 Series adapters
iscsibootcfg579xx	QCC CLI for port iSCSI boot configuration information for 41000/45000 Series Adapters
linkSettings	QCC CLI for port-level Advanced Link Settings information
mbabootcfg	QCC CLI for port MBA boot configuration information

### Available Commands

```
list
```

Shows identifiers for Marvell Adapter ports discovered on the host.

## Adapter Port List

The `port list` command (shown issued from a local host) lists all of the supported 3400/8400 Series and 41000/45000 Series ports, as follows:

```
~# esxcli qlfastlinq qcc port list
```

The following example shows the `port list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port list
```

The output for both commands is:

```
Ports
-----
Port_10_0_0
Port_10_0_1
Port_16_0_0
Port_16_0_1
Port_27_0_0
Port_27_0_1
```

## Adapter Port Information

The `port info` command shows information about the selected Marvell Adapter port:

```
~# esxcli qlfastlinq qcc port info
```

### Syntax

```
esxcli qlfastlinq qcc port info {cmd} [cmd options]
```

### Available Commands

get

Shows information about the specified Marvell Adapter port. See [Get Port Information](#).

## Get Port Information

The `port info get` command shows port-level information for the specified Marvell Adapter port.

```
~# esxcli qlfastlinq qcc port info get
```

### Syntax

```
esxcli qlfastlinq qcc port info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port info get` command on a local host:

```
~# esxcli qlfastlinq qcc port info get -i Port_10_0_0
```

The following example shows the `port info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
info get -i Port_10_0_0
```

The output for both commands is:

Port Information:

Message: Success

Port Info:

```
Bus Number: 18  
Description: BCM57810 10 Gigabit Ethernet Multi Function  
Device Number: 0  
Duplex: Half  
Fcoe Driver Version: NA  
Fec Auto Neg Mode: NA  
Fec Force Mode: NA  
Iscsi Driver Version: NA  
Link Settings: NA  
Link Settings Link Speed: NA  
Link Speedin Mbps: Unknown  
Link State: Link Down  
Media Type: Optical  
Nic Driver Version: 1.0.69.0  
Port Number: 0  
Title: BCM57810 10 Gigabit Ethernet Multi Function rev 10 (vmnic20)
```

## Adapter Port FCoE Boot Configuration (3400/8400 Series)

The `fcoebootcfg` command performs FCoE boot configuration operations on 3400/8400 Series Adapters. For FCoE boot configuration on 41000/45000 Series Adapters, see [Adapter Port FCoE Boot Configuration \(41000/45000 Series\)](#).

```
~# esxcli qlfastling qcc port fcoebootcfg
```

### Syntax

```
esxcli qlfastling qcc port fcoebootcfg {cmd} [cmd options]
```

### Available Commands

`get`

Shows FCoE boot configuration information for the specified Marvell Adapter (3400/8400 Series Adapter) port. See [Get FCoE Boot Configuration](#).

`setgenparams`  
Saves FCoE boot configuration general parameters for the specified Marvell Adapter (3400/8400 Series adapter) port in a file. See [Set FCoE Boot Configuration General Parameters](#).

`settgtparams`  
Saves FCoE boot configuration target parameters for the specified Marvell Adapter (3400/8400 Series adapter) port in a file. See [Set FCoE Boot Configuration Target Parameters](#).

`set`  
Sets FCoE boot configuration information for the specified Marvell Adapter (3400/8400 Series adapter) port. See [Set FCoE Boot Configuration](#).

## Get FCoE Boot Configuration

To view FCoE boot configuration data for the specified Marvell Adapter (3400/8400 Series Adapter) port, issue the `port fcoebootcfg get` command as follows:

```
~# esxcli qlfastlinq qcc port fcoebootcfg get
```

### Syntax

```
esxcli qlfastlinq qcc port fcoebootcfg get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `port list` output

### Example

The following example shows the `port fcoebootcfg get` command on a local host:

```
~# esxcli qlfastlinq qcc port fcoebootcfg get -i Port_27_0_0
```

The following example shows the `port fcoebootcfg get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port fcoebootcfg get -i Port_27_0_0
```

The output for both commands is:

```
FCoE Boot Configuration:
  FCOEBoot Info:
    Boot Targets:
    Boot LUN: 1
    Connect: Enabled
```

```
Port WWN: 50-01-00-0E-0F-0A-0B-0C
Target Number: 0

Boot LUN: 3
Connect: Enabled
Port WWN: 20-01-00-0E-0A-04-0B-06
Target Number: 1
.
.
.

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 6

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 7
General Parameters:
Boot To Fcoe Target: One Time Disabled
Fabric Discovery Timeout: 5
Fcoe Hba Boot Mode: Disabled
Link Up Delay Time: 10
Lun Busy Retry Count: 9
Target As First HDD: Disabled
Message: Success
```

### Set FCoE Boot Configuration General Parameters

The `port fcoebootcfg setgenparams` command saves user-provided FCoE general parameter data for the specified Marvell Adapter (3400/8400 Series adapter) port in a temporary cache file. The cache file is used by the `set` command to save settings in the flash.

```
~# esxcli qlfastling qcc port fcoebootcfg setgenparams
```

#### Syntax

```
esxcli qlfastling qcc port fcoebootcfg setgenparams [cmd options]
```

## Keywords

-o|--boot-to-fcoe-target <str> = Boot to FCoE target  
-d|--fabric-discovery-timeout <long> = Fabric discovery timeout  
-m|--fcoe-hba-boot-mode <str> = FCoE HBA boot mode  
-i|--identifier <str> = Port identifier (required)  
-u|--link-up-delay-time <long> = Link up delay time  
-r|--lun-busy-retry-count <long> = LUN busy retry count  
-f|--target-as-first-hdd <str> = Target as first HDD

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
boot-to-fcoe-target	Enabled, Disabled, OneTimeDisabled
fcoe-hba-boot-mode	Enabled, Disabled
target-as-first-hdd	Enabled, Disabled
fabric-discovery-timeout	Integer value (1–8)
link-up-delay-time	Integer value (0–255)
lun-busy-retry-count	Integer value (0–60)

## Example

The following example shows the port fcoebootcfg setgenparams command on a local host:

```
~# esxcli qlfastling qcc port fcoebootcfg setgenparams -i Port_27_0_0 -r 20
```

The following example shows the port fcoebootcfg setgenparams command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port fcoebootcfg setgenparams -i Port_27_0_0 -r 20
```

The output for both commands is:

```
FCoE Boot Configuration:  
  FCOEBoot Info:  
    Boot Targets:  
    Boot LUN: 1  
    Connect: Enabled  
    Port WWN: 50-01-00-0E-0F-0A-0B-0C  
    Target Number: 0
```

```
Boot LUN: 3
Connect: Enabled
Port WWN: 20-01-00-0E-0A-04-0B-06
Target Number: 1
.
.
.

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 6

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 7
General Parameters:
Boot To Fcoe Target: One Time Disabled
Fabric Discovery Timeout: 5
Fcoe Hba Boot Mode: Disabled
Link Up Delay Time: 10
Lun Busy Retry Count: 20
Target As First HDD: Disabled
Message: Success
```

The output displayed is combination of existing settings and user modified settings saved in the cache file. Same data is present in cache file.

### Set FCoE Boot Configuration Target Parameters

The `port fcoebootcfg settgtparams` command saves user-provided FCoE target parameters data for a specified Marvell Adapter port in a temporary cache file. This cache file will be used by the `set` command to save the settings in the flash.

```
~# esxcli qlfastling qcc port fcoebootcfg settgtparams
```

#### Syntax

```
esxcli qlfastling qcc port fcoebootcfg settgtparams [cmd options]
```



## Keywords

-l|--boot-lun <long> = Link up delay time  
-c|--connect <str> = Connect  
-i|--identifier <str> = Port identifier (required)  
-p|--port-wwn <str> = Hyphen-separated port WWN (for example,  
20-01-0E-0A-04-06-0E-0B)  
-n|--target-number <long> = Target number (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
target-number	Target number whose parameter to be set (0-7)
connect	Enabled, Disabled
port-wwn	Hyphen-separated port WWN (for example, 20-01-0E-0A-04-06-0E-0B)
boot-lun	Boot LUN (0-65535)

## Example

The following example shows the `port fcoebootcfg settgtparams` command on a local host:

```
~# esxcli qlfastling qcc port fcoebootcfg settgtparams -i  
Port_27_0_0 -n 1 -l 4
```

The following example shows the `port fcoebootcfg settgtparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
fcoebootcfg settgtparams -i Port_27_0_0 -n 1 -l 4
```

The output for both commands is:

```
FCoE Boot Configuration:  
  FCOEBoot Info:  
    Boot Targets:  
    Boot LUN: 1  
    Connect: Enabled  
    Port WWN: 50-01-00-0E-0F-0A-0B-0C  
    Target Number: 0  
  
    Boot LUN: 4  
    Connect: Enabled  
    Port WWN: 20-01-00-0E-0A-04-0B-06
```

```
Target Number: 1
.
.
.
Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 7
General Parameters:
Boot To Fcoe Target: One Time Disabled
Fabric Discovery Timeout: 5
Fcoe Hba Boot Mode: Disabled
Link Up Delay Time: 10
Lun Busy Retry Count: 20
Target As First HDD: Disabled
Message: Success
```

The output shown is combination of existing settings and user-modified settings saved in the cache file. The same data is present in the cache file.

## Set FCoE Boot Configuration

To import user-provided FCoE boot configuration data for the specified Marvell Adapter (3400/8400 Series Adapter) from a temporary cache file to the flash, issue the `fcoebootcfg set` command as follows:

```
~# esxcli qlfastling qcc port fcoebootcfg set
```

This command fails if the cache file is not present. On successful completion of the `set` command, the cache file is deleted.

### Syntax

```
esxcli qlfastling qcc port fcoebootcfg set [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the identifier from the port
list output
```

### Example

The following example shows the `port fcoebootcfg set` command on a local host:

```
~# esxcli qlfastling qcc port fcoebootcfg set -i Port_27_0_0
```

The following example shows the `port fcoebootcfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
fcoebootcfg set -i Port_27_0_0
```

The output for both commands is:

FCoE Boot Configuration:

FCOEBoot Info:

Boot Targets:

Boot LUN: 1

Connect: Enabled

Port WWN: 50-01-00-0E-0F-0A-0B-0C

Target Number: 0

Boot LUN: 4

Connect: Enabled

Port WWN: 20-01-00-0E-0A-04-0B-06

Target Number: 1

.  
.  
.

Boot LUN: 0

Connect: Disabled

Port WWN: 00-00-00-00-00-00-00-00

Target Number: 7

General Parameters:

Boot To Fcoe Target: One Time Disabled

Fabric Discovery Timeout: 5

Fcoe Hba Boot Mode: Disabled

Link Up Delay Time: 10

Lun Busy Retry Count: 20

Target As First HDD: Disabled

Message: Success

Reboot Required: true

The output displayed is new setting, which will be active after reboot if the command is successful.

## Adapter Port FCoE Boot Configuration (41000/45000 Series)

The `port fcoebootcfg579xx` command performs FCoE boot configuration operations on 41000/45000 Series Adapters. For FCoE boot configuration on 3400/8400 Series Adapters, see [Adapter Port FCoE Boot Configuration \(3400/8400 Series\)](#).

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx
```

### Syntax

```
esxcli qlfastlinq qcc port fcoebootcfg579xx {cmd} [cmd options]
```

### Available Commands

`get`

Shows FCoE boot configuration information for the specified Marvell Adapter (41000/45000 Series) port. See [Get FCoE Boot Configuration](#).

`setgenparams`

Saves FCoE boot configuration general parameters for the specified Marvell Adapter (41000/45000 Series) port in a file. See [Set FCoE Boot Configuration General Parameters](#).

`settgtparams`

Saves FCoE boot configuration target parameters for the specified Marvell Adapter (41000/45000 Series) port in a file. See [Set FCoE Boot Configuration Target Parameters](#).

`set`

Imports FCoE boot configuration information for the specified Marvell Adapter (41000/45000 Series) port. See [Set FCoE Boot Configuration](#).

## Get FCoE Boot Configuration

To view FCoE boot configuration data for the specified Marvell Adapter (41000/45000 Series) port, issue the `port fcoebootcfg579xx get` command as follows:

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx get
```

### Syntax

```
esxcli qlfastlinq qcc port fcoebootcfg579xx get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter port list` output

### Example

The following example shows the `port fcoebootcfg579xx get` command on a local host:

```
~# esxcli qlfastling qcc port fcoebootcfg579xx get -i Port_17_0_0
```

The following example shows the `port fcoebootcfg579xx get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port fcoebootcfg579xx get -i Port_17_0_0
```

The output for both commands is:

```
FCoE Boot Configuration:
```

```
  FCOEBoot Info:
```

```
    Boot Targets:
```

```
      Boot LUN: 0
```

```
      Connect: Disabled
```

```
      Port WWN: 00-00-00-00-00-00-00-00
```

```
      Target Number: 0
```

```
      Boot LUN: 0
```

```
      Connect: Disabled
```

```
      Port WWN: 00-00-00-00-00-00-00-00
```

```
      Target Number: 1
```

```
  .  
  .  
  .
```

```
      Boot LUN: 0
```

```
      Connect: Disabled
```

```
      Port WWN: 00-00-00-00-00-00-00-00
```

```
      Target Number: 7
```

```
      General Parameters:
```

```
        Boot Protocol: None
```

```
        Fabric Login Retry Count: 5
```

```
        Fip Vlan: 0
```

```
        Target Login Retry Count: 5
```

```
  Message: Success
```

## Set FCoE Boot Configuration General Parameters

The `port fcoebootcfg579xx setgenparams` command saves user-provided FCoE general parameter data for the specified Marvell Adapter (41000/45000 Series Adapter) port in a temporary cache file. The cache file is used by the `set` command to save settings in the flash.

```
~# esxcli qlfastling qcc port fcoebootcfg579xx setgenparams
```

### Syntax

```
esxcli qlfastling qcc port fcoebootcfg579xx setgenparams [cmd options]
```

### Keywords

```
-o|--boot-protocol <str> = Boot protocol  
-f|--fabric-login-retry-count <long> = Fabric login retry count  
-v|--fip-vlan <long> = FIP VLAN  
-i|--identifier <str> = Port identifier (required)  
-r|--target-login-retry-count <long> = Target login retry count
```

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the <code>port list</code> command
boot-protocol	FCOE, None
fabric-login-retry-count	Integer value (0-7)
target-login-retry-count	Integer value (0-255)
fip-vlan	Integer value (0-4094)

### Example

The following example shows the `port fcoebootcfg579xx setgenparams` command on a local host:

```
~# esxcli qlfastling qcc port fcoebootcfg579xx setgenparams -i Port_17_0_0 -v 4
```

The following example shows the `port fcoebootcfg579xx setgenparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port fcoebootcfg579xx setgenparams -i Port_17_0_0 -v 4
```

The output for both commands is:

```
FCoE Boot Configuration:  
FCOEBoot Info:
```

```
Boot Targets:
Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 0

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 1

Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 7
General Parameters:
Boot Protocol: None
Fabric Login Retry Count: 5
Fip Vlan: 4
Target Login Retry Count: 5
Message: Success
```

The command output includes a combination of existing settings and user-modified settings saved in the cache file.

### Set FCoE Boot Configuration Target Parameters

The `port fcoebootcfg579xx settgtparams` command sets user-provided FCoE target parameters data for a specified Marvell Adapter port in a temporary cache file. This cache file will be used by the `set` command to save the settings in the flash.

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx settgtparams
```

#### Syntax

```
esxcli qlfastlinq qcc port fcoebootcfg579xx settgtparams [cmd options]
```

#### Keywords

```
-l|--boot-lun <long> = Boot LUN
-c|--connect <str> = Connect
-i|--identifier <str> = Port identifier (required)
```

-p|--port-wwn <str> = Hyphen-separated port WWN (for example,  
20-01-0E-0A-04-06-0E-0B)  
-n|--target-number <long> = Target number (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
target-number	Target number whose parameter to be set (0-7)
connect	Enabled, Disabled
port-wwn	Hyphen-separated port WWN (for example, 20-01-0E-0A-04-06-0E-0B)
boot-lun	Boot LUN (0-65535)

### Example

The following example shows the `port fcoebootcfg579xx settgtparams` command on a local host:

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx settgtparams -i  
Port_17_0_0 -n 0 -c Enabled
```

The following example shows the `port fcoebootcfg579xx settgtparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port  
fcoebootcfg579xx settgtparams -i Port_17_0_0 -n 0 -c Enabled
```

The output for both commands is:

```
FCoE Boot Configuration:  
  FCOEBoot Info:  
    Boot Targets:  
    Boot LUN: 0  
    Connect: Enabled  
    Port WWN: 00-00-00-00-00-00-00-00  
    Target Number: 0  
  
    Boot LUN: 0  
    Connect: Disabled  
    Port WWN: 00-00-00-00-00-00-00-00  
    Target Number: 1  
  
  .  
  .  
  .
```



```
Boot LUN: 0
Connect: Disabled
Port WWN: 00-00-00-00-00-00-00-00
Target Number: 7
General Parameters:
Boot Protocol: None
Fabric Login Retry Count: 5
Fip Vlan: 4
Target Login Retry Count: 5
Message: Success
```

The output shows a combination of existing settings and user-modified settings saved in the cache file.

## Set FCoE Boot Configuration

To import user-provided FCoE boot configuration data for the specified Marvell Adapter (41000/45000 Series Adapter) from a temporary cache file to the flash, issue the `port fcoebootcfg set` command as follows:

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx set
```

This command fails if the cache file is not present. On successful completion of the `set` command, the cache file is deleted.

### Syntax

```
esxcli qlfastlinq qcc port fcoebootcfg579xx set [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output

### Example

The following example shows the `port fcoebootcfg579xx set` command on a local host:

```
~# esxcli qlfastlinq qcc port fcoebootcfg579xx set -i Port_17_0_0
```

The following example shows the `port fcoebootcfg579xx set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port fcoebootcfg579xx set -i Port_17_0_0
```

The output for both commands is:

```
FCoE Boot Configuration:
  FCOEBoot Info:
```

```
    Boot Targets:
    Boot LUN: 0
    Connect: Enabled
    Port WWN: 00-00-00-00-00-00-00-00
    Target Number: 0

    Boot LUN: 0
    Connect: Disabled
    Port WWN: 00-00-00-00-00-00-00-00
    Target Number: 1
.
.
.

    Boot LUN: 0
    Connect: Disabled
    Port WWN: 00-00-00-00-00-00-00-00
    Target Number: 7
    General Parameters:
    Boot Protocol: None
    Fabric Login Retry Count: 5
    Fip Vlan: 4
    Target Login Retry Count: 5
    Message: Success
    Reboot Required: true
```

The output displayed is new setting, which will be active after reboot if command is successful.

## Adapter Port iSCSI Boot Configuration (3400/8400 Series)

The following command performs iSCSI boot configuration operations on 3400/8400 Series adapters:

```
~# esxcli qlfastlinq qcc port iscsibootcfg
```

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg {cmd} [cmd options]
```

### Available Commands

get

Shows iSCSI boot configuration information for a specified Marvell Adapter (3400/8400 Series) port. See [Get iSCSI Boot Configuration](#).

`setgenparams`  
Saves iSCSI boot configuration general parameters for a specified Marvell Adapter (3400/8400 Series) port in a file. See [Set iSCSI Boot Configuration General Parameters](#).

`setinitparams`  
Saves iSCSI boot configuration initiator parameters for a specified Marvell Adapter (3400/8400 Series) port in a file. See [Set iSCSI Boot Configuration Initiator Parameters](#).

`settgtparams`  
Saves iSCSI boot configuration target parameters for a specified Marvell Adapter (3400/8400 Series) port in a file. See [Set iSCSI Boot Configuration Target Parameters](#).

`setmpioparams`  
Saves iSCSI boot configuration MPIO parameters for a specified Marvell Adapter (3400/8400 Series) port in a file. See [Set iSCSI Boot Configuration MPIO Parameters](#).

`set`  
Imports iSCSI boot configuration information for a specified Marvell Adapter (3400/8400 Series) port. See [Set iSCSI Boot Configuration](#).

## Get iSCSI Boot Configuration

To show iSCSI boot configuration information for a specified Marvell Adapter (3400/8400 Series) port, issue the following command:

```
~# esxcli qlfastling qcc port iscsibootcfg get
```

### Syntax

```
esxcli qlfastling qcc port iscsibootcfg get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port iscsibootcfg get` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg get -i Port_27_0_0
```

The following example shows the `port iscsibootcfg get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port iscsibootcfg get -i Port_27_0_0
```

The output for both commands is:

iSCSI Boot Configuration:

ISCSIBoot Info:

Boot Targets:

Connect: Enabled

Target Boot LUN: 5

Target Chap Id:

Target Chap Secret:

Target IPAddress: 192.168.100.227

Target Iscsi Name:

Target Number: 0

Target Tcp Port: 3260

Connect: Disabled

Target Boot LUN: 0

Target Chap Id:

Target Chap Secret:

Target IPAddress: 0.0.0.0

Target Iscsi Name:

Target Number: 1

Target Tcp Port: 0

General Parameters:

Boot To Iscsi Target: Enabled

Chap Authentication: Disabled

Dhcp Vendor Id: BCM

Hba Boot Mode: Disabled

Ip Version: IPv4

Iscsi Parameters Via DHCP: Disabled

Link Up Delay Time: 0

Lun Busy Retry Count: 0

Target As First HDD: Disabled

Tcp Ip Parameters Via DHCP: Enabled

Use Tcp Timestamp: Disabled

Initiator Parameters:

Default Gateway: 0.0.0.0

Initiator Chap Id:

Initiator Chap Secret:

Initiator IPAddress: 192.168.100.225

Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot

Primary DNS: 0.0.0.0

```
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Mpio Parameters:
MACAddress: 00:00:00:00:00:00
Mpio Mode: Enabled
Use Independent Target Name: Disabled
Use Independent Target Portal: Enabled
Message: Success
```

## Set iSCSI Boot Configuration General Parameters

To save user-provided iSCSI boot configuration general parameters information for a specified Marvell Adapter (3400/8400 Series) port to a temporary cache file, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg setgenparams
```

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg setgenparams [cmd options]
```

### Keywords

```
-o|--boot-to-iscsi-target <str> = Boot to iSCSI target
-a|--chap-authentication <str> = CHAP authentication
  -d|--dhcp-vendor-id <str> = DHCP vendor ID
  -m|--hba-boot-mode <str> = HBA boot mode
  -i|--identifier <str> = Port identifier (required)
  -v|--ip-version <str> = IP version
  -s|--iscsi-via-dhcp <str> = iSCSI parameters via DHCP
-u|--link-up-delay-time <long> = Link up delay time
-r|--lun-busy-retry-count <long> = LUN busy retry count
-f|--target-as-first-hdd <str> = Target as first HDD
  -c|--tcpip-via-dhcp <str> = TCP/IP parameters via DHCP
-e|--use-tcp-timestamp <str> = Use TCP timestamp
```

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
boot-to-iscsi-target	Target number whose parameter to be set (0–7)
connect	Enabled, Disabled, OneTimeDisabled

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
chap-authentication	Enabled, Disabled
hba-boot-mode	Enabled, Disabled
iscsi-via-dhcp	Enabled, Disabled
target-as-first-hdd	Enabled, Disabled
tcpip-via-dhcp	Enabled, Disabled
use-tcp-timestamp	Enabled, Disabled
dhcp-vendor-id	String value
ip-version	IPv4, IPv6
link-up-delay-time	Integer value (0-255)
lun-busy-retry-count	Integer value (0-60)

### Example

The following example shows the `port iscsibootcfg setgenparams` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg setgenparams -i Port_27_0_0 -u 55
```

The following example shows the `port iscsibootcfg setgenparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port iscsibootcfg setgenparams -i Port_27_0_0 -u 55
```

The output for both commands is:

```
iSCSI Boot Configuration:
  ISCSIBoot Info:
    Boot Targets:
      Connect: Enabled
      Target Boot LUN: 5
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 192.168.100.227
      Target Iscsi Name:
      Target Number: 0
      Target Tcp Port: 3260

    Connect: Disabled
      Target Boot LUN: 0
      Target Chap Id:
```

```
Target Chap Secret:
Target IPAddress: 0.0.0.0
Target Iscsi Name:
Target Number: 1
Target Tcp Port: 0
General Parameters:
Boot To Iscsi Target: Enabled
Chap Authentication: Disabled
Dhcp Vendor Id: BCM
Hba Boot Mode: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Disabled
Link Up Delay Time: 55
Lun Busy Retry Count: 0
Target As First HDD: Disabled
Tcp Ip Parameters Via DHCP: Enabled
Use Tcp Timestamp: Disabled
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 192.168.100.225
Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Mpio Parameters:
MACAddress: 00:00:00:00:00:00
Mpio Mode: Enabled
Use Independent Target Name: Disabled
Use Independent Target Portal: Enabled
Message: Success
```

The command output contains a combination of existing settings and the user-modified settings saved in the cache file.

### Set iSCSI Boot Configuration Initiator Parameters

To save user-provided iSCSI boot configuration initiator parameters information for a specified Marvell Adapter (3400/8400 Series) port to a temporary cache file, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg setinitparams
```

## Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg setinitparams [cmd  
options]
```

## Keywords

```
-c|--chap-id <str> = Initiator CHAP ID  
-w|--chap-secret <str> = Initiator CHAP secret  
-g|--default-gateway <str> = Initiator gateway address a  
-i|--identifier <str> = Port identifier (required)  
-a|--ip-address <str> = Initiator IP address a  
-q|--iscsi-name <str> = Initiator iSCSI name  
-p|--primary-dns <str> = Primary DNS address a  
-d|--secondary-dns <str> = Secondary DNS address a  
-m|--subnet-mask <str> = Initiator subnet mask address a
```

<sup>a</sup> Addresses can contain either periods ( . ) or colons ( : ) to separate segments.

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
chap-id	CHAP ID string
chap-secret	CHAP password string
ip-address	Initiator IP address <sup>a</sup>
subnet-mask	Initiator subnet mask <sup>a</sup>
default-gateway	Initiator default gateway <sup>a</sup>
iscsi-name	Initiator iSCSI qualified name (IQN)
primary-dns	Primary DNS address <sup>a</sup>
secondary-dns	Secondary DNS address <sup>a</sup>

<sup>a</sup> Addresses can contain either periods ( . ) or colons ( : ) to separate segments.

## Example

The following example shows the port iscsibootcfg setinitparams command on a local host:

```
~# esxcli qlfastlinq qcc port iscsibootcfg setinitparams -i  
Port_27_0_0 -a 192.168.100.225
```



The following example shows the `port iscsibootcfg setinitparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
iscsibootcfg setinitparams -i Port_27_0_0 -a 192.168.100.225
```

The output for both commands is:

```
iSCSI Boot Configuration:  
  ISCSIBoot Info:  
    Boot Targets:  
    Connect: Enabled  
    Target Boot LUN: 5  
    Target Chap Id:  
    Target Chap Secret:  
    Target IPAddress: 192.168.100.227  
    Target Iscsi Name:  
    Target Number: 0  
    Target Tcp Port: 3260  
  
    Connect: Disabled  
    Target Boot LUN: 0  
    Target Chap Id:  
    Target Chap Secret:  
    Target IPAddress: 0.0.0.0  
    Target Iscsi Name:  
    Target Number: 1  
    Target Tcp Port: 0  
    General Parameters:  
    Boot To Iscsi Target: Enabled  
    Chap Authentication: Disabled  
    Dhcp Vendor Id: BCM  
    Hba Boot Mode: Disabled  
    Ip Version: IPv4  
    Iscsi Parameters Via DHCP: Disabled  
    Link Up Delay Time: 55  
    Lun Busy Retry Count: 0  
    Target As First HDD: Disabled  
    Tcp Ip Parameters Via DHCP: Enabled  
    Use Tcp Timestamp: Disabled  
    Initiator Parameters:  
    Default Gateway: 0.0.0.0
```

```
Initiator Chap Id:  
Initiator Chap Secret:  
Initiator IPAddress: 192.168.100.225  
Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot  
Primary DNS: 0.0.0.0  
Secondary DNS: 0.0.0.0  
Subnet Mask: 0.0.0.0  
Mpio Parameters:  
MACAddress: 00:00:00:00:00:00  
Mpio Mode: Enabled  
Use Independent Target Name: Disabled  
Use Independent Target Portal: Enabled  
Message: Success
```

The command output is a combination of existing settings and user-modified settings saved in the cache file.

### Set iSCSI Boot Configuration Target Parameters

To save user-provided iSCSI boot configuration target parameters information for a specified Marvell Adapter (3400/8400 Series) port to a temporary cache file, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg settgtparams
```

#### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg settgtparams [cmd options]
```

#### Keywords

```
-l|--boot-lun <long> = Boot LUN  
-d|--chap-id <str> = Target CHAP ID  
-w|--chap-secret <str> = Target CHAP secret  
-c|--connect <str> = Connect  
-i|--identifier <str> = Port identifier (required)  
-a|--ip-address <str> = Target IP address a  
-q|--iscsi-name <str> = Target iSCSI name  
-n|--target-number <long> = Target number (required)  
-p|--tcp-port <long> = TCP port
```

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
chap-id	Target CHAP IP string
chap-secret	Target CHAP password string
ip-address	Target IP address <sup>a</sup>
iscsi-name	Target IQN string
target-number	Target number whose parameter to be set (0–1)
connect	Enabled, Disabled
boot-lun	Boot LUN (0–65535)

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

---

### NOTE

To set target parameters, the target *must* be enabled (connect=Enabled).

---

### Example

The following example shows the port iscsibootcfg settgtparams command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg settgtparams -i  
Port_27_0_0 -n 1 -c Enabled
```

The following example shows the port iscsibootcfg settgtparams command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
iscsibootcfg settgtparams -i Port_27_0_0 -n1 -c Enabled
```

The output for both commands is:

```
iSCSI Boot Configuration:  
  ISCSIBoot Info:  
    Boot Targets:  
    Connect: Enabled  
    Target Boot LUN: 5  
    Target Chap Id:  
    Target Chap Secret:  
    Target IPAddress: 192.168.100.227  
    Target Iscsi Name:  
    Target Number: 0
```

### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

```
Target Tcp Port: 3260
Connect: Enabled
Target Boot LUN: 0
Target Chap Id:
Target Chap Secret:
Target IPAddress: 0.0.0.0
Target Iscsi Name:
Target Number: 1
Target Tcp Port: 3260
General Parameters:
Boot To Iscsi Target: Enabled
Chap Authentication: Disabled
Dhcp Vendor Id: BCM
Hba Boot Mode: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Disabled
Link Up Delay Time: 55
Lun Busy Retry Count: 0
Target As First HDD: Disabled
Tcp Ip Parameters Via DHCP: Enabled
Use Tcp Timestamp: Disabled
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 192.168.100.225
Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Mpio Parameters:
MACAddress: 00:00:00:00:00:00
Mpio Mode: Enabled
Use Independent Target Name: Disabled
Use Independent Target Portal: Enabled
Message: Success
```

The output displayed is combination of existing settings and user modified settings saved in the cache file. The same data is present in the cache file.

## Set iSCSI Boot Configuration MPIO Parameters

To save user-provided iSCSI boot configuration MPIO parameters information for a specified Marvell Adapter (3400/8400 Series) port to a temporary cache file, issue the following command:

```
~# esxcli qlfastling qcc port iscsibootcfg setmpioparams
```

### Syntax

```
esxcli qlfastling qcc port iscsibootcfg setmpioparams [cmd options]
```

### Keywords

- i|--identifier <str> = Port identifier (required)
- n|--ind-target-name <str> = Use independent target name
- p|--ind-target-portal <str> = Use independent target portal
- a|--mpio-mac-address <str> = MAC address <sup>a</sup>
- m|--mpio-mode <str> = MPIO mode

<sup>a</sup> Address must use colons (:) to separate segments.

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
mpio-mode	Enabled, Disabled
ind-target-portal	Enabled, Disabled
ind-target-name	Enabled, Disabled
mpio-mac-address	MPIO MAC address <sup>a</sup>

<sup>a</sup> Address must use colons (:) to separate segments.

---

### NOTE

To set MPIO parameters, the MPIO mode *must* be enabled (mpio-mode=Enabled).

---

### Example

The following example shows the `port iscsibootcfg setmpioparams` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg setmpioparams -i  
Port_27_0_0 -m Enabled
```

The following example shows the `port iscsibootcfg setmpioparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
iscsibootcfg setmpioparams -i Port_27_0_0 -m Enabled
```

The output for both commands is:

```
iSCSI Boot Configuration:  
  ISCSIBoot Info:  
    Boot Targets:  
      Connect: Enabled  
      Target Boot LUN: 5  
      Target Chap Id:  
      Target Chap Secret:  
      Target IPAddress: 192.168.100.227  
      Target Iscsi Name:  
      Target Number: 0  
      Target Tcp Port: 3260  
  
      Connect: Enabled  
      Target Boot LUN: 0  
      Target Chap Id:  
      Target Chap Secret:  
      Target IPAddress: 0.0.0.0  
      Target Iscsi Name:  
      Target Number: 1  
      Target Tcp Port: 3260  
    General Parameters:  
      Boot To Iscsi Target: Enabled  
      Chap Authentication: Disabled  
      Dhcp Vendor Id: BCM  
      Hba Boot Mode: Disabled  
      Ip Version: IPv4  
      Iscsi Parameters Via DHCP: Disabled  
      Link Up Delay Time: 55  
      Lun Busy Retry Count: 0  
      Target As First HDD: Disabled  
      Tcp Ip Parameters Via DHCP: Enabled  
      Use Tcp Timestamp: Disabled  
    Initiator Parameters:  
      Default Gateway: 0.0.0.0
```

```
Initiator Chap Id:  
Initiator Chap Secret:  
Initiator IPAddress: 192.168.100.225  
Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot  
Primary DNS: 0.0.0.0  
Secondary DNS: 0.0.0.0  
Subnet Mask: 0.0.0.0  
Mpio Parameters:  
MACAddress: 00:00:00:00:00:00  
Mpio Mode: Enabled  
Use Independent Target Name: Disabled  
Use Independent Target Portal: Enabled  
Message: Success
```

The command output contains a combination of existing settings and user-modified settings saved in the cache file.

## Set iSCSI Boot Configuration

To import user-provided iSCSI boot configuration information for a specified Marvell Adapter (3400/8400 Series) port from a temporary cache file to flash, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg set
```

The `iscsibootcfg set` command fails if a cache file is not present. On successful completion of this command, the cache file is deleted.

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg set [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port iscsibootcfg set` command on a local host:

```
~# esxcli qlfastlinq qcc port iscsibootcfg set -i Port_27_0_0
```

The following example shows the `port iscsibootcfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port iscsibootcfg set -i Port_27_0_0
```

The output for both commands is:

iSCSI Boot Configuration:

ISCSIBoot Info:

Boot Targets:

Connect: Enabled

Target Boot LUN: 5

Target Chap Id:

Target Chap Secret:

Target IPAddress: 192.168.100.227

Target Iscsi Name:

Target Number: 0

Target Tcp Port: 3260

Connect: Disabled

Target Boot LUN: 0

Target Chap Id:

Target Chap Secret:

Target IPAddress: 0.0.0.0

Target Iscsi Name:

Target Number: 1

Target Tcp Port: 0

General Parameters:

Boot To Iscsi Target: Enabled

Chap Authentication: Disabled

Dhcp Vendor Id: BCM

Hba Boot Mode: Disabled

Ip Version: IPv4

Iscsi Parameters Via DHCP: Disabled

Link Up Delay Time: 0

Lun Busy Retry Count: 0

Target As First HDD: Disabled

Tcp Ip Parameters Via DHCP: Enabled

Use Tcp Timestamp: Disabled

Initiator Parameters:

Default Gateway: 0.0.0.0

Initiator Chap Id:

Initiator Chap Secret:

Initiator IPAddress: 192.168.100.225

Initiator Iscsi Name: iqn.1995-05.com.broadcom.iscsiboot

Primary DNS: 0.0.0.0



```
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Mpio Parameters:
MACAddress: 00:00:00:00:00:00
Mpio Mode: Enabled
Use Independent Target Name: Disabled
Use Independent Target Portal: Enabled
Message: Success
Reboot Required: true
```

The output shows the new setting, which will be active after reboot if command is successful.

## Adapter Port iSCSI Boot Configuration (41000/45000 Series)

The following command performs iSCSI boot configuration operations on 41000/45000 Series adapters:

```
~# esxcli qlfastlinq qcc port iscsibootcfg579xx
```

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg579xx {cmd} [cmd options]
```

### Available Commands

get

Shows iSCSI boot configuration information for a specified Marvell Adapter (41000/45000 Series) port. See [Get iSCSI Boot Configuration](#).

setgenparams

Saves iSCSI boot configuration general parameters in a file for a specified Marvell Adapter (41000/45000 Series) port. See [Set iSCSI Boot Configuration General Parameters](#).

setinitparams

Saves iSCSI boot configuration initiator parameters in a file for a specified Marvell Adapter (41000/45000 Series) port. See [Set iSCSI Boot Configuration Initiator Parameters](#).

settgtparams

Saves iSCSI boot configuration target parameters in a file for a specified Marvell Adapter (41000/45000 Series) port. See [Set iSCSI Boot Configuration Target Parameters](#).

set

Imports iSCSI boot configuration information for a specified Marvell Adapter (41000/45000 Series) port. See [Set iSCSI Boot Configuration](#).

## Get iSCSI Boot Configuration

To show iSCSI boot configuration information for a specified Marvell Adapter (41000/45000 Series) port, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg579xx get
```

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg579xx get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

### Example

The following example shows the `port iscsibootcfg579xx get` command on a local host:

```
~# esxcli qlfastlinq qcc port iscsibootcfg579xx get -i Port_17_0_0
```

The following example shows the `port iscsibootcfg579xx get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port iscsibootcfg579xx get -i Port_17_0_0
```

The output for both commands is:

```
iSCSI Boot Configuration:
  ISCSIBoot Info:
    Boot Targets:
      Connect: Enabled
      Target Boot LUN: 0
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 0.0.0.0
      Target Iscsi Name:
      Target Number: 0
      Target Tcp Port: 3260

    Connect: Enabled
    Target Boot LUN: 0
    Target Chap Id:
    Target Chap Secret:
    Target IPAddress: 0.0.0.0
    Target Iscsi Name:
```

```
Target Number: 1
Target Tcp Port: 3260
General Parameters:
Address Redirect: Disabled
Boot Mode: Non-Offload
Boot Protocol: None
Chap Authentication: Disabled
Dhcp Request Timeout: 60
Dhcp Vendor Id: QLGC
IPv4Fallback: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Enabled
Mutual Chap: Disabled
Target Login Timeout: 60
Tcp Ip Parameters Via DHCP: Enabled
Vlan: Enabled
Vlan Id: 5976
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 0.0.0.0
Initiator Iscsi Name:
iqn.1994-02.com.qlogic.iscsi:fastlingboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Message: Success
```

### Set iSCSI Boot Configuration General Parameters

To save user-provided iSCSI boot configuration general parameters information for a specified Marvell Adapter (41000/45000 Series) port to a temporary cache file, issue the following command:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx setgenparams
```

#### Syntax

```
esxcli qlfastling qcc port iscsibootcfg579xx setgenparams [cmd
options]
```

## Keywords

-e|--address-redirect <str> = Address redirect  
-m|--boot-mode <str> = Boot mode  
-o|--boot-protocol <str> = Boot protocol  
-a|--chap-authentication <str> = CHAP authentication  
-r|--dhcp-request-timeout <long> = DHCP request timeout  
-d|--dhcp-vendor-id <str> = DHCP vendor ID  
-i|--identifier <str> = Port identifier (required)  
-f|--ipv4-fallback <str> = IPv4 fallback  
-v|--ip-version <str> = IP version  
-s|--iscsi-via-dhcp <str> = iSCSI parameters via DHCP  
-u|--mutual-chap <str> = Mutual CHAP  
-g|--target-login-timeout <long> = Target login timeout  
-c|--tcpip-via-dhcp <str> = TCP/IP parameters via DHCP  
-n|--vlan <str> = VLAN  
-l|--vlan-id <long> = VLAN ID

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
address-redirect	Enabled, Disabled
chap-authentication	Enabled, Disabled
ipv4-fallback	Enabled, Disabled
iscsi-via-dhcp	Enabled, Disabled
mutual-chap	Enabled, Disabled
tcpip-via-dhcp	Enabled, Disabled
vlan	Enabled, Disabled
boot-mode	Offload, Non-Offload
boot-protocol	iSCSI, None
dhcp-vendor-id	String value

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
ip-version	IPv4, IPv6
dhcp-request-timeout	Integer value (0-65535)
target-login-timeout	Integer value (0-65535)
vlan-id	Integer value (0-4094)

### Example

The following example shows the `port iscsibootcfg579xx setgenparams` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx setgenparams -i Port_17_0_0 -e Disabled
```

The following example shows the `port iscsibootcfg579xx setgenparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port iscsibootcfg579xx setgenparams -i Port_17_0_0 -e Disabled
```

The output for both commands is:

```
iSCSI Boot Configuration:
  ISCSIBoot Info:
    Boot Targets:
      Connect: Enabled
      Target Boot LUN: 0
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 0.0.0.0
      Target Iscsi Name:
      Target Number: 0
      Target Tcp Port: 3260

      Connect: Enabled
      Target Boot LUN: 0
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 0.0.0.0
      Target Iscsi Name:
      Target Number: 1
      Target Tcp Port: 3260
    General Parameters:
      Address Redirect: Disabled
```

```
Boot Mode: Non-Offload
Boot Protocol: None
Chap Authentication: Disabled
Dhcp Request Timeout: 60
Dhcp Vendor Id: QLGC
IPv4Fallback: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Enabled
Mutual Chap: Disabled
Target Login Timeout: 60
Tcp Ip Parameters Via DHCP: Enabled
Vlan: Enabled
Vlan Id: 5976
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 0.0.0.0
Initiator Iscsi Name:
iqn.1994-02.com.qlogic.iscsi:fastlingboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Message: Success
```

The command output contains a combination of existing settings and user-modified settings saved in the cache file.

### Set iSCSI Boot Configuration Initiator Parameters

To export user-provided iSCSI boot configuration initiator parameters information for a specified Marvell Adapter (41000/45000 Series) port from a temporary cache file, issue the following command:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx setinitparams
```

#### Syntax

```
esxcli qlfastling qcc port iscsibootcfg579xx setinitparams [cmd
options]
```

#### Keywords

```
-c|--chap-id <str> = Initiator CHAP ID
-w|--chap-secret <str> = Initiator CHAP secret
```

```
-g|--default-gateway <str> = Initiator gateway address a  
  -i|--identifier <str> = Port identifier (required)  
  -a|--ip-address <str> = Initiator IP address a  
  -q|--iscsi-name <str> = Initiator iSCSI name  
  -p|--primary-dns <str> = Primary DNS address a  
  -d|--secondary-dns <str> = Secondary DNS address a  
  -m|--subnet-mask <str> = Initiator subnet mask address a
```

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
chap-id	CHAP ID string
chap-secret	CHAP password string
ip-address	Initiator IP address <sup>a</sup>
subnet-mask	Initiator subnet mask <sup>a</sup>
default-gateway	Initiator default gateway <sup>a</sup>
iscsi-name	Initiator iSCSI qualified name (IQN)
primary-dns	Primary DNS address <sup>a</sup>
secondary-dns	Secondary DNS address <sup>a</sup>

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

### Example

The following example shows the `port iscsibootcfg579xx setinitparams` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx setinitparams -i  
Port_17_0_0 -a 192.169.100.224
```

The following example shows the `port iscsibootcfg579xx setinitparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
iscsibootcfg579xx setinitparams -i Port_17_0_0 -a 192.168.100.224
```

The output for both commands is:

```
iSCSI Boot Configuration:  
  ISCSIBoot Info:  
    Boot Targets:
```

### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

```
Connect: Enabled
Target Boot LUN: 0
Target Chap Id:
Target Chap Secret:
Target IPAddress: 0.0.0.0
Target Iscsi Name:
Target Number: 0
Target Tcp Port: 3260
```

```
Connect: Enabled
Target Boot LUN: 0
Target Chap Id:
Target Chap Secret:
Target IPAddress: 0.0.0.0
Target Iscsi Name:
Target Number: 1
Target Tcp Port: 3260
General Parameters:
Address Redirect: Disabled
Boot Mode: Non-Offload
Boot Protocol: None
Chap Authentication: Disabled
Dhcp Request Timeout: 60
Dhcp Vendor Id: QLGC
IPv4Fallback: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Enabled
Mutual Chap: Disabled
Target Login Timeout: 60
Tcp Ip Parameters Via DHCP: Enabled
Vlan: Enabled
Vlan Id: 5976
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 192.169.100.224
Initiator Iscsi Name:
iqn.1994-02.com.qlogic.iscsi:fastlinqboot
Primary DNS: 0.0.0.0
```



```
Secondary DNS: 0.0.0.0  
Subnet Mask: 0.0.0.0  
Message: Success
```

The command output contains a combination of existing settings and user-modified settings saved in the cache file.

## Set iSCSI Boot Configuration Target Parameters

To save user-provided iSCSI boot configuration target parameters information for a specified Marvell Adapter (41000/45000 Series) port to a temporary cache, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg579xx settgtparams
```

### Syntax

```
esxcli qlfastlinq qcc port iscsibootcfg579xx settgtparams [cmd  
options]
```

### Keywords

```
-l|--boot-lun <long> = Boot LUN  
-d|--chap-id <str> = Target CHAP ID  
-w|--chap-secret <str> = Target CHAP secret  
-c|--connect <str> = Connect  
-i|--identifier <str> = Port identifier (required)  
-a|--ip-address <str> = Target IP address a  
-q|--iscsi-name <str> = Target iSCSI name  
-n|--target-number <long> = Target number (required)  
-p|--tcp-port <long> = TCP port
```

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

<b><u>Parameter</u></b>	<b><u>Values (strings are case-sensitive)</u></b>
identifier	Port identifier from the port list command
chap-id	Target CHAP IP string
chap-secret	Target CHAP password string
ip-address	Target IP address <sup>a</sup>
iscsi-name	Target IQN name string

<u>Parameter</u>	<u>Values (strings are case-sensitive)</u>
target-number	Target number (0-1)
tcp-port	Target TCP Port (0-65535)
connect	Enabled, Disabled
boot-lun	Boot LUN number (0-65535)

<sup>a</sup> Addresses can contain either periods (.) or colons (:) to separate segments.

---

### NOTE

To set target parameters, the target *must* be enabled (connect=Enabled).

---

### Example

The following example shows the `port iscsibootcfg579xx settgtparams` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx settgtparams -i  
Port_17_0_0 -c Enabled -n 0
```

The following example shows the `port iscsibootcfg579xx settgtparams` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
iscsibootcfg579xx settgtparams -i Port_17_0_0 -c Enabled -n 0
```

The output for both commands is:

```
iSCSI Boot Configuration:  
  ISCSIBoot Info:  
    Boot Targets:  
    Connect: Enabled  
    Target Boot LUN: 0  
    Target Chap Id:  
    Target Chap Secret:  
    Target IPAddress: 0.0.0.0  
    Target Iscsi Name:  
    Target Number: 0  
    Target Tcp Port: 3260  
  
    Connect: Enabled  
    Target Boot LUN: 0  
    Target Chap Id:  
    Target Chap Secret:
```

```
Target IPAddress: 0.0.0.0
Target Iscsi Name:
Target Number: 1
Target Tcp Port: 3260
General Parameters:
Address Redirect: Disabled
Boot Mode: Non-Offload
Boot Protocol: None
Chap Authentication: Disabled
Dhcp Request Timeout: 60
Dhcp Vendor Id: QLGC
IPv4Fallback: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Enabled
Mutual Chap: Disabled
Target Login Timeout: 60
Tcp Ip Parameters Via DHCP: Enabled
Vlan: Enabled
Vlan Id: 5976
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 192.169.100.224
Initiator Iscsi Name:
iqn.1994-02.com.qlogic.iscsi:fastlinqboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Message: Success
```

The command output contains a combination of existing settings and user-modified settings saved in the cache file.

### Set iSCSI Boot Configuration

To import user-provided iSCSI boot configuration information for a specified Marvell Adapter (41000/45000 Series) port from a temporary cache file to flash, issue the following command:

```
~# esxcli qlfastlinq qcc port iscsibootcfg579xx set
```

The `set` command fails if the cache file is not present. On successful completion of the command, the cache file is deleted.

## Syntax

```
esxcli qlfastling qcc port iscsibootcfg579xx set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` command.

## Example

The following example shows the `port iscsibootcfg set` command on a local host:

```
~# esxcli qlfastling qcc port iscsibootcfg579xx set -i Port_17_0_0
```

The following example shows the `port iscsibootcfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port iscsibootcfg set -i Port_27_0_0
```

The output for both commands is:

```
iSCSI Boot Configuration:
  ISCSIBoot Info:
    Boot Targets:
      Connect: Enabled
      Target Boot LUN: 0
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 0.0.0.0
      Target Iscsi Name:
      Target Number: 0
      Target Tcp Port: 3260

      Connect: Enabled
      Target Boot LUN: 0
      Target Chap Id:
      Target Chap Secret:
      Target IPAddress: 0.0.0.0
      Target Iscsi Name:
      Target Number: 1
      Target Tcp Port: 3260
    General Parameters:
      Address Redirect: Disabled
      Boot Mode: Non-Offload
      Boot Protocol: None
```

```
Chap Authentication: Disabled
Dhcp Request Timeout: 60
Dhcp Vendor Id: QLGC
IPv4Fallback: Disabled
Ip Version: IPv4
Iscsi Parameters Via DHCP: Enabled
Mutual Chap: Disabled
Target Login Timeout: 60
Tcp Ip Parameters Via DHCP: Enabled
Vlan: Enabled
Vlan Id: 5976
Initiator Parameters:
Default Gateway: 0.0.0.0
Initiator Chap Id:
Initiator Chap Secret:
Initiator IPAddress: 192.169.100.224
Initiator Iscsi Name:
iqn.1994-02.com.qlogic.iscsi:fastlingboot
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0
Subnet Mask: 0.0.0.0
Message: Success
Reboot Required: true
```

The command output shows the new settings, which are active after reboot if command is successful.

## Adapter Port MBA Boot Configuration Namespace Commands and Sub-namespaces

Use the commands in this section to perform Multi-Boot Agent (MBA) boot configuration operations on 3400/8400 Series and 41000/45000 Series Adapter ports.

```
~# esxcli qlfastling qcc port mbabootcfg
```

### Syntax

```
esxcli qlfastling qcc port mbabootcfg {cmd} [cmd options]
```

### Available Commands

get

Shows MBA boot configuration information about the specified Marvell Adapter port. See [Get MBA Boot Configuration](#).

set  
Sets MBA boot configuration information about the specified Marvell Adapter port.  
See [Set MBA Boot Configuration](#).

## Get MBA Boot Configuration

To show MBA boot configuration information for a specified 3400/8400 Series or 41000/45000 Series Adapter port, issue the following command:

```
~# esxcli qlfastling qcc port mbabootcfg get
```

### Syntax

```
esxcli qlfastling qcc port mbabootcfg get [cmd options]
```

### Keywords

-i|--identifier <str> = Port identifier (required). Obtain the identifier from the `port list` command.

### Example

The following example shows the `port mbabootcfg get` command on a local host:

```
~# esxcli qlfastling qcc port mbabootcfg get -i Port_17_0_0
```

The following example shows the `port mbabootcfg get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port mbabootcfg get -i Port_17_0_0
```

The output for both commands is:

```
MBA Boot Configuration:
```

```
  MBABoot Info:
```

```
    Banner Message Timeout: 15
```

```
    Boot Protocol: None
```

```
    Boot Retry Count: 0
```

```
    Boot Strap Type: Auto
```

```
    Hide Setup Prompt: Disabled
```

```
    Link Speed: 40_Gbps
```

```
    Option ROM: Enabled
```

```
    Preboot Wakeon LAN: Disabled
```

```
    Setup Key Stroke: Ctrl-S
```

```
    VLANMode: Disabled
```

```
    VLANID: 1
```

```
  Message: Success
```

## Set MBA Boot Configuration

To configure MBA boot information for a specified 3400/8400 Series or 41000/45000 Series Adapter port, issue the following command:

```
~# esxcli qlfastling qcc port mbabootcfg set
```

### Syntax

```
esxcli qlfastling qcc port mbabootcfg set [cmd options]
```

### Keywords

- n|--banner-msg-timeout <long> = Banner message timeout
  - p|--boot-protocol <str> = Boot protocol
- c|--boot-retry-count <long> = Boot retry count
  - y|--boot-strap-type <str> = Boot strap type
- e|--hide-setup-prompt <str> = Hide setup prompt
  - i|--identifier <str> = Port identifier (required)
  - s|--link-speed <str> = Link speed
  - o|--option-rom <str> = Option ROM
  - w|--pre-boot-wol <str> = Pre-boot wake on LAN
- k|--setup-key-stroke <str> = Setup Key Stroke
  - d|--vlan-id <long> = VLAN ID
  - m|--vlan-mode <str> = VLAN mode

### Parameter

### Values (strings are case-sensitive)

identifier	Port identifier from the port <code>list</code> command
option-rom	Enabled, Disabled
boot-protocol	For 3400/8400 Series adapters: None, PXE, iBFT, iSCSI, FCoE, RPL For 41000/45000 Series adapters: None, PXE, iBFT
boot-strap-type	Int_19h, Int_18h, BBS, Auto
hide-setup-prompt	Enabled, Disabled
setup-key-stroke	Ctrl-B, Ctrl-S
banner-message-timeout	Integer value (1–15)
link-speed	For 3400/8400 Series adapters: 1_Gbps, 10_Gbps For 41000/45000 Series adapters: 10_Gbps, 25_Gbps, 40_Gbps, 50_Gbps, 100_Gbps, Auto_Neg

<u>Parameter</u>	<u>Values (strings are case-sensitive)</u>
pre-boot-wol	Enabled, Disabled
vlan-mode	Enabled, Disabled
vlan-id	Integer value (1-4094)
boot-retry-count	Integer value (1-64)

### Example

The following example shows the `port mbabootcfg set` command on a local host:

```
~# esxcli qlfastling qcc port mbabootcfg set -i Port_17_0_0 -n 13
```

The following example shows the `port mbabootcfg set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port mbabootcfg set -i Port_17_0_0 -n 13
```

The output for both commands is:

```
MBA Boot Configuration:
```

```
  MBABoot Info:
```

```
    Banner Message Timeout: 13
```

```
    Boot Protocol: None
```

```
    Boot Retry Count: 0
```

```
    Boot Strap Type: Auto
```

```
    Hide Setup Prompt: Disabled
```

```
    Link Speed: 40_Gbps
```

```
    Option ROM: Enabled
```

```
    Preboot Wakeon LAN: Disabled
```

```
    Setup Key Stroke: Ctrl-S
```

```
    VLANMode: Disabled
```

```
    VLANID: 1
```

```
  Message: Success
```

```
  Reboot Required: true
```

The output shows the new settings, which will be active after a reboot if the command is successful.



## Adapter Port Diagnostics Namespace Commands and Sub-namespaces

Use the commands in this section to perform diagnostics on 3400/8400 Series and 41000/45000 Series Adapter ports.

```
~# esxcli qlfastling qcc port diag
```

### Syntax

```
esxcli qlfastling qcc port diag {cmd} [cmd options]
```

### Available Commands

test

Runs diagnostics tests on the identified Marvell Adapter port. See [Run Port Diagnostics Test](#).

### Run Port Diagnostics Test

To run port diagnostic tests for a specified Marvell Adapter 3400/8400 Series or 41000/45000 Series port, issue the following command:

```
~# esxcli qlfastling qcc port diag test
```

### Syntax

```
esxcli qlfastling qcc port diag test [cmd options]
```

### Keywords

- n|--diag-test-name <str> = Diagnostic test command (required)
- i|--identifier <str> = Port identifier (vmnic) (required). Obtain the identifier from the `port list` command output.
- l|--led-interval <long> = LED Interval (for LED test only)
- c|--test-iterations <long> = Number of test iterations (required)

<u>Parameter</u>	<u>Values (strings are case-sensitive)</u>
identifier	Port identifier from port list command
diag-test-name	ControlRegisters, InternalMemory, EEPROM, Interrupt, LoopbackPHY, LoopbackMAC, LED
test-iterations	Integer value (1-255)
led-interval	Integer value (5-100 seconds) (default = 5)

### Example

The following example shows the `port diag test` command on a local host:

```
~# esxcli qlfastling qcc port diag test -i Port_17_0_0 -n LED -c 2 -l 10
```

The following example shows the `port diag test` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port diag test -i Port_17_0_0 -n LED -c 2 -l 10
```

The output for both commands is:

```
Diagnostic Test Result:  
  Message: Success  
  Test Name: LED
```

## Adapter Port DCBX Namespace Commands and Sub-namespaces

The following command performs DCBX operations on 3400/8400 Series and 41000/45000 Series Adapters:

```
~# esxcli qlfastling qcc port dcbx
```

### Syntax

```
esxcli qlfastling qcc port dcbx {cmd} [cmd options]
```

### Available Commands

`get`

Shows DCBX information for the specified Marvell Adapter port. See [Get DCBX Port Information](#).

### Get DCBX Port Information

To show DCBX data for a specified 3400/8400 Series or 41000/45000 Series Adapter port, issue the following command:

```
~# esxcli qlfastling qcc port dcbx get
```

### Syntax

```
esxcli qlfastling qcc port dcbx get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` command output.

### Example

The following example shows the `port dcbx get` command on a local host:

```
~# esxcli qlfastling qcc port dcbx get -i Port_132_0_0
```

The following example shows the `port dcbx get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port  
dcbx get -i Port_132_0_0
```

The output for both commands is:

DCBX Information:

Dcbx Info:

```
DCB: Enabled  
Dcb Protocol: Auto  
Dcbx Advanced:  
Local MIB:  
Configuration Mismatch: Disabled  
ETS: Disabled  
Fcoe PGID: NA  
Fcoe PRI: NA  
Iscsi PGID: NA  
Iscsi PRI: NA  
Networking PGID: 0  
Networking PRI: 0  
PFC: Disabled  
PGID_0_BW: 0  
PGID_1_BW: 0  
PGID_2_BW: 0  
PGID_3_BW: 0  
PGID_4_BW: 0  
PGID_5_BW: 0  
PGID_6_BW: 0  
PGID_7_BW: 0  
Pfc Disabled On Priorities: 0 1 2 3 4 5 6 7  
Pfc Enabled On Priorities:  
Remote MIB:  
Remote Application Priority Willing: Enabled  
Remote Ets Recommendation Valid: Disabled  
Remote Ets Willing: Enabled  
Remote Fcoe PGID: NA  
Remote Fcoe PRI: NA
```

```
Remote Iscsi PGID: NA
Remote Iscsi PRI: NA
Remote Networking PGID: 0
Remote PGID_0_BW: 50
Remote PGID_1_BW: 50
Remote PGID_2_BW: 0
Remote PGID_3_BW: 0
Remote PGID_4_BW: 0
Remote PGID_5_BW: 0
Remote PGID_6_BW: 0
Remote PGID_7_BW: 0
Remote Pfc Disabled On Priorities: 0 1 2 4 5 6 7
Remote Pfc Enabled On Priorities: 3
Remote Pfc Willing: Enabled
Enhanced Transmission Selection: Not Operational
Priority Flow Control: Not Operational
Priority Flow Control Values:
Priority Group Bandwidth:
Priority Tagging: Not Operational
Priority Tagging Values:
Priority To Priority Group Mapping:
Message: Success
```

## Adapter Port Link Settings (SmartAN) Namespace Commands and Sub-namespaces

The following command performs link setting (Marvell Smart autonegotiation (SmartAN™)) operations on the 41000/45000 Series Adapters:

```
~# esxcli qlfastlinq qcc port linkSettings
```

### Syntax

```
esxcli qlfastlinq qcc port linkSettings {cmd} [cmd options]
```

### Available Commands

get

Shows link settings (SmartAN) information for the specified Marvell Adapter port. See [Get Port Link Settings Information](#).

set

Configures link settings (SmartAN) information for the specified Marvell Adapter port. See [Set Port Link Settings Information](#).

## Get Port Link Settings Information

To view port link settings (SmartAN) for a specified 41000/45000 Series adapter port, issue the following command:

```
~# esxcli qlfastlingq qcc port linkSettings get
```

### Syntax

```
esxcli qlfastlingq qcc port linkSettings get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` command output.

### Example

The following example shows the `port linkSettings get` command on a local host:

```
~# esxcli qlfastlingq qcc port linkSettings get -i Port_13_0_0
```

The following example shows the `port linkSettings get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlingq qcc port linkSettings get -i Port_13_0_0
```

The output for both commands is:

```
LinkSettings:
```

```
  Link Settings Info:
```

```
    Current Value: SmartAN
```

```
    Description: SmartAN(TM) Mode
```

```
    Name: SmartAN
```

```
    Supported Values: SmartAN,Advanced_Link_Settings
```

```
  Message: Success
```

The output depends upon the current mode of the port link settings.

## Set Port Link Settings Information

To configure port link settings (SmartAN) for a specified 41000/45000 Series Adapter port, issue the following command:

```
~# esxcli qlfastlingq qcc port linkSettings set
```

### Syntax

```
esxcli qlfastlingq qcc port linkSettings set [cmd options]
```

## Keywords

- i|--identifier <str> = Port identifier (vmnic) (required). Obtain the identifier from the `port list` command output.
- n|--name=<str> = Parameter name (required)
- v|--value=<str> = Parameter value from list of supported values provided in the `get` command (required)

## Example

The following example shows the `port linkSettings set` command on a local host:

```
~# esxcli qlfastlinq qcc port linkSettings set -i Port_13_0_0 -n SmartAN -v Advanced_Link_Settings
```

The following example shows the `port linkSettings set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc port linkSettings set -i Port_13_0_0 -n SmartAN -v Advanced_Link_Settings
```

The output for both commands is:

LinkSettings:

Link Settings Info:

Current Value: Advanced\_Link\_Settings

Description: SmartAN(TM) Mode

Name: SmartAN

Supported Values: SmartAN,Advanced\_Link\_Settings

Current Value: AutoNeg

Description: NVM Speed

Name: NVM

Supported Values: Unknown,AutoNeg,1G,10G

Current Value: None

Description: FEC An Mode

Name: FECAnMode

Supported Values: None,10G\_Firecode,ALL

Message: Success

Reboot Required: true

The new settings will be active after reboot.

The output depends upon current mode of the port link settings.

The `linkSettings` are on a per-port basis for the 41000 Series Adapter. For 45000 Series Adapters, the same settings are written on all ports of the same adapter.

## Adapter Port DMI Namespace Commands and Sub-namespaces

The port desktop management interface (DMI) command displays small form-factor pluggable (SFP) DMI information for the 41000/45000 Series SFP-based adapters when optics/DAC is connected. This command is not supported on BASE-T interfaced 41000/45000 Series adapters nor on any 3400/8400 (578xx) Series adapters.

```
~# esxcli qlfastling qcc port dmi
```

### Syntax

```
esxcli qlfastling qcc port dmi {cmd} [cmd options]
```

### Available Commands

`get`

Shows SFP DMI information for the specified Marvell Adapter port. See [Get Port Link Settings Information](#).

### Get Port DMI Information

To view SFP DMI data for the adapters, issue the following command:

```
~# esxcli qlfastling qcc port dmi get
```

### Syntax

```
esxcli qlfastling qcc port dmi get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` command output.

### Example

The following example shows the `port dmi get` command on a local host:

```
~# esxcli qlfastling qcc port dmi get -i Port_8_0_0
```

The following example shows the `port dmi get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc port dmi get -i Port_8_0_0
```

### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

The output for both commands is:

DMI Information:

  Dmi Info:

    Dmi Data:

-----  
Media Information  
-----

  Vendor: Amphenol

    Type: 100Gbit/Secor25Gbit/Sec

  Part Number: NDAQGJ-0005

    Speed: 100 Gbit/Sec or 25 Gbit/Sec

  Revision: D

  Serial Number: APF16200057E0V  
-----

Optical Transceiver Digital Diagnostic Data:

Address A0

  Identifier: SFP

  Ext Identifier: GBIC/SFP defined by serial ID only

  Connector:

  Ethernet Speed:

    Compliance: 0x00 0x00 0x00

  FC Link Length:

  FC Transmitter Tech: Copper Passive (IR1/IR2) Electrical Intra-Enclosure (EL)

FC Transmission Media:

  FC Speed:

  Encoding:

    BR, Nominal: 0xff

  Length (9um) - km: 0x00

    Length (9um): 0x00

    Length (50um): 0x00

    Length (62.5um): 0x00

    Length (Copper): 0x05

  Vendor name: Amphenol

  Ext Ethernet Speed: 100 Gbit/Sec or 25 Gbit/Sec

  Vendor OUI: 0x78 0xa7 0x14



### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

```
Vendor PN: NDAQGJ-0005
Vendor rev: D
Wavelength: 0x0100
  CC_BASE: 0x17
  Options:-Signal Loss, as defined in SFP MSA: 0x0
          -Signal Loss, inverted from SFP MSA: 0x0
          -TX_FAULT signal implemented: 0x0
          -TX_DISABLE implemented and disables serial o/p: 0x0
          -RATE_SELECT implemented: 0x0
  BR, max: 0x67
  BR, min: 0x00
Vendor SN: APF16200057E0V
Date code: 160520
Diag Monitoring Type:-Address change required: 0x0
                    -Power Measurement: 0x0
                    -Externally Calibrated: 0x0
                    -Internally Calibrated: 0x0
                    -Digital diag monitoring: 0x0
                    -Legacy diagnostic: 0x0
Enhanced Options:-Soft RATE_SELECT ctrl and monitoring: 0x0
                 -Soft RX_LOS monitoring: 0x0
                 -Soft TX_FAULT monitoring: 0x0
                 -Soft TX_DISABLE ctrl and monitoring: 0x0
                 -Alarm/warning flags: 0x0
SFF-8472 Compliance: Digital diag not included or undefined
  CC_EXT: 0x4c
Vendor Specific: 0x41 0xff 0xff 0xff 0xff 0xff 0xff 0xff
                0xff 0xff 0xff 0xff 0xff 0xff 0xff 0xff
                0xff 0xff 0xff 0xff 0xff 0xff 0xff 0xff
                0xff 0xff 0xff 0xff 0xff 0xff 0xff 0xff

Address A2
  Temp High Alarm: 0x0000
  Temp Low Alarm: 0x0000
  Temp High Warning: 0x0000
  Temp Low Warning: 0x0000
  Voltage High Alarm: 0x0000
  Voltage Low Alarm: 0x0000
  Voltage High Warning: 0x0000
  Voltage Low Warning: 0x0000
```

### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

```
    Bias High Alarm: 0x0000
    Bias Low Alarm: 0x0000
    Bias High Warning: 0x0000
    Bias Low Warning: 0x0000
TX Signal Power High Alarm: 0x0000
TX Signal Power Low Alarm: 0x0000
TX Signal Power High Warning: 0x0000
TX Signal Power Low Warning: 0x0000
RX Signal Power High Alarm: 0x0000
RX Signal Power Low Alarm: 0x0000
RX Signal Power High Warning: 0x0000
RX Signal Power Low Warning: 0x0000
    Rx_PWR(4): 0x00000000
    Rx_PWR(3): 0x00000000
    Rx_PWR(2): 0x00000000
    Rx_PWR(1): 0x00000000
    Rx_PWR(0): 0x00000000
    Tx_I(Slope): 0x0000
    Tx_I(Offset): 0x0000
    Tx_PWR(Slope): 0x0000
    Tx_PWR(Offset): 0x0000
    T(Slope): 0x0000
    T(Offset): 0x0000
    V(Slope): 0x0000
    V(Offset): 0x0000
    Checksum: 0x00
Temperature MSB: 0x00
Temperature LSB: 0x00
    Vcc MSB: 0x00
    Vcc LSB: 0x00
    TX Bias MSB: 0x00
    TX Bias LSB: 0x00
    TX Power MSB: 0x00
    TX Power LSB: 0x00
    RX Power MSB: 0x00
    RX Power LSB: 0x00
    Reserved MSB: 0x00
    Reserved LSB: 0x00
    Reserved MSB: 0x00
```

### 3-Ethernet CLI Command Extensions

#### Adapter Port Namespace Commands and Sub-namespaces

---

```
Reserved LSB: 0x00
Status/Control Bits:-Data_Ready_Bar: 0x0
                    -LOS: 0x0
                    -TX Fault: 0x0
                    -Soft RX Rate Select: 0x0
                    -RX Rate Select State: 0x0
                    -Soft TX Disable: 0x0
                    -TX Disable State: 0x0
                    -TX Signal Power Low Alarm: 0x0
                    -TX Signal Power High Alarm: 0x0
                    -TX Bias Low Alarm: 0x0
                    -TX Bias High Alarm: 0x0
                    -Vcc Low Alarm: 0x0
                    -Vcc High Alarm: 0x0
                    -Temp Low Alarm: 0x0
                    -Temp High Alarm: 0x0
                    -RX Signal Power Low Alarm: 0x0
                    -RX Signal Power High Alarm: 0x0
                    -TX Signal Power Low Warning: 0x0
                    -TX Signal Power High Warning: 0x0
                    -TX Bias Low Warning: 0x0
                    -TX Bias High Warning: 0x0
                    -Vcc Low Warning: 0x0
                    -Vcc High Warning: 0x0
                    -Temp Low Warning: 0x0
                    -Temp High Warning: 0x0
                    -Reserved Warning: 0x0
                    -Reserved Warning: 0x0
                    -Reserved Warning: 0x0
                    -Reserved Warning: 0x0
                    -Reserved Warning: 0x0
                    -Reserved Warning: 0x0
                    -RX Signal Power Low Warning: 0x0
                    -RX Signal Power High Warning: 0x0
Vendor Specific: 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00
Message: Success
```

## Adapter NIC Namespace Commands and Sub-namespaces

To view NIC namespace and sub-namespace commands, issue the following:

```
~# esxcli qlfastlinq qcc nic
```

### Syntax

```
esxcli qlfastlinq qcc nic {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
advParams	QCC CLI for NIC advanced parameters
info	QCC CLI for operations on NIC information
stats	QCC CLI for NIC statistics

### Available Commands

list

Lists identifiers for the Marvell Adapter NICs discovered on the host. See [List NIC Ports](#).

### List NIC Ports

The `nic list` command lists all supported 3400/8400 Series and 41000/45000 Series NIC ports.

### Example

The following example shows the `nic list` command on a local host:

```
~# esxcli qlfastlinq qcc nic list
```

The following example shows the `nic list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc nic list
```

The output for both commands is:

Name	PCI Device	Driver	Link Status	Speed	Duplex	MAC Address	MTU	Description
vmnic8	0000:11:00.0	qedentv	Down	0	Full	00:0E:1E:C4:B2:D5	1500	FastLinQ QL45462H 40GbE Adapter rev10 (vmnic8)
vmnic9	0000:11:00.1	qedentv	Up	40000	Full	00:0E:1E:C4:B2:D6	1500	FastLinQ QL45462H 40GbE Adapter rev 10 (vmnic9)
vmnic4	0000:1b:00.0	bnx2x	Down	0	Half	00:0A:F7:73:74:10	1500	BCM57800 1/10 Gigabit Ethernet rev 10 (vmnic4)
vmnic5	0000:1b:00.1	bnx2x	Down	0	Half	00:0A:F7:73:74:11	1500	BCM57800 1/10 Gigabit Ethernet rev 10 (vmnic5)
vmnic6	0000:1b:00.2	bnx2x	Down	0	Half	00:0A:F7:73:74:12	1500	BCM57800 1/10 Gigabit Ethernet rev 10 (vmnic6)

```
vmnic7 0000:1b:00.3 bnx2x Down 0 Half 00:0A:F7:73:74:13 1500 BCM57800 1/10 Gigabit Ethernet  
rev 10 (vmnic7)
```

## Adapter NIC Information

```
~# esxcli qlfastlinq qcc nic info
```

### Syntax

```
esxcli qlfastlinq qcc nic info {cmd} [cmd options]
```

### Available Commands

get

Shows information about the specified Marvell Adapter NIC function. See [Get NIC Information](#).

## Get NIC Information

To view NIC information for the selected NIC device, issue the following command:

```
~# esxcli qlfastlinq qcc nic info get
```

### Syntax

```
esxcli qlfastlinq qcc nic info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = NIC identifier (vmnic) (required). Obtain the identifier from the `nic list` command output.

## Example

The following example shows the `nic info get` command on a local host:

```
~# esxcli qlfastlinq qcc nic info get -i vmnic9
```

The following example shows the `nic info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc nic  
info get -i vmnic9
```

The output for both commands is:

```
NIC Information:  
  Message: Success  
  NICInfo:  
    Driver Date: NA  
    Driver Name: qedentv  
    Driver Version: 3.0.6.6  
    Flow Control: Rx/Tx  
    Interface: Up
```

```
Link Speed In Mbps: 40000
MACAddress: 00:0E:1E:C4:B2:D6
MTU: 1500
Permanent MACAddress: 00:0E:1E:C4:B2:D6
```

## Adapter NIC Statistics

```
~# esxcli qlfastling qcc nic stats
```

### Syntax

```
esxcli qlfastling qcc nic stats {cmd} [cmd options]
```

### Available Commands

get

Shows statistics for the specified Marvell Adapter NIC function. [Get NIC Statistics](#).

## Get NIC Statistics

To view NIC statistics for the specified Marvell Adapter NIC function, issue the following command:

```
~# esxcli qlfastling qcc nic stats get
```

### Syntax

```
esxcli qlfastling qcc nic stats get [cmd options]
```

### Keywords

`-i|--identifier <str>` = NIC identifier (vmnic name) (required). Obtain the identifier from the `nic list` command output.

### Example

The following example shows the `nic stats get` command on a local host:

```
~# esxcli qlfastling qcc nic stats get -i vmnic9
```

The following example shows the `nic stats get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc nic
stats get -i vmnic9
```

The output for both commands is:

```
NIC Statistics:
```

```
Message: Success
```

```
NICStats:
```

```
Broadcast Frames Received: 0
```

```
Broadcast Frames Transmitted: 0
```

```
Carrier Sense Errors: 0
```

```
Deferred Transmissions: 0
Directed Frames Received: 0
Directed Frames Transmitted: 0
Excessive Collisions: 0
Fec Core Error: 0
Fec Mode: 0
Fec Reserved: 0
Fec Uncore Error: 0
Late Collisions: 0
Multicast Frames Received: 0
Multicast Frames Transmitted: 0
Multiple Collision Frames: 0
Octets Received: 16470171
Octets Transmitted: 0
Packets Received: 0
Packets Transmitted: 0
Receive Threshold Hits: 0
Single Collision Frames: 0
Total Receive Errors: 0
Total Transmit Errors: 0
Transmit Threshold Hits: 0
```

## Adapter NIC Advanced Parameters Namespace Commands and Sub-namespaces

The following command performs NIC advanced parameters operations on 3400/8400 Series Adapters and 41000/45000 Series Adapters:

```
~# esxcli qlfastlinq qcc nic advParams
```

### Syntax

```
esxcli qlfastlinq qcc advParams {cmd} [cmd options]
```

### Available Commands

get

Shows NIC advanced parameter information for the specified Marvell Adapter port. See [Get NIC Advanced Parameter Information](#).

set

Configures NIC advanced parameter information for the specified Marvell Adapter port. See [Set NIC Advanced Parameter Information](#).

## Get NIC Advanced Parameter Information

To view port NIC advanced parameter information for a specified 3400/8400/41000/45000 Series Adapter, issue the following command:

```
~# esxcli qlfastlingq qcc advParams get
```

### Syntax

```
esxcli qlfastlingq qcc advParams get [cmd options]
```

### Keywords

`-i|--identifier <str>` = NIC identifier (vmnic name) (required). Obtain the identifier from the `nic list` command output.

### Example

The following example shows the `nic advParams get` command on a local host:

```
~# esxcli qlfastlingq qcc nic advParams get -i vmnic0
```

The following example shows the `nic advParams get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlingq qcc nic  
advParams get -i vmnic0
```

The output for both commands is:

```
Advanced Params:
```

```
  Adv Params:
```

```
    Current Value: Disabled
```

```
    Default Value: Disabled
```

```
    Description: RoCE
```

```
    Name: RoCE
```

```
    Param Type: String-Enum
```

```
    String Max Length: NA
```

```
    Supported Values: Disabled
```

```
    Current Value: 0
```

```
    Default Value: 0
```

```
    Description: RoCE Current MTU
```

```
    Name: RoCECurrMTU
```

```
    Param Type: String-Enum
```

```
    String Max Length: NA
```

```
    Supported Values: 0
```

```
Message: Success
```



The output depends upon number of parameters supported by driver.

## Set NIC Advanced Parameter Information

To configure NIC advanced parameters for a specified 3400/8400 Series adapter, issue the following command:

```
~# esxcli qlfastlinq qcc nic advParams set
```

### Syntax

```
esxcli qlfastlinq qcc nic advParams set [cmd options]
```

### Keywords

- i|--identifier <str> = NIC identifier (vmnic name) (required). Obtain the identifier from the `nic list` command output.
- n|--name=<str> = Parameter name (required)
- v|--value=<str> = Parameter value from list of supported values provided in the `get` command (required)

### Example

The following example shows the `nic advParams set` command on a local host:

```
~# esxcli qlfastlinq qcc nic advParams set -i vmnic14 -n NvmDcbxCfg -v Enabled
```

The following example shows the `nic advParams set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc nic advParams set -i vmnic14 -n NvmDcbxCfg -v Enabled
```

The output for both commands is:

```
Advanced Params:
```

```
  Adv Params:
```

```
    Current Value: Disabled
```

```
    Default Value: Enabled
```

```
    Description: Nvm Dcbx Cfg
```

```
    Name: NvmDcbxCfg
```

```
    Param Type: String-Enum
```

```
    String Max Length: NA
```

```
    Supported Values: Disabled,Enabled
```

```
  Message: Success
```

```
  Reboot Required: true
```

The new settings will be active after reboot.

The current set of NIC advanced parameters for the 41000/45000 Series Adapters are read-only; for the 3400/8400 Series Adapters, they are read/write.

## Adapter FCoE Namespace Commands and Sub-namespaces

To view FCoE namespace and sub-namespace commands, issue the following:

```
~# esxcli qlfastlinq qcc fcoe
```

### Syntax

```
esxcli qlfastlinq qcc fcoe {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
lun	QCC CLI for FCoE LUNs
target	QCC CLI for FCoE targets
vnport	QCC CLI for FCoE virtual N_Port (VN_Port) information
info	QCC CLI for FCoE information

### Available Commands

```
list
```

Lists identifiers for the list of Marvell Adapter FCoE ports discovered on the host. See [List FCoE Ports](#).

### List FCoE Ports

To view a list of all supported 3400/8400 Series and 41000/45000 Series FCoE ports, issue the `fcoe list` command.

### Example

The following example shows the `fcoe list` command on a local host:

```
~# esxcli qlfastlinq qcc fcoe list
```

The following example shows the `fcoe list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastlinq qcc fcoe list
```

The output for both commands is:

```
FCoE
-----
FCoE_10-00-00-0E-1E-C4-C5-EC
FCoE_10-00-00-0E-1E-C4-C5-ED
```

## Adapter FCoE Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe info
```

### Syntax

```
esxcli qlfastling qcc fcoe info {cmd} [cmd options]
```

### Available Commands

get

Shows information about the specified Marvell Adapter FCoE function. See [Get FCoE Information](#).

### Get FCoE Information

To view FCoE information for the specified FCoE device, issue the following command:

```
~# esxcli qlfastling qcc fcoe info get
```

### Syntax

```
esxcli qlfastling qcc fcoe info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = FCoE identifier (required). Obtain the identifier from the `fcoe list` command output.

### Example

The following example shows the `fcoe info get` command on a local host:

```
~# esxcli qlfastling qcc fcoe info get -i
FCoE_10-00-00-0E-1E-C4-C5-ED
```

The following example shows the `fcoe info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe
info get -i FCoE_10-00-00-0E-1E-C4-C5-ED
```

The output for both commands is:

```
FCoE Information:
  FCOEInfo:
```

```
Driver Date: Sep 08, 2015
Driver Name: qedf
Driver Version: 1.2.8.8.18130
FCFSelection: First Received
Firmware Version: 08.18.14.00
MACAddress: 00:0E:1E:C4:C5:ED
MTU: 9000
VNPorts: VNPort_20-00-00-0E-1E-C4-C5-ED
WWNN: 10-00-00-0E-1E-C4-C5-ED
WWPN: 20-00-00-0E-1E-C4-C5-ED
Message: Success
```

## Adapter FCoE VN\_Port Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe vnport
```

### Syntax

```
esxcli qlfastling qcc fcoe vnport {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for FCoE VN_Port information
stats	QCC CLI for FCoE VN_Port statistics

### Available Commands

```
list
```

Lists identifiers for the Marvell Adapter FCoE VN\_Ports discovered on the host.

See [List VN\\_Ports](#).

### List VN\_Ports

The `fcoe vnport list` command lists all of the supported 3400/8400 Series and 41000/45000 Series FCoE VN\_Ports.

### Example

The following example shows the `fcoe vnport list` command on a local host:

```
~# esxcli qlfastling qcc fcoe vnport list
```

The following example shows the `fcoe vnport list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe vnport list
```

The output for both commands is:

```
VNPorts
-----
VNPort_20-00-00-0E-1E-C4-C5-EC
VNPort_20-00-00-0E-1E-C4-C5-ED
```

## Adapter FCoE VN\_Port Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe vnport info
```

### Syntax

```
esxcli qlfastling qcc fcoe vnport info {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the specified Marvell Adapter FCoE VN\_Port. See [Get FCoE VN\\_Port Info](#).

### Get FCoE VN\_Port Info

To view FCoE VN\_Port information of the specified FCoE VN\_Port device, issue the following command:

```
~# esxcli qlfastling qcc fcoe vnport info get
```

### Syntax

```
esxcli qlfastling qcc fcoe vnport info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = VN\_Port identifier (required). Obtain the identifier from the `fcoe vnport list` command output.

### Example

The following example shows the `fcoe vnport info get` command on a local host:

```
~# esxcli qlfastling qcc fcoe vnport info get -i VNPort_20-00-00-0E-1E-C4-C5-ED
```

The following example shows the `fcoe vnport info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe vnport info get -i VNPort_20-00-00-0E-1E-C4-C5-ED
```

The output for both commands is:

```
VNPort Information:
  Message: Success
  VNPort Info:
    FCFMACAddress: 28:34:A2:E6:A2:30
    Fabric Name: 20-01-00-05-9B-23-D8-01
    Fabric Priority: 128
    Link Keep Alive Interval: 1669389911
    Parent WWPort Name: 20-00-00-0E-1E-C4-C5-ED
    Port FCID: 9634208
    Port State: Up
    Port Type: NPort
    Switch Name: 20-01-8C-60-4F-2D-3C-01
    Targets:
  VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39
    WWNode Name: 10-00-00-0E-1E-C4-C5-ED
    WWPort Name: 20-00-00-0E-1E-C4-C5-ED
```

## View FCoE VN\_Port Statistics

```
~# esxcli qlfastling qcc fcoe vnport stats
```

### Syntax

```
esxcli qlfastling qcc fcoe vnport stats {cmd} [cmd options]
```

### Available Commands

get

Shows statistics for the specified Marvell Adapter FCoE VN\_Port. See [Get FCoE VN\\_Port Statistics](#).

## Get FCoE VN\_Port Statistics

To view statistics for the specified FCoE VN\_Port device, issue the following command:

```
~# esxcli qlfastling qcc fcoe vnport stats get
```

### Syntax

```
esxcli qlfastling qcc fcoe vnport stats get [cmd options]
```

## Keywords

`-i|--identifier <str>` = VN\_Port identifier (required). Obtain the identifier from the `fcoe vnport list` command output.

## Example

The following example shows the `fcoe vnport stats get` command on a local host:

```
~# esxcli qlfastling qcc fcoe vnport stats get -i  
VNPort_20-00-00-0E-1E-C4-C5-ED
```

The following example shows the `fcoe vnport stats get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe  
vnport stats get -i VNPort_20-00-00-0E-1E-C4-C5-ED
```

The output for both commands is:

```
VNPort Statistics:  
  Message: Success  
  VNPort Stats:  
    Fcoe Dropped Frames: 0  
    Fcoe Received Bytes: 440591  
    Fcoe Received Frames: 16243  
    Fcoe Transmitted Bytes: 224075  
    Fcoe Transmitted Frames: 8963  
    Wrong Fcoe Crc Packets: 0
```

## Adapter FCoE Target Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe target
```

### Syntax

```
esxcli qlfastling qcc fcoe target {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for FCoE target information

### Available Commands

`list`

Lists identifiers for the Marvell Adapter FCoE targets discovered on the host. See [List FCoE Targets](#).

### List FCoE Targets

The `fcoe target list` command lists all of the detected FCoE targets on 3400/8400 Series and 41000/45000 Series Adapters.

#### Example

The following example shows the `fcoe target list` command on a local host:

```
~# esxcli qlfastling qcc fcoe target list
```

The following example shows the `fcoe target list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe target list
```

The output for both commands is:

```
Targets
```

```
-----  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39
```

## Adapter FCoE Target Information Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe target info
```

### Syntax

```
esxcli qlfastling qcc fcoe target info {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the specified Marvell Adapter FCoE target. See [Get FCoE Target Information](#).

### Get FCoE Target Information

To view FCoE target information for the specified Marvell Adapter FCoE target device, issue the following command:

```
~# esxcli qlfastling qcc fcoe target info get
```

### Syntax

```
esxcli qlfastling qcc fcoe target info get [cmd options]
```



## Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `fcoe target list` command output.

## Example

The following example shows the `fcoe target info get` command on a local host:

```
~# esxcli qlfastling qcc fcoe target info get -i  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39
```

The following example shows the `fcoe target info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe  
target info get -i  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39
```

The output for both commands is:

```
Target Information:  
  Message: Success  
  Target Info:  
    Lun Count: 1  
    Luns:  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39_LUN_0  
  Port State: Up  
  Scsi Target Number: 0  
  Target Node Name: 50-0A-09-80-80-0F-06-39  
  Target Port ID: 00-E6-01-20  
  Target Port Name: 50-0A-09-81-80-0F-06-39
```

## Adapter FCoE LUN Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe lun
```

### Syntax

```
esxcli qlfastling qcc fcoe lun {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for FCoE LUN information

## Available Commands

list

Lists identifiers for the Marvell Adapter FCoE LUNs discovered on the host. See [List FCoE LUNs](#).

## List FCoE LUNs

The `fcoe lun list` command lists all FCoE LUNs detected on 3400/8400 Series and 41000/45000 Series Adapters.

### Example

The following example shows the `fcoe lun list` command on a local host:

```
~# esxcli qlfastling qcc fcoe lun list
```

The following example shows the `fcoe lun list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc fcoe  
lun list
```

The output for both commands is:

```
Luns
```

```
-----  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39_LUN_0
```

## Adapter FCoE LUN Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc fcoe lun info
```

### Syntax

```
esxcli qlfastling qcc fcoe lun info {cmd} [cmd options]
```

## Available Commands

get

Shows information about the specified Marvell Adapter FCoE LUN. See [Get FCoE LUN Information](#).

## Get FCoE LUN Information

To view FCoE LUN information for the specified FCoE LUN device, issue the following command:

```
~# esxcli qlfastling qcc fcoe lun info get
```

### Syntax

```
esxcli qlfastling qcc fcoe lun info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = LUN identifier (required). Obtain the identifier from the `fcoe lun list` command output.

### Example

The following example shows the `fcoe lun info get` command on a local host:

```
~# esxcli qlfastling qcc fcoe lun info get -i  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39_LUN_0
```

The following example shows the `fcoe lun info get` command on a remote host:

```
password qlfastling qcc fcoe lun info get -i  
VNPort_20-00-00-0E-1E-C4-C5-ED_Target_50-0A-09-81-80-0F-06-39_LUN_0
```

The output for both commands is:

```
Lun Information:  
  Lun Info:  
    Capacity In MB: 5242  
    Device Type: Disk  
    Product ID: LUN  
    Product Rev Level: 811a  
    Scsi Unit Number: 0  
    Vendor ID: NETAPP  
Message: Success
```

## Adapter iSCSI Namespace Commands and Sub-namespaces

To view iSCSI namespace and sub-namespace commands, issue the following:

```
~# esxcli qlfastling qcc iscsi
```

## Syntax

```
esxcli qlfastling qcc iscsi {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
portal	QCC CLI for iSCSI portals
target	QCC CLI for iSCSI targets
info	QCC CLI for iSCSI target information

## Available Commands

`list`

Lists identifiers for the list of Marvell Adapter iSCSI ports discovered on the host.  
See [List iSCSI Ports](#).

## List iSCSI Ports

The `iscsi list` command lists all supported 3400/8400 Series and 41000/45000 Series iSCSI ports.

### Example

The following example shows the `iscsi list` command on a local host:

```
~# esxcli qlfastling qcc iscsi list
```

The following example shows the `iscsi list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi list
```

The output for both commands is:

```
iSCSI
-----
iSCSI_00:0E:1E:C4:B2:D9
iSCSI_00:0E:1E:C4:B2:DA
```

## Adapter iSCSI Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc iscsi info
```

### Syntax

```
esxcli qlfastling qcc iscsi info {cmd} [cmd options]
```

## Available Commands

get

Shows information for the Marvell Adapter iSCSI port discovered on the host. See [Get iSCSI Info](#).

## Get iSCSI Info

To view iSCSI information for the specified Marvell Adapter iSCSI device port discovered on the host, issue the following command:

```
~# esxcli qlfastling qcc iscsi info get
```

## Syntax

```
esxcli qlfastling qcc iscsi info get [cmd options]
```

## Keywords

`-i|--identifier <str>` = iSCSI identifier (required). Obtain the identifier from the `iscsi list` command output.

## Example

The following example shows the `iscsi info get` command on a local host:

```
~# esxcli qlfastling qcc iscsi info get -i iSCSI_00:0E:1E:C4:B2:DA
```

The following example shows the `iscsi info get` command on a remote host:

```
password qlfastling qcc iscsi info get -i iSCSI_00:0E:1E:C4:B2:DA
```

The output for both commands is:

```
iSCSI Information:
```

```
ISCSIIInfo:
```

```
Data Digest: Disabled
Data Pdu In Order: Enabled
Data Sequence In Order: Enabled
Device Id: 0x165e
Driver Name: qedil
Driver Version: 1.0.8.2.0818.1300
Error Recovery Level: 0
Firmware Version: mfw 8.15.0.0 storm 8.18.14.0
First Data Burst Length: 65536
Header Digest: Disabled
Immediate Data: Enabled
Initial R2T: Disabled
MACAddress: 00:0E:1E:C4:B2:DA
```

```
MTU: 1500
Max Outstanding R2T: 1
Portals:
IPv4Address: 192.168.100.124
IPv4Port Number: 0
IPv6Address: C0:A8:64:7C:00:00:00:00:00:00:00:00:00:00:00:00
IPv6Port Number: 0
Portal Number: 0
Sessions:
Session: 192.168.100.124 to 192.168.100.5
Session Number: 0

Session: 192.168.100.124 to 192.168.100.5
Session Number: 1

Session: 192.168.100.124 to 192.168.100.5
Session Number: 2

Session: 192.168.100.124 to 192.168.100.5
Session Number: 3

Message: Success
```

## Adapter iSCSI Portal Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc iscsi portal
```

### Syntax

```
esxcli qlfastling qcc iscsi portal {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for iSCSI portal information

### Available Commands

```
list
```

Lists portal identifiers for the Marvell Adapter iSCSI ports discovered on the host.  
See [List iSCSI Portals](#).

```
info
```

Lists portal identifiers for the Marvell Adapter iSCSI ports discovered on the host.  
See [List iSCSI Portals](#).

## List iSCSI Portals

The `iscsi portal list` command lists all of the supported 3400/8400 Series and 41000/45000 Series iSCSI portals.

### Example

The following example shows the `iscsi portal list` command on a local host:

```
~# esxcli qlfastling qcc iscsi portal list
```

The following example shows the `iscsi portal list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi portal list
```

The output for both commands is:

```
Portals
-----
Portal_192.168.100.124
```

## iSCSI Portal Info

```
~# esxcli qlfastling qcc iscsi portal info
```

### Syntax

```
esxcli qlfastling qcc iscsi portal info {cmd} [cmd options]
```

### Available Commands

get

Gets information for the Marvell Adapter iSCSI portal discovered on the host. See [Get iSCSI Portal Info](#).

## Get iSCSI Portal Info

To view iSCSI portal information for the specified Marvell Adapter iSCSI portal discovered on the host.

```
~# esxcli qlfastling qcc iscsi portal info get
```

### Syntax

```
esxcli qlfastling qcc iscsi portal info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = iSCSI identifier (required). Obtain the identifier from the `iscsi portal list` command output.

### Example

The following example shows the `iscsi portal info get` command on a local host:

```
~# esxcli qlfastling qcc iscsi portal info get -i  
Portal_192.168.100.124
```

The following example shows the `iscsi portal info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi  
portal info get -i Portal_192.168.100.124
```

The output for both commands is:

```
iSCSI Portal Information:  
  Message: Success  
  Portal Info:  
    Portal IPAddress: 192.168.100.124  
    Sessions:  
      Connection Id: 4280287241  
      Data Pdu In Order: Enabled  
      Data Sequence In Order: Enabled  
      Error Recovery Level: 0  
      Immediate Data: Enabled  
      Initial R2T: Disabled  
      Initiator Portal: 192.168.100.124  
      Max Outstanding R2T: 1  
      Session Number: 0  
      Session State: Connected  
      Session Unique Id: 73685775427816  
    Target:  
      iqn.2001-05.com.equallogic:0-8a0906-3a14b7e04-b5e000e7ac253579-isns  
      Target Portal: 192.168.100.5  
  
      Connection Id: 4280287235  
      Data Pdu In Order: Enabled  
      Data Sequence In Order: Enabled  
      Error Recovery Level: 0  
      Immediate Data: Enabled  
      Initial R2T: Disabled  
      Initiator Portal: 192.168.100.124  
      Max Outstanding R2T: 1  
      Session Number: 1
```



### 3-Ethernet CLI Command Extensions

#### Adapter iSCSI Namespace Commands and Sub-namespaces

---

```
    Session State: Connected
    Session Unique Id: 73685775429208
    Target:
iqn.2001-05.com.equallogic:0-8a0906-4084b7e04-59f6c0a42cd5399c-
parag-broadcom
    Target Portal: 192.168.100.5

    Connection Id: 4280287242
    Data Pdu In Order: Enabled
    Data Sequence In Order: Enabled
    Error Recovery Level: 0
    Immediate Data: Enabled
    Initial R2T: Disabled
    Initiator Portal: 192.168.100.124
    Max Outstanding R2T: 1
    Session Number: 2
    Session State: Connected
    Session Unique Id: 73685775430600
    Target:
iqn.2001-05.com.equallogic:0-8a0906-be94b7e04-aa76c0a440c55cc9-
krishna-40g
    Target Portal: 192.168.100.5

    Connection Id: 4280287237
    Data Pdu In Order: Enabled
    Data Sequence In Order: Enabled
    Error Recovery Level: 0
    Immediate Data: Enabled
    Initial R2T: Disabled
    Initiator Portal: 192.168.100.124
    Max Outstanding R2T: 1
    Session Number: 3
    Session State: Connected
    Session Unique Id: 73685775434776
    Target:
iqn.2001-05.com.equallogic:0-8a0906-e8f4b7e04-a5e0014e31f584ea-sas
-nanoe4
    Target Portal: 192.168.100.5
```

## Adapter iSCSI Target Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc iscsi target
```

### Syntax

```
esxcli qlfastling qcc iscsi target {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for iSCSI target information

### Available Commands

```
list
```

Lists target identifiers of iSCSI targets discovered through Marvell Adapters. See [List iSCSI Targets](#).

## List iSCSI Targets

The `iscsi target list` command lists all detected iSCSI targets on 3400/8400 Series and 41000/45000 Series Adapters.

### Example

The following example shows the `iscsi target list` command on a local host:

```
~# esxcli qlfastling qcc iscsi target list
```

The following example shows the `iscsi target list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi target list
```

The output for both commands is:

```
Targets
-----
Portal_192.168.100.124_Target_SID_73685775427816
Portal_192.168.100.124_Target_SID_73685775429208
Portal_192.168.100.124_Target_SID_73685775430600
Portal_192.168.100.124_Target_SID_73685775434776
```

## Adapter iSCSI Target Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc iscsi target info
```

### Syntax

```
esxcli qlfastling qcc iscsi target info {cmd} [cmd options]
```

### Available Commands

get

Shows information for the Marvell Adapter iSCSI target discovered on the host.  
See [Get iSCSI Target Info](#).

### Get iSCSI Target Info

To view iSCSI target information for the specified Marvell Adapter iSCSI target device discovered on the host, issue the following command:

```
~# esxcli qlfastling qcc iscsi target info get
```

### Syntax

```
esxcli qlfastling qcc iscsi target info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `iscsi target list` command output.

### Example

The following example shows the `iscsi target info get` command on a local host:

```
~# esxcli qlfastling qcc iscsi target info get -i  
Portal_192.168.100.124_Target_SID_73685775427816
```

The following example shows the `iscsi target info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi  
target info get -i  
Portal_192.168.100.124_Target_SID_73685775427816
```

The output for both commands is:

```
iSCSI Target Information:  
  Message: Success  
  Target Info:  
    IPv4Address: 192.168.100.5  
    IPv6Address: 00:00:00:00:00:00:00:00:00:00:00:00:00:00:00:00  
    Lun Count: 1
```

```
MACAddress: 00:09:8A:04:7E:4C
Scsi Target Number: 0
Sessions:
Connection Id: 4280287241
Data Pdu In Order: Enabled
Data Sequence In Order: Enabled
Error Recovery Level: 0
Immediate Data: Enabled
Initial R2T: Disabled
Initiator Portal: 192.168.100.124
Max Outstanding R2T: 1
Session Number: 0
Session State: Connected
Session Unique Id: 73685775427816
Target:
iqn.2001-05.com.equallogic:0-8a0906-3a14b7e04-b5e000e7ac253579-isns
Target Portal: 192.168.100.5
Target Iqn Name:
iqn.2001-05.com.equallogic:0-8a0906-3a14b7e04-b5e000e7ac253579-isns
```

## Adapter iSCSI LUN Namespace Commands and Sub-namespaces

```
~# esxcli qlfastlinq qcc iscsi lun
```

### Syntax

```
esxcli qlfastlinq qcc iscsi lun {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for iSCSI LUN information

### Available Commands

```
list
```

Lists identifiers for Marvell Adapter iSCSI LUNs on 3400/8400 Series and 41000/45000 Series adapters discovered on the host. See [List iSCSI LUNs](#).

## List iSCSI LUNs

The `iscsi lun list` command lists all detected iSCSI LUNs.

### Example

The following example shows the `iscsi lun list` command on a local host:

```
~# esxcli qlfastling qcc iscsi lun list
```

The following example shows the `iscsi lun list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi lun list
```

The output for both commands is:

```
Luns
-----
Portal_192.168.100.124_Target_SID_73683392473320_LUN_0
Portal_192.168.100.124_Target_SID_73683392474712_LUN_0
Portal_192.168.100.124_Target_SID_73683392476104_LUN_0
Portal_192.168.100.124_Target_SID_73683392480280_LUN_0
```

## Adapter iSCSI LUN Info Namespace Commands and Sub-namespaces

```
~# esxcli qlfastling qcc iscsi lun info
```

### Syntax

```
esxcli qlfastling qcc iscsi lun info {cmd} [cmd options]
```

### Available Commands

get

Shows information about the specified Marvell Adapter iSCSI LUN. See [Get iSCSI LUN Info](#).

## Get iSCSI LUN Info

To view iSCSI LUN information for the specified Marvell Adapter iSCSI LUN device, issue the following command:

```
~# esxcli qlfastling qcc iscsi lun info get
```

### Syntax

```
esxcli qlfastling qcc iscsi lun info get [cmd options]
```

## Keywords

`-i|--identifier <str>` = LUN identifier (required). Obtain the identifier from the `iscsi lun list` command output.

## Example

The following example shows the `iscsi lun info get` command on a local host:

```
~# esxcli qlfastling qcc iscsi lun info get -i  
Portal_192.168.100.124_Target_SID_73683392474712_LUN_0
```

The following example shows the `iscsi lun info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfastling qcc iscsi  
lun info get -i  
Portal_192.168.100.124_Target_SID_73683392474712_LUN_0
```

The output for both commands is:

Lun Information:

```
Lun Info:  
Capacity In MB: 5253  
Device Type: Disk  
Product ID: 100E-00  
Product Rev Level: 4.3  
Scsi Unit Number: 0  
Vendor ID: EQLOGIC  
Message: Success
```

# 4 Fibre Channel CLI Command Extensions

This chapter describes the functions of the various software components added to extend the capabilities of the Marvell ESXCLI VMware Plug-in software for the Marvell QLogic Fibre Channel Adapters.

Sections provided in this chapter include the following:

- [“Extension Command Format” on page 136](#)
- [“Extension Module Functional Specification” on page 138](#)
- [“QCC Namespace-level Commands and Sub-namespaces” on page 138](#)
- [“Adapter Namespace Commands and Sub-namespaces” on page 139](#)
- [“Adapter Port Namespace Commands and Sub-namespaces” on page 147](#)
- [“Adapter Target Namespace Commands and Sub-namespaces” on page 230](#)
- [“Adapter LUN Namespace Commands and Sub-namespaces” on page 244](#)

See [Figure 3-1](#) for an illustration of the ESXCLI extension module flow chart. See [“Extending ESXCLI Commands” on page 7](#) for a high level description of how to extend ESXCLI commands.

In this chapter:

- *SAN congestion management* (SCM) is a common noun, and describes a standards-based Fibre Channel technology.
- *Universal SAN Congestion Mitigation* (USCM) is Marvell’s IP, and describes Marvell’s SCM feature.

## Extension Command Format

The ESXCLI commands are organized as a hierarchy of *namespaces*. If you are a VMware partner, and you are creating your own ESXCLI commands, organize the commands in a consistent, logical manner to improve usability of your own commands and of ESXCLI as a whole.

### Usage Guidelines

If each partner adheres to the following guidelines, each partner can have full control of the organization of the namespaces and commands.

- **Single root namespace.** Each partner namespace has a single root namespace, which is the name of the partner, in lowercase letters. For example, if you belong to the Acme organization, the root namespace should be `acme`, and all namespaces and commands that you add to ESXCLI will be under `esxcli acme`.
- **Organized hierarchy.** Organize the commands in the namespace and use additional namespaces as needed. In most cases, your commands apply to a single product or product type. For example, if you are shipping commands to support the widget product, place the commands under `esxcli acme widget`. If you are shipping a second product, you might create a second namespace.
- **Commands are actions.** Each command should operate on a logical object. For example, a command `esxcli acme widget stats get` follows the convention, but `esxcli acme widget getstats` does not. Look at VMware ESXCLI commands for examples.
- **Consistent XML format.** Make the XML format consistent with other ESXCLI commands. For example:

```
$ esxcli --formatter=xml system time get
<?xml version="1.0" encoding="utf-8"?>
<output xmlns="http://www.vmware.com/Products/ESX/5.0/esxcli">
<root>
<string>2013-09-26T00:08:07Z</string>
</root>
</output>
```

### Syntax

ESXCLI commands in this chapter have the following syntax:

```
esxcli [dispatcher options] <namespace1 [namespace2] ...>
<command> [input parameters]
```



- **Dispatcher options.** Predefined options for connection information such as target host, user name, and so on. Extension developers have no control over dispatcher options and do not need to be concerned about them.
- **Namespace.** Organizational structure that groups a quantity of ESXCLI objects. One namespace is required; additional namespaces are possible.

Examples of namespaces include:

- ❑ `nmp`  
VMware native multipathing commands.
- ❑ `swiscsi`  
Commands in the software iSCSI namespace.
- ❑ `corestorage`  
VMware core storage commands.

- **Command.** The command reports on or modifies the state on the system. Commands are the leaf nodes in the ESXCLI syntax. Commands are the verbs that act on the objects defined by the namespaces.
- **Input parameters.** Multiple input parameters are supported.

All ESXCLI commands in this section have examples of command usage with both a local host and a remote host. The remote host in the examples has the following credentials:

- IP address: 172.27.9.144
- Password: password
- User name: root

## Format

For a local host, command syntax is as follows:

```
esxcli qlfc qcc <namespace> <command> <options>
```

For a remote host, the command syntax is as follows:

```
esxcli --server <ip_address> --username <username> --password  
<password> qlfc qcc namespace [command] [options]
```

where `<ip_address>`, `<username>`, and `<password>` are the IP address and credentials for the remote host. The keywords `--server`, `--username`, and `--password` can be abbreviated `-s`, `-u`, and `-p` respectively.

To obtain detailed information for a specific command, type the command without arguments or with the `--help` option.

All ESXCLI commands in this section have examples of command usage with both a local host and a remote host. The remote host in the examples has the following credentials:

- IP address: 172.27.9.144
- Password: password
- User name: root

---

#### NOTE

For remote operation, the VMware vSphere CLI software must be installed on the local workstation. For more information about obtaining, installing, and operating the VMware software, see the VMware documentation for your system.

---

## Extension Module Functional Specification

`qfcesxcli` is the standard command line executable module invoked by the Fibre Channel (FC) ESXCLI VMware Plug-in plug-in extension wrapper. The `qfcesxcli` command line executable module supports multiple sets of input arguments for different commands and produces XML output for the FC ESXCLI VMware Plug-in extension wrapper to consume.

The non-interactive commands that are supported by `qfcesxcli` must be published to the ESXCLI plug-in extension wrapper using an extension XML file that adheres to the metadata specification. Together, the `qfcesxcli` and the extension XML file enable users to view and execute commands through ESXCLI (both locally as well as remotely). All of the commands are published as part of the `qlfc.qcc` sub-namespace (ESXCLI namespace).

## QCC Namespace-level Commands and Sub-namespaces

At the top-most level—the Marvell QConvergeConsole® (QCC) namespace level—the following commands and sub-namespaces are exposed:

```
~ # esxcli qlfc qcc
```

### Syntax

```
esxcli qlfc qcc {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
<code>adapter</code>	QCC CLI for operations on adapters
<code>lun</code>	QCC CLI for operations on LUNs
<code>port</code>	QCC CLI for operations on port functions
<code>target</code>	QCC CLI for operations on target functions

## Adapter Namespace Commands and Sub-namespaces

```
~# esxcli qlfc qcc adapter
```

### Syntax

```
esxcli qlfc qcc adapter {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
<code>info</code>	QCC CLI for adapter information
<code>personality</code>	QCC CLI for personality information
<code>flashinfo</code>	QCC CLI for flash information

## Available Commands

`list`

Lists identifiers for the Marvell Adapters discovered on the host. See [List Adapters](#).

`update`

Updates the flash on a Marvell Adapter. See [Update Adapters](#).

## List Adapters

To list all supported Fibre Channel Adapters, issue the `list` command as follows on the local host:

```
~ # esxcli qlfc qcc adapter list
```

The following example shows the `list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter list
```

The output for both commands is:

```
Adapters
-----
Adapter_QLE2772_AFD1923Y07491
Adapter_QLE2770_AFD1924Y07544
```

The output contains model name and serial number as part of the adapter identifier.

## Update Adapters

To update the flash on a Marvell Adapter, issue the `adapter update` command as follows:

```
~ # esxcli qlfc qcc adapter update
```

### Syntax

```
esxcli qlfc qcc adapter update [cmd options]
```

### Keywords

- `-f|--flashfile <str>` = Flash file (required)
- `-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.
- `-m|--image-type <str>` = Image type (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Adapter identifier from the <code>adapter list</code> command
<code>flashfile</code>	Flash file name with complete path
<code>image-type</code>	MBI, BrdCfg, PEPCfg, FWPreload

### Example

The following example shows the `adapter update` command on a local host:

```
~ # esxcli qlfc qcc adapter update -i
Adapter_QLE2772_AFD1923Y07491 -f /scratch/mh010205.bin -m MBI
```

The flash file must be on the remote host before issuing the `adapter update` command as described in the following steps.

1. Determine the name of the volume on the remote host in which to store the flash file. You will use the volume name and VMFS UUID in subsequent steps.

```
# esxcli -s 172.27.9.144 -u root -p password storage vmfs extent list
Volume Name      VMFS UUID                               Extent Number  Device Name
-----
datastore1 (3)  4d435b11-2d3d0b17-a566-000af73e458c      0
```

2. Create a temporary directory on the remote host in which to store the flash file using the name of the volume that you obtained in [Step 1](#). The following command creates a directory called `tmp` on the volume `datastore1 (3)`. You will specify this directory when you update the flash in [Step 4](#).

```
# vifs.pl --server 172.27.9.144 --username root --password
password --mkdir "[datastore1 (3)] tmp"
```

3. Upload the flash file to the remote host.

```
# vifs.pl --server 172.27.9.144 --username root --password
password --put mh010205.bin "[datastore1 (3)]
tmp/mh010205.bin"
```

4. Update the adapter flash on the remote host. The flash file path is indicated in `/vmfs/volumes/<vmfs_uuid>/tmp/mh010205.bin`, where the value for `<vmfs_uuid>` comes from [Step 1](#).

The following example shows the `adapter update` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter
update -i Adapter_QLE2772_AFD1923Y07491 -f /vmfs/volumes/
4d435b11-2d3d0b17-a566-000af73e458c/tmp/mh010205.bin -m MBI
```

The output for both commands is:

```
Message: Success
Reboot Required: true
```

## Adapter Information

To obtain information about a specific Marvell Adapter, issue the `info` command as follows:

```
~ # esxcli qlfc qcc adapter info
```

### Syntax

```
esxcli qlfc qcc adapter info {cmd} [cmd options]
```

## Available Commands

get

Shows information about the adapter. See [Get Adapter Information](#).

## Get Adapter Information

To obtain information about a Marvell Adapter, issue the `get` command as follows:

```
~# esxcli qlfc qcc adapter info get
```

## Syntax

```
esxcli qlfc qcc adapter info get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

## Example

The following example shows the `adapter info get` command on a local host:

```
~# esxcli qlfc qcc adapter info get -i  
Adapter_QLE2772_AFD1923Y07491
```

The following example shows the `adapter info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter info  
get -i Adapter_QLE2772_AFD1923Y07491
```

The output for both commands is:

```
Adapter Information:  
  General Parameters:  
    Data:  
      Manufacturer: QLogic Corporation  
      Model: QLE2772  
      Serial Number: AFD1923Y07491  
      Vendor ID: 0x1077  
      Device ID: 0x2281  
      Subsystem Device ID: 0x2f3  
      Subsystem Vendor ID: 0x1077  
      PCI Bus ID: 0x37  
      Chip Revision: 2  
      Type: Fibre Channel Adapter
```

```
Multiboot Version: 2.06.19  
Flash Firmware Version: 9.09.00  
Flash BIOS Version: 0.00  
Flash FCode Version: NA  
Flash EFI Version: 7.26  
Flash Preload Firmware Area Version: 4.01.15  
Flash FC Board Config Version: 3.07.02  
Flash MPI Firmware Version: 3.03.03  
Flash PEP Firmware Version: 3.01.36  
Flash PEP Board Config Version: 3.01.00  
Flash PEP SoftROM Version: 3.00.13  
Flash MPI SoftROM Version: 255.255.255  
Flash PCIE Serdes Version: 3.00.07
```

Message: Success

## Adapter Personality

To display and set the adapter's current personality (FC or CNA), issue the `adapter personality` namespace command as follows:

```
~# esxcli qlfc qcc adapter personality
```

### Syntax

```
esxcli qlfc qcc adapter personality {cmd} [cmd options]
```

### Available Commands

`get`

Shows personality information for the specified Marvell Adapter. See [Get Adapter Personality](#).

`set`

Sets the personality for the specified Marvell Adapter. See [Set Adapter Personality](#).

## Get Adapter Personality

---

### NOTE

Personality commands are only supported on 2670/8300 Series Marvell Adapters.

---

To read the personality of a Marvell Adapter, issue the `adapter personality get` command as follows:

```
~# esxcli qlfc qcc adapter personality get
```

### Syntax

```
esxcli qlfc qcc adapter personality get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter personality get` command on a local host:

```
~# esxcli qlfc qcc adapter personality get -i  
Adapter_QLE8362_MY58330JGY
```

The following example shows the `adapter personality get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter  
personality get -i Adapter_QLE8362_MY58330JGY
```

The output for both commands is:

```
Adapter Personality:  
Message: Success  
Personality: FC
```

## Set Adapter Personality

---

### NOTE

The `personality set` command is only supported on 2670/8300 Series Marvell Adapters.

---

To set the personality of a Marvell Adapter, issue the `adapter personality set` command as follows:

```
~# esxcli qlfc qcc adapter personality set
```

### Syntax

```
esxcli qlfc qcc adapter personality set [cmd options]
```



## Keywords

- `-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.
- `-p|--personality <str>` = Adapter personality to be set (required)

### Parameter

### Value (strings are case-sensitive)

<code>identifier</code>	Adapter identifier from the <code>adapter list</code> command
<code>personality</code>	FC, CNA

## Example

The following example shows the `adapter personality set` command on a local host:

```
~# esxcli qlfc qcc adapter personality set -i  
Adapter_QLE8362_MY58330JGY
```

The following example shows the `adapter personality set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter  
personality set -i Adapter_QLE8362_MY58330JGY -p CNA
```

The output for both commands is:

```
Adapter Personality:  
Message: Success  
Personality: CNA  
Reboot Required: true
```

## Adapter Flash Information

To obtain flash information about a specific Marvell Adapter, issue the `flashinfo` command as follows:

```
~ # esxcli qlfc qcc adapter flashinfo
```

### Syntax

```
esxcli qlfc qcc adapter flashinfo {cmd} [cmd options]
```

### Available Commands

`get`

Shows the flash information of the specified Marvell Adapter. See [Get Adapter Flash Information](#).

## Get Adapter Flash Information

To obtain flash information about a Marvell Adapter, issue the `get` command as follows:

```
~# esxcli qlfc qcc adapter flashinfo get
```

### Syntax

```
esxcli qlfc qcc adapter flashinfo get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Adapter identifier (required). Obtain the identifier from the `adapter list` output.

### Example

The following example shows the `adapter flashinfo get` command on a local host:

```
~# esxcli qlfc qcc adapter flashinfo get -i  
Adapter_QLE2772_AFD1923Y07491
```

The following example shows the `adapter flashinfo get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc adapter  
flashinfo get -i Adapter_QLE2772_AFD1923Y07491
```

The output for both commands is:

```
Adapter Flash Information:  
Flash Info:  
  Data:  
    MBI Version: 02.04.07  
    MBI Build Date: 2020-11-17  
    Flash Tool ID: FC PowerKit  
    Flash Tool Version: 01.00.16.00  
    Last Update Time: 2021-06-16 09:35:32  
  
Message: Success
```

## Adapter Port Namespace Commands and Sub-namespaces

This section provides information on the following:

- [Adapter Port List](#)
- [Adapter Port Update NVRAM](#)
- [Adapter Port Information](#)
- [Adapter Port Statistics](#)
- [Adapter Port SFP DMI Information](#)
- [Adapter Port VPD Information](#)
- [Adapter Port HBA Parameters Configuration](#)
- [Adapter Port Buffer-To-Buffer Credit Recovery Configuration](#)
- [Adapter Port Forward-Error-Correction Configuration](#)
- [Adapter Port Boot Configuration](#)
- [Adapter Port Boot Configuration \(Extended\)](#)
- [Adapter Port Firmware Dump Information](#)
- [Adapter Port Beacon Configuration](#)
- [Adapter Port Diagnostics \(DPort\) Configuration](#)
- [Adapter Port Common Pass-thru \(CT\) Diagnostics](#)
- [Adapter Port Echo ELS Diagnostics](#)
- [Adapter Port Ping Diagnostics](#)
- [Adapter Port Read Port Diagnostics \(RDP\) Information](#)
- [Adapter Port Loopback Diagnostics](#)
- [Adapter Port Read and Write Buffer Diagnostics](#)
- [Adapter Port Universal SAN Congestion Mitigation Status](#)
- [Adapter Port Universal SAN Congestion Mitigation Statistics](#)
- [Adapter Port Universal SAN Congestion Mitigation Profile](#)

```
# esxcli qlfc qcc port
```

### Syntax

```
esxcli qlfc qcc port {cmd} [cmd options]
```

## Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for port information
stats	QCC CLI for statistics information
dmi	QCC CLI for SFP DMI information
vpd	QCC CLI for VPD information
hbaparams	QCC CLI for HBA parameters configuration
bbcr	QCC CLI for buffer-to-buffer credit (BBCR) configuration
fec	QCC CLI for FEC information
bootconfig	QCC CLI for boot configuration
bootconfigext	QCC CLI for boot configuration
fwdump	QCC CLI for firmware dump information
beacon	QCC CLI for beacon configuration
dportdiag	QCC CLI for diagnostic port (DPort)
ctdiag	QCC CLI for common pass-thru (CT) diagnostics commands
fcecho	QCC CLI for FC Echo ELS diagnostic commands
fcping	QCC CLI for FC ping diagnostics commands
rdp	QCC CLI for FC port read diagnostics parameters information
loopback	QCC CLI for loopback diagnostics commands
rwbuffer	QCC CLI for FC read/write buffer diagnostics commands
scmchk	QCC CLI for FC port Universal SAN Congestion Mitigation (USCM) status
scmstats	QCC CLI for USCM statistics
scmprofile	QCC CLI for USCM profile

## Available Commands

list

Lists identifiers for the Marvell Adapter ports discovered on the host.

updatenvram

Updates NVRAM data of Marvell Adapter ports discovered on the host. See [“Adapter Port Update NVRAM” on page 149](#).

## Adapter Port List

The `port list` command (shown issued from a local host) lists all of the supported 2770 Series ports, as follows:

```
~# esxcli qlfc qcc port list
```

The following example shows the `port list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port list
```

The output for both commands is:

```
Ports
-----
FC_51:40:2e:c0:12:3c:f4:a0
FC_51:40:2e:c0:12:3c:f4:a2
FC_51:40:2e:c0:01:c7:ed:18
FC_51:40:2e:c0:01:c7:ed:1a
```

## Adapter Port Update NVRAM

The `port updatenvram` command updates the NVRAM on a Marvell Adapter port:

```
~ # esxcli qlfc qcc port updatenvram
```

### Syntax

```
esxcli qlfc qcc port updatenvram [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-f|--nvramfile <str>` = NVRAM file (required)

### Example

The following example shows the `port updatenvram` command on a local host:

```
~ # esxcli qlfc qcc port updatenvram -i FC_51:40:2e:c0:12:3c:f4:a0 -f /scratch/FCN.dat
```

The following example shows the `port updatenvram` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port updatenvram -i FC_51:40:2e:c0:12:3c:f4:a0 -f /scratch/FCN.dat
```

The output for both commands is:

```
Message: Success  
Reboot Required: true
```

## Adapter Port Information

The `port info` command shows information about the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port info
```

### Syntax

```
esxcli qlfc qcc port info {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the specified Marvell Adapter port. See [Get Port Information](#).

## Get Port Information

The `port info get` command shows port-level information for the specified Marvell Adapter port.

```
~# esxcli qlfc qcc port info get
```

### Syntax

```
esxcli qlfc qcc port info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port `list` output.

### Example

The following example shows the `port info get` command on a local host:

```
~# esxcli qlfc qcc port info get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port info get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port info get  
-i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Port Information:  
  Message: Success  
  Port Info:
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

Data:  
Model: QLE2772  
Port Number: 1  
PCI Bus Number: 0x37  
PCI Device Number: 0x0  
PCI Function Number: 0x0  
PCI Bus Max Width: x8  
PCI Bus Negotiated Width: x8  
PCI Bus Max Speed: 16 Gtps  
PCI Bus Negotiated Speed: 8 Gtps  
Driver Version: 4.1.64  
Host NQN: nqn.2014-08.org.nvmexpress:uuid:  
32324c58-6e35-3154-3943-505030303930  
Host ID: 7286afd3b3ad45da83aa4f2cbdb3c10e  
Node Name: 51:40:2e:c0:12:3c:f4:a1  
Port Name: 51:40:2e:c0:12:3c:f4:a0  
Principal Fabric WWN: 10:00:88:94:71:97:67:63  
Adjacent Fabric WWN: 20:11:88:94:71:97:67:63  
Maximum Speed: 32 Gbps  
Supported Speeds: 8 16 32 Gbps  
Port Interface Type: Physical Port  
Protocol Type: FC  
Port Type: Node Port  
Port State: Online  
Port Connection Mode: Point to Point  
Port Speed: 32 Gbps  
Port ID: 0a:11:00  
Temperature In Celsius: 37  
Flash Firmware Version: 9.09.00  
Flash BIOS Version: 0.00  
Flash FCode Version: NA  
Flash EFI Version: 7.26  
Flash Preload Firmware Area Version: 4.01.15  
Flash FC Board Config Version: 3.07.02  
Flash MPI Firmware Version: 3.03.03  
Flash PEP Firmware Version: 3.01.36  
Flash PEP Board Config Version: 3.01.00  
Flash PEP SoftROM Version: 3.00.13  
Flash MPI SoftROM Version: 255.255.255  
Flash PCIE Serdes Version: 3.00.07

```
Running Firmware Version: 9.09.00
Running MPI Firmware Version: 3.03.03
Running PEP Firmware Version: 3.01.36
Config Lockdown: false
Firmware Update Lockdown: false
MPI Lockdown: false
```

## Adapter Port Statistics

The `port stats` command shows statistics of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port stats
```

### Syntax

```
esxcli qlfc qcc port stats {cmd} [cmd options]
```

### Available Commands

`get`

Shows statistics of the specified Marvell Adapter port. See [Get Port Statistics](#).

`reset`

Resets the statistics of the specified Marvell Adapter port. See [Reset Port Statistics](#).

## Get Port Statistics

The `port stats get` command shows port-level statistics for the specified port on the Marvell Adapter:

```
~# esxcli qlfc qcc port stats get
```

### Syntax

```
esxcli qlfc qcc port stats get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port `list` output.

`-m|--mode <str>` = Mode (required)

#### Parameter

`identifier`

`mode`

#### Value (strings are case-sensitive)

Port identifier from the port `list` command

Driver, Firmware



### Example

The following example shows the `port stats get` command on a local host for Driver mode:

```
~# esxcli qlfc qcc port stats get -i FC_51:40:2e:c0:12:3c:f4:a0  
-m Driver
```

The following example shows the `port stats get` command on a remote host for Driver mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port stats  
get -i FC_51:40:2e:c0:12:3c:f4:a0 -m Driver
```

The output for both commands is:

```
FC Statistics:  
  FCStats:  
    Data:  
    Controller Error Count: 0  
    Device Error Count: 0  
    IO Count: 1676  
    Mega Bytes Count: 4  
    LIP Reset Count: 0  
    Interrupt Count: 0  
  Message: Success
```

The following example shows the `port stats get` command on a local host for Firmware mode:

```
~# esxcli qlfc qcc port stats get -i FC_51:40:2e:c0:12:3c:f4:a0  
-m Firmware
```

The following example shows the `port stats get` command on a remote host for Firmware mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port stats  
get -i FC_51:40:2e:c0:12:3c:f4:a0 -m Firmware
```

The output for both commands is:

```
FC Statistics:  
  FCStats:  
    Data:  
    Link Failure Count: 2  
    Loss Of Sync Count: 4  
    Loss Of Signal Count: 4  
    Primitive Sequence Protocol Error Count: 0  
    Invalid Transmission Word Count: 0
```

```
Invalid CRC Count: 0
```

```
Message: Success
```

## Reset Port Statistics

The `port stats reset` command resets port-level statistics for the specified port on the Marvell Adapter.

```
~# esxcli qlfc qcc port stats reset
```

### Syntax

```
esxcli qlfc qcc port stats reset [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

`-m|--mode <str>` = Mode (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the <code>port list</code> command
mode	Firmware

### Example

The following example shows the `port stats reset` command on a local host for Firmware mode:

```
~# esxcli qlfc qcc port stats reset -i FC_51:40:2e:c0:12:3c:f4:a0  
-m Firmware
```

The following example shows the `port stats reset` command on a remote host for Firmware mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port stats  
reset -i FC_51:40:2e:c0:12:3c:f4:a0 -m Firmware
```

The output for both commands is:

```
Reset FC Statistics:
```

```
Message: Success
```

## Adapter Port SFP DMI Information

The `port dmi` command shows SFP DMI information of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port dmi
```

### Syntax

```
esxcli qlfc qcc port dmi {cmd} [cmd options]
```

### Available Commands

`get`

Shows SFP DMI information of the specified Marvell Adapter port. See [Get Port SFP DMI Information](#).

`getraw`

Shows raw SFP DMI information of the specified Marvell Adapter port. See [Get Port Raw SFP DMI Information](#).

## Get Port SFP DMI Information

The `port dmi get` command shows port-level SFP DMI Information for the specified Marvell Adapter port.

```
~# esxcli qlfc qcc port dmi get
```

### Syntax

```
esxcli qlfc qcc port dmi get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `list` output.

### Example

The following example shows the `port dmi get` command on a local host:

```
~# esxcli qlfc qcc port dmi get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port dmi get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port dmi get  
-i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
DMI Information:
```

```
  Dmi Info:
```

```
    Dmi Data:
```

-----

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

#### Media Information

---

```

Vendor: FINISAR CORP.
Connector: LC (Lucent Connector)
Media Type: 800-M5-SN-S
Part Number: FTLF8532P4BCV-QL
Speed: 3200 MBytes/Sec 1600 MBytes/Sec 800 MBytes/Sec
Revision: A
Serial Number: PY12TQ5
Identifier: SFP/SFP+/SFP28 and later
Extended Compliance Codes: Unspecified
Rate Identifier: FC-PI-6 (32/16/8G Independent
Rx, Tx Rate_Select)
QLogic SFP Installed: Yes

```

---

	Temperature	Voltage	Tx Bias	Tx Power	Rx Power
	(C)	(V)	(mA)	(mW)	(mW)
Value	36.97	3.32	7.88	0.7327	0.7414
Status	Normal	Normal	Normal	Normal	Normal
High Alarm	75.00	3.60	12.00	1.9953	1.9953
High Warning	70.00	3.50	11.50	1.5849	1.5849
Low Warning	0.00	3.10	2.00	0.1585	0.0158
Low Alarm	-5.00	3.00	1.00	0.1259	0.0100

#### Optical Transceiver Digital Diagnostic Data:

##### Address A0

```

Identifier: SFP/SFP+/SFP28 and later
Ext Identifier: GBIC/SFP defined by serial ID only
Connector: LC (Lucent Connector)

```

## 4-Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
Ethernet Speed:
  Compliance: 0x00 0x00 0x00
  FC Link Length: Short Distance (S)
  FC Transmitter Tech: Shortwave Laser w/o OFC (SN)
FC Transmission Media: Multi-mode 50m (M5)
  FC Speed: 3200 MBytes/Sec 1600 MBytes/Sec 800 MBytes/Sec
  Encoding: 64B66B
  BR, Nominal: 0xff
  Rate Identifier: FC-PI-6 (32/16/8G Independent Rx, Tx Rate_Select
Length (9um) - km: 0x00
  Length (9um): 0x00
  Length (50um): 0x03
  Length (62.5um): 0x00
Length
(50um, OM4, Copper): 0x0a
Length
(50um, OM3, Copper): 0x07
  Vendor name: FINISAR CORP.
Extended Compliance
Codes          : Unspecified
  Vendor OUI: 0x00 0x90 0x65
  Vendor PN: FTLF8532P4BCV-QL
  Vendor rev: A
  Wavelength: 0x0352
  CC_BASE: 0x1f
Optional Transceiver
  Signals: -Linear Receiver Output Implemented: 0x0
          -Power Level Declaration: 0x0
          -Cooled Transceiver Declaration: 0x0
          -Retimer or CDR indicator: 0x1
          -Paging implemented indicator: 0x0
          -High Power Level Declaration by bit 1: 0x0
          -High Power Level Declaration by bits 1 and 5: 0x0
          -Reserved: 0x0
          -Signal Loss, as defined in SFP MSA: 0x1
          -Signal Loss, inverted from SFP MSA: 0x0
          -TX_FAULT signal implemented: 0x1
          -TX_DISABLE implemented and disables serial o/p: 0x1
          -RATE_SELECT implemented: 0x1
          -Tunable transmitter technology: 0x0
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```

-Receiver decision threshold implemented: 0x00
Signaling Rate Max: 0x70
Signaling Rate Min: 0x00
    Vendor SN: PY12TQ5
    Date code: 170709
Diag Monitoring Type:-Address change required: 0x0
    -Power Measurement: 0x1
    -Externally Calibrated: 0x0
    -Internally Calibrated: 0x1
    -Digital diag monitoring: 0x1
    -Legacy diagnostic: 0x0
Enhanced Options:-Optional Soft Rate Select ctrl per SFF-8431: 0x1
    -Optional Application Select ctrl per SFF-8079: 0x0
    -Optional Soft RATE_SELECT ctrl and monitoring: 0x1
    -Soft RX_LOS monitoring: 0x1
    -Soft TX_FAULT monitoring: 0x1
    -Soft TX_DISABLE ctrl and monitoring: 0x1
    -Alarm/warning flags: 0x1
SFF-8472 Compliance: Includes functionality described in Rev 12.4 of SFF-8472
    CC_EXT: 0x9b
    Vendor Specific: 0x51 0x4c 0x6f 0x67 0x69 0x63 0x00 0x00
                    0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00
                    0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00
                    0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00
SFP Firmware Version: 0x00 0x00
MCU Firmware Version: 0x00 0x00
DSP Firmware Version: 0x00 0x00 0x00
```

#### Address A2

```

    Temp High Alarm: 0x4b00
    Temp Low Alarm: 0xfb00
    Temp High Warning: 0x4600
    Temp Low Warning: 0x0000
    Voltage High Alarm: 0x8ca0
    Voltage Low Alarm: 0x7530
    Voltage High Warning: 0x88b8
    Voltage Low Warning: 0x7918
    Bias High Alarm: 0x1770
    Bias Low Alarm: 0x01f4
    Bias High Warning: 0x1676
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
    Bias Low Warning: 0x03e8
TX Signal Power High Alarm: 0x4df1
TX Signal Power Low Alarm: 0x04eb
TX Signal Power High Warning: 0x3de9
TX Signal Power Low Warning: 0x0631
RX Signal Power High Alarm: 0x4df1
RX Signal Power Low Alarm: 0x0064
RX Signal Power High Warning: 0x3de9
RX Signal Power Low Warning: 0x009e
    Rx_PWR(4): 0x00000000
    Rx_PWR(3): 0x00000000
    Rx_PWR(2): 0x00000000
    Rx_PWR(1): 0x3f800000
    Rx_PWR(0): 0x00000000
    Tx_I(Slope): 0x0100
    Tx_I(Offset): 0x0000
    Tx_PWR(Slope): 0x0100
    Tx_PWR(Offset): 0x0000
    T(Slope): 0x0100
    T(Offset): 0x0000
    V(Slope): 0x0100
    V(Offset): 0x0000
    Checksum: 0xd4
Temperature MSB: 0x24
Temperature LSB: 0xf8
    Vcc MSB: 0x81
    Vcc LSB: 0xb2
    TX Bias MSB: 0x0f
    TX Bias LSB: 0x66
    TX Power MSB: 0x1c
    TX Power LSB: 0x9f
    RX Power MSB: 0x1c
    RX Power LSB: 0xf6
    Reserved MSB: 0x00
    Reserved LSB: 0x00
    Reserved MSB: 0x00
    Reserved LSB: 0x00
Status/Control Bits:-Data_Ready_Bar: 0x0
                    -LOS: 0x0
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
-TX Fault: 0x0
-Soft RX Rate Select: 0x0
-RX Rate Select State: 0x0
-Soft TX Disable: 0x0
-TX Disable State: 0x0
-EWRAP Control Bit: 0x0
-EWRAP FORWARD Control Bit: 0x0
-OWRAP Control Bit: 0x0
-OWRAP FORWARD Control Bit: 0x0
-TX Signal Power Low Alarm: 0x0
-TX Signal Power High Alarm: 0x0
-TX Bias Low Alarm: 0x0
-TX Bias High Alarm: 0x0
-Vcc Low Alarm: 0x0
-Vcc High Alarm: 0x0
-Temp Low Alarm: 0x0
-Temp High Alarm: 0x0
-RX Signal Power Low Alarm: 0x0
-RX Signal Power High Alarm: 0x0
-TX Signal Power Low Warning: 0x0
-TX Signal Power High Warning: 0x0
-TX Bias Low Warning: 0x0
-TX Bias High Warning: 0x0
-Vcc Low Warning: 0x0
-Vcc High Warning: 0x0
-Temp Low Warning: 0x0
-Temp High Warning: 0x0
-Reserved Warning: 0x0
-Reserved Warning: 0x0
-Reserved Warning: 0x0
-Reserved Warning: 0x0
-Reserved Warning: 0x0
-Reserved Warning: 0x0
-RX Signal Power Low Warning: 0x0
-RX Signal Power High Warning: 0x0
Extended Module Control: -Optional Power Level Select: 0x0
-Optional Power Level Operation State: 0x0
-Power Level 4 Enable: 0x0
-Soft RS(1) Select: 0x0
```



## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
-Adaptive Input EQ Fail Flag: 0x0
-Reserved: 0x0
-Reserved: 0x0
-Reserved: 0x0
Extended Status Bytes: -Optional Tx CDR Unlocked: 0x0
-64GFC Mode: 0x0
-PAM4 Mode Rx Configured: 0x0
-PAM4 Mode Tx Configured: 0x0
-Reserved: 0x0
-Reserved: 0x0
-Reserved: 0x0
Vendor Specific: 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x01
TP1 to TP4 EWRAP Control: -EWRAP Disable: 0x0
-EWRAP Enable: 0x0
TP3 to TP2 OWRAP Control: -OWRAP Disable: 0x0
-OWRAP Enable: 0x0
Electrical Output Tx Tap Pre3: 0x00
Electrical Output Tx Tap Pre2: 0x00
Electrical Output Tx Tap Pre1: 0x00
Electrical Output Tx Tap Main: 0x00
Electrical Output Tx Tap Post1: 0x00
DSP Status Timing Control: 0x00
    DSP Control: 0x00
FC 64G Mode Control: 0x00
    LSN Control: -Train 64G: 0x0
                -Train 32G: 0x0
                -Fixed Speed Switch to 64G: 0x0
                -Reserved: 0x0
                -Reserved: 0x0
                -Reserved: 0x0
                -Client Rx Adaptation Reset: 0x0
                -LSN Mode: 0x0
CDR Firmware Version: 0x00 0x00 0x00
    Laser Version: 0x00
    TIA Version: 0x00
    CDR Version: 0x00
    HW Version: 0x00
    MCU Version: 0x00
    PLP API Version: 0x00
```

Debug MCU Version: 0x00

Message: Success

## Get Port Raw SFP DMI Information

The `port dmi getraw` command shows port-level raw SFP DMI information for the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port dmi getraw
```

### Syntax

```
esxcli qlfc qcc port dmi getraw [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

### Example

The following example shows the `port dmi getraw` command on a local host:

```
~# esxcli qlfc qcc port dmi getraw -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port dmi getraw` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port dmi  
getraw -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

DMI Information:

Dmi Info:

```
Dmi A0Data In Hex: 03 04 07 00 00 00 00 40 40 04 68 06 FF 0C 00 00  
03 00 0A 07 46 49 4E 49 53 41 52 20 43 4F 52 50 2E 20 20 20 00 00 90 65 46 54  
4C 46 38 35 33 32 50 34 42 43 56 2D 51 4C 41 20 20 20 03 52 00 1F 08 3A 70 00  
50 59 31 32 54 51 35 20 20 20 20 20 20 20 20 20 20 20 20 20 20 20 20 20 20 20  
09 9B 51 4C 6F 67 69 63 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
00 00 00 00 00 00
```

```
Dmi A2Data In Hex: 4B 00 FB 00 46 00 00 00 8C A0 75 30 88 B8 79 18  
17 70 01 F4 16 76 03 E8 4D F1 04 EB 3D E9 06 31 4D F1 00 64 3D E9 00 9E 00 00  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
3F 80 00 00 00 00 00 00 01 00 00 00 01 00 00 00 01 00 00 00 01 00 00 00 00
```



```
Message: Success
VPDData:
    Tag: Engineering Date Code
    Value: 1-5917

    Tag: Manufacturing Id
    Value: MA2810401-34 03

    Tag: Product Identifier
    Value: QLogic 2x32Gb QLE2772 FC HBA

    Tag: Part Number
    Value: QLE2772

    Tag: Serial Number
    Value: AFD1923Y07491

    Tag: Miscellaneous Info
    Value: PW=15 Watts
```

## Adapter Port HBA Parameters Configuration

The `port hbaparams` command configures the HBA parameters of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port hbaparams
```

### Syntax

```
esxcli qlfc qcc port hbaparams {cmd} [cmd options]
```

### Available Commands

`get`

Shows the HBA parameters information of the specified Marvell Adapter port. See [Get Port HBA Parameters](#).

`setFile`

Sets the HBA parameters information of the specified Marvell Adapter port in a local cache file. See [SetFile Port HBA Parameters](#).

`set`

Sets the HBA parameters information of the specified Marvell Adapter port from a local cache file to flash on the adapter. See [Set Port HBA Parameters](#).

`restoreDefaults`  
Sets the default values of the HBA parameters information of the specified Marvell Adapter port. See [Restore Default Port HBA Parameters](#).

`save`  
Saves HBA parameters information of the specified Marvell Adapter port to a user-provided file in text format. See [Save Port HBA Parameters](#).

## Get Port HBA Parameters

The `port hbaparams get` command shows port-level HBA parameters information for the Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port hbaparams get
```

### Syntax

```
esxcli qlfc qcc port hbaparams get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

### Example

The following example shows the `port hbaparams get` command on a local host:

```
~# esxcli qlfc qcc port hbaparams get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port hbaparams get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
hbaparams get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
HBA Parameters Info:  
  HBAParameters:  
    Connection Options:Loop_Preferred_Otherwise_Point_To_Point  
    Data Rate: Auto  
    Enable Fabric Assigned WWN: false  
    Enable Fc Tape Support: true  
    Enable Hard Loop Id: true  
    Enable LR: false  
    Enable Lip Full Login: true  
    Enable USCM: true  
    Enable Target Reset: true
```

```
Execution Throttle: 0
Frame Size: 2048
Hard Loop Id: 10
Interrupt Delay Timer In100us: 2
Link Down Timeout In Seconds: 30
Login Retry Count: 8
Loop Reset Delay In Seconds: 15
Luns Per Target: 128
Operation Mode: Interrupt_When_Interrupt_Delay_Timer_
Expires_Or_No_Active_I/O
Port Down Retry Count: 30
Virtual Lane: false
Message: Success
```

## SetFile Port HBA Parameters

The `port hbaparams setFile` command sets port-level HBA parameters information for the specified Marvell Adapter port in a local cache file. This cache file is used by the `set` command to write HBA parameters in the flash. The `port hbaparams setFile` command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port hbaparams setFile
```

### Syntax

```
esxcli qlfc qcc port hbaparams setFile [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the
                        identifier from the port list output.
-c|--connection-options <str> = Connection options
-d|--data-rate <str> = Data rate
-b|--enable-bios <str> = Enable BIOS (use for boot from SAN)
-n|--enable-fabric-assigned-wwn <str> = Enable fabric assigned WWN
-f|--enable-fc-tape <str> = Enable FC tape
-p|--enable-hard-loop-id <str> = Enable hard loop ID
-g|--enable-lip-full-login <str> = Enable LIP full login
-k|--enable-lr <str> = Enable LR
-q|--enable-uscm <str> = Enable Universal SAN Congestion
                        Mitigation (USCM)
-a|--enable-target-reset <str> = Enable target reset
-x|--execution-throttle <long> = Execution throttle
```

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port `list` output.  
`-z|--frame-size <long>` = Frame size  
`-l|--hard-loop-id <long>` = Hard loop ID  
`-e|--interrupt-delay-timer <long>` = Interrupt delay timer  
`-o|--link-down-timeout <long>` = Link down time-out  
`-u|--login-retry-count <long>` = Login retry count  
`-r|--loop-reset-delay <long>` = Loop reset delay  
`-y|--luns-per-target <long>` = Maximum LUNs per target  
`-w|--port-down-retry-count <long>` = Port down retry count  
`-m|--operation-mode <str>` = Operation mode  
`-j|--virtual-lane <str>` = Enable virtual lane  
 For more information about virtual lanes, see the appropriate Marvell QLogic Fibre Channel Adapter user's guide.

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
<code>identifier</code>	Port identifier from the port <code>list</code> command
<code>connection-options</code>	<code>Loop_Only</code> , <code>Point_To_Point_Only</code> , <code>Loop_Preferred_Otherwise_Point_To_Point</code>
<code>data-rate</code>	<code>Auto</code> , <code>1_Gbps</code> , <code>2_Gbps</code> , <code>4_Gbps</code> , <code>8_Gbps</code> , <code>16_Gbps</code> , <code>32_Gbps</code> , <code>64_Gbps</code> <sup>a</sup>
<code>enable-bios</code>	<code>true</code> , <code>false</code>
<code>enable-fabric-assigned-wwn</code>	<code>true</code> , <code>false</code>
<code>enable-fc-tape</code>	<code>true</code> , <code>false</code>
<code>enable-hard-loop-id</code>	<code>true</code> , <code>false</code>
<code>enable-lip-full-login</code>	<code>true</code> , <code>false</code>
<code>enable-lr</code>	<code>true</code> , <code>false</code>
<code>enable-uscm</code>	<code>true</code> , <code>false</code>
<code>enable-target-reset</code>	<code>true</code> , <code>false</code>
<code>execution-throttle</code>	0-65535
<code>frame-size</code>	512, 1024, 2048, 2112 <sup>b</sup>
<code>hard-loop-id</code>	0-125
<code>interrupt-delay-timer</code>	0-255

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
link-down-timeout	0-240
login-retry-count	0-255
loop-reset-delay	0-255
luns-per-target	0, 8, 16, 32, 64, 128, 256
port-down-retry-count	0-255
operation-mode	Interrupt_For_Every_I/O_Completion, Interrupt_When_Interrupt_Delay_Timer_Expires, Interrupt_When_Interrupt_Delay_Timer_ Expires_Or_No_Active_I/O
virtual-lane	true, false  For more information about virtual lanes, see the appropriate Marvell QLogic Fibre Channel Adapter user's guide.

<sup>a</sup> 2800 Series Adapters only. In addition, the Loop\_Only connection option is not supported for 64Gbps adapters.

<sup>b</sup> Frame size 2112 is supported only on 2880 Series Adapters.

### Example

The following example shows the `port hbaparams setFile` command on a local host:

```
~# esxcli qlfc qcc port hbaparams setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -z 2048
```

The following example shows the `port hbaparams setFile` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
hbaparams setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -z 2048
```

The output for both commands is:

HBA Parameters Info:

```
HBAParameters:  
    Connection Options:Loop_PREFERRED_Otherwise_Point_  
                        To_Point  
    Data Rate: Auto  
    Enable Fabric Assigned WWN: false  
    Enable Fc Tape Support: true  
    Enable Hard Loop Id: true  
    Enable Host Hba Bios: true  
    Enable LR: false  
    Enable Lip Full Login: true
```



```
Enable USCM: true
Enable Target Reset: true
Execution Throttle: 0
Frame Size: 2048
Hard Loop Id: 10
Interrupt Delay Timer In100us: 2
Link Down Timeout In Seconds: 30
Login Retry Count: 8
Loop Reset Delay In Seconds: 15
Luns Per Target: 128
Operation Mode:
Interrupt_When_Interrupt_Delay_Timer_Expires_Or_No_Active_I/O
Port Down Retry Count: 30
Virtual Lane: false
Message: Success
```

## Set Port HBA Parameters

The `port hbaparams set` command sets port-level HBA parameters information for the Marvell Adapter port from the local cache file. If the local cache file is not present, this command fails. When this command completes successfully, the local cache file is deleted. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port hbaparams set
```

### Syntax

```
esxcli qlfc qcc port hbaparams set [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the identifier from the port list output.
```

### Example

The following example shows the `port hbaparams set` command on a local host:

```
~# esxcli qlfc qcc port hbaparams set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port hbaparams set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port hbaparams set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

HBA Parameters Info:

HBAParameters:

```
Connection Options:Loop_Preferred_Otherwise_Point_To_Point
Data Rate: Auto
Enable Fabric Assigned WWN: false
Enable Fc Tape Support: true
Enable Hard Loop Id: true
Enable LR: false
Enable Lip Full Login: true
Enable USCM: true
Enable Target Reset: true
Execution Throttle: 0
Frame Size: 2048
Hard Loop Id: 10
Interrupt Delay Timer In100us: 2
Link Down Timeout In Seconds: 30
Login Retry Count: 8
Loop Reset Delay In Seconds: 15
Luns Per Target: 128
Operation Mode:
Interrupt_When_Interrupt_Delay_Timer_Expires_Or_No_Active_I/O
Port Down Retry Count: 30
Virtual Lane: false
```

Message: Success

Reboot Required: true

## Restore Default Port HBA Parameters

The `port hbaparams resetoreDefaults` command sets port-level HBA parameters information for the specified Marvell Adapter port to its default values. This command also deletes all the boot settings. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port hbaparams restoreDefaults
```

### Syntax

```
esxcli qlfc qcc port hbaparams restoreDefaults [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port hbaparams restoreDefaults` command on a local host:

```
~# esxcli qlfc qcc port hbaparams restoreDefaults -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port hbaparams restoreDefaults` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
hbaparams restoreDefaults -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Restore Defaults Info:  
  Message: Success  
  Reboot Required: true
```

## Save Port HBA Parameters

The `port hbaparams save` command saves port-level HBA parameters information for the specified port on the Marvell Adapter to a user-provided file. This command is supported on the physical port (not on an NPIV virtual port).

```
~# esxcli qlfc qcc port hbaparams save
```

## Syntax

```
esxcli qlfc qcc port hbaparams save [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

`-f|--filename <str>` = File where Marvell Adapter port parameters will be saved. The file is in text format.

### Example

The following example shows the `port hbaparams save` command on a local host:

```
~# esxcli qlfc qcc port hbaparams save -i  
FC_51:40:2e:c0:12:3c:f4:a0 -f fc_params.dat
```

The following example shows the `port hbaparams save` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
hbaparams save -i FC_51:40:2e:c0:12:3c:f4:a0 -f fc_params.dat
```

The output for both commands is:

```
HBA Parameters Save:  
Message: Success
```

## Adapter Port Buffer-To-Buffer Credit Recovery Configuration

The `port bbcr` command configures buffer-to-buffer credit (BBCR) values of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port bbcr
```

### Syntax

```
esxcli qlfc qcc port bbcr {cmd} [cmd options]
```

### Available Commands

`get`

Shows BBCR configuration of the specified Marvell Adapter port. See [Get Port BBCR Configuration](#).

`setFile`

Sets BBCR configuration of the specified Marvell Adapter port in a local cache file. See [SetFile Port BBCR Configuration](#).

`set`

Sets BBCR configuration of the specified Marvell Adapter port from a local cache file to flash on the adapter. See [Set Port BBCR Configuration](#).

### Get Port BBCR Configuration

The `port bbcr get` command shows port-level BBCR configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bbcr get
```

### Syntax

```
esxcli qlfc qcc port bbcr get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

## Example

The following example shows the `port bbcr get` command on a local host:

```
~# esxcli qlfc qcc port bbcr get -i FC_51:40:2x1e:c0:12:3c:f4:a0
```

The following example shows the `port bbcr get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port bbcr get  
-i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
BBCR Info:  
  BBCR:  
    Data:  
      BBCR Status: true  
      BBCR Configured: 4  
      BBCR State: Online  
      BBCR Negotiated: 4
```

```
Message: Success
```

## SetFile Port BBCR Configuration

The `port bbcr setFile` command sets port-level BBCR configuration for the specified Marvell Adapter port in a local cache file. This cache file is used by the `set` command to write BBCR configuration in the flash. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bbcr setFile
```

## Syntax

```
esxcli qlfc qcc port bbcr setFile [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

`-c|--bbcr-configured <long>` = Buffer-to-buffer credit configured value

`-b|--bbcr-status <str>` = Buffer-to-buffer credit status

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
Identifier	Port identifier from the <code>port list</code> command
bbcr-configured	0-15
bbcr-status	true, false

### Example

The following example shows the `port bbcr setFile` command on a local host:

```
~# esxcli qlfc qcc port bbcr setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -c 8
```

The following example shows the `port hbaparams setFile` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port bbcr setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -c 8
```

The output for both commands is:

```
BBCR Info:
  BBCR:
    Data:
      BBCR Status: true
      BBCR Configured: 8
      BBCR State: Online
      BBCR Negotiated: 4

  Message: Success
```

## Set Port BBCR Configuration

The `port bbcr set` command sets port-level BBCR configuration for the specified Marvell Adapter port from the local cache file. If the local cache file is not present, this command fails. When this command completes successfully, the local cache file is deleted. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bbcr set
```

### Syntax

```
esxcli qlfc qcc port bbcr set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port bocr set` command on a local host:

```
~# esxcli qlfc qcc port bocr set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port bocr set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port bocr set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
BBCR Info:
  BBCR:
    Data:
      BBCR Status: true
      BBCR Configured: 8
      BBCR State: Online
      BBCR Negotiated: 4

  Message: Success
  Reboot Required: true
```

## Adapter Port Forward-Error-Correction Configuration

The `port fec` command configures forward-error-correction (FEC) values of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port fec
```

### Syntax

```
esxcli qlfc qcc port fec {cmd} [cmd options]
```

### Available Commands

`get`

Shows FEC configuration of the specified Marvell Adapter port. See [Get Port FEC Configuration](#).

`set`

Sets FEC configuration of the specified Marvell Adapter port to flash on the adapter. See [Set Port FEC Configuration](#).

## Get Port FEC Configuration

The `port fec get` command shows port-level FEC configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port fec get
```

### Syntax

```
esxcli qlfc qcc port fec get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

### Example

The following example shows the `port fec get` command on a local host:

```
~# esxcli qlfc qcc port fec get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port fec get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port fec get  
-i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
FEC Info:  
  FEC:  
    Correctable FECerrors: 0  
    FEC_Status: true  
    Uncorrectable FECerrors: 0  
  Message: Success
```

## Set Port FEC Configuration

The `port fec set` command sets port-level FEC configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port fec set
```

### Syntax

```
esxcli qlfc qcc port fec set [cmd options]
```



## Keywords

- i|--identifier <str> = Port identifier (required). Obtain the identifier from the port list output.
- f|--fec-status <str> = FEC status
- r|--reset <str> = FEC counter reset

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
Identifier	Port identifier from the port list command
fec-status	true, false
reset	true, false

## Example

The following example shows the `port fec set` command on a local host:

```
~# esxcli qlfc qcc port fec set -i FC_51:40:2e:c0:12:3c:f4:a0 -f true
```

The following example shows the `port fec set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port fec set  
-i FC_51:40:2e:c0:12:3c:f4:a0 -f true
```

The output for both commands is:

```
FEC Info:  
  FEC:  
    Correctable FECerrors: 0  
    FEC_Status: true  
    Uncorrectable FECerrors: 0  
  Message: Success  
  Reboot Required: true
```

## Adapter Port Boot Configuration

The `port bootconfig` command configures boot target and LUN settings for boot from SAN of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port bootconfig
```

### Syntax

```
esxcli qlfc qcc port bootconfig {cmd} [cmd options]
```

## Available Commands

get

Shows the boot configuration of the specified Marvell Adapter port. See [Get Port Boot Configuration](#).

setFile

Sets the boot configuration of the specified Marvell Adapter port in a local cache file. See [SetFile Port Boot Configuration](#).

set

Sets the boot configuration of the specified Marvell Adapter port from a local cache file to flash on the adapter. See [Set Port Boot Configuration](#).

## Get Port Boot Configuration

The `port bootconfig get` command shows port-level boot configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bootconfig get
```

### Syntax

```
esxcli qlfc qcc port bootconfig get [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `list` output.
- `-b|--boot-mode <str>` = Boot mode (BIOS, UEFI). UEFI mode is supported only on adapters with ISP2700/2800 Series Controllers.

### Example

The following example shows the `port bootconfig get` command on a local host in BIOS mode:

```
~# esxcli qlfc qcc port bootconfig get -i FC_51:40:2e:c0:12:3c:f4:a0  
-b BIOS
```

The following example shows the `port bootconfig get` command on a remote host in BIOS mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfig get -i FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS
```

The output for both commands is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter BIOS: false
```

```
Selectable Boot: false
Fabric Assigned Boot LUN: true
Drive 0 WWPN: 00:00:00:00:00:00:00:00
Drive 0 LUN: 0
Drive 1 WWPN: 00:00:00:00:00:00:00:00
Drive 1 LUN: 0
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
Drive 3 LUN: 0
```

Message: Success

---

#### NOTE

UEFI mode is supported only for ISP2700 and ISP2800 based adapters

---

The following example shows the `port bootconfig get` command on a local host in UEFI mode:

```
~# esxcli qlfc qcc port bootconfig get -i FC_51:40:2e:c0:12:3c:f4:a0
-b UEFI
```

The following example shows the `port bootconfig get` command on a remote host in UEFI mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port
bootconfig get -i FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI
```

The output for both commands is:

```
Data:
Adapter Driver: false
Selective Login: false
Selective LUN Login: false
World Login: true
Fabric Assigned Boot LUN: false
Fabric Assigned Boot LUN: false
Drive 0 WWPN: 00:00:00:00:00:00:00:00
Drive 0 LUN: 0
Drive 1 WWPN: 00:00:00:00:00:00:00:00
Drive 1 LUN: 0
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
```

```
Drive 3 LUN: 0
Drive 4 WWPN: 00:00:00:00:00:00:00:00
Drive 4 LUN: 0
Drive 5 WWPN: 00:00:00:00:00:00:00:00
Drive 5 LUN: 0
Drive 6 WWPN: 00:00:00:00:00:00:00:00
Drive 6 LUN: 0
Drive 7 WWPN: 00:00:00:00:00:00:00:00
Drive 7 LUN: 0
Message: Success
```

## SetFile Port Boot Configuration

The `port bootconfig setFile` command sets port-level boot configuration for the specified Marvell Adapter port in a local cache file. This cache file is used by the `set` command to write the boot configuration in the flash. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bootconfig setFile
```

### Syntax

```
esxcli qlfc qcc port bootconfig setFile [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the
                        identifier from the port list output.
-a|--enable-bfs<str> = Enable boot-from-SAN
-b|--boot-mode <str> = Boot mode
-c|--selective-lun-login <str> = Selective LUN login (UEFI mode only)
-d|--selectable-boot <str> = Selectable boot (BIOS mode only)
-e|--selective-login <str> = Selective login (UEFI mode only)
-f|--fabric-assigned-boot-lun <str> = Fabric assigned boot LUN
-g|--world-login <str> = World login (UEFI mode only)
-j|--drive-0 <str> = Boot target 0 (":" separated) and LUN
                    number ("- " separated)
-k|--drive-1 <str> = Boot target 1 (":" separated) and LUN
                    number ("- " separated)
-l|--drive-2 <str> = Boot target 2 (":" separated) and LUN
                    number ("- " separated)
-m|--drive-3 <str> = Boot target 3 (":" separated) and LUN
                    number ("- " separated)
```

- n|--drive-4 <str> = Boot target 4 (":" separated) and LUN number ("- " separated) (UEFI mode only)
- o|--drive-5 <str> = Boot target 5 (":" separated) and LUN number ("- " separated) (UEFI mode only)
- p|--drive-6 <str> = Boot target 6 (":" separated) and LUN number ("- " separated) (UEFI mode only)
- q|--drive-7 <str> = Boot target 7 (":" separated) and LUN number ("- " separated) (UEFI mode only)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
Identifier	Port identifier from the <code>port list</code> command
boot-mode	BIOS, UEFI
enable-bfs	true, false
selectable-boot	true, false
fabric-assigned-boot-lun	true, false
selective-login	true, false
selective-lun-login	true, false
world-login	true, false
drive-0	":" separated WWPN and "-" separated LUN
drive-1	":" separated WWPN and "-" separated LUN
drive-2	":" separated WWPN and "-" separated LUN
drive-3	":" separated WWPN and "-" separated LUN
drive-4	":" separated WWPN and "-" separated LUN
drive-5	":" separated WWPN and "-" separated LUN
drive-6	":" separated WWPN and "-" separated LUN
drive-7	":" separated WWPN and "-" separated LUN

### Example

The following example shows the `port bootconfig setFile` command on a local host in BIOS mode:

```
~# esxcli qlfc qcc port bootconfig setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS -d true
```

The following example shows the `port bootconfig setFile` command on a remote host in BIOS mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfig setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS -d true
```

The output for both commands is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter BIOS: false  
      Selectable Boot: true  
      Fabric Assigned Boot LUN: true  
      Drive 0 WWPN: 00:00:00:00:00:00:00:00  
      Drive 0 LUN: 0  
      Drive 1 WWPN: 00:00:00:00:00:00:00:00  
      Drive 1 LUN: 0  
      Drive 2 WWPN: 00:00:00:00:00:00:00:00  
      Drive 2 LUN: 0  
      Drive 3 WWPN: 00:00:00:00:00:00:00:00  
      Drive 3 LUN: 0  
Message: Success
```

The following example shows the `port bootconfig setFile` command on a local host in UEFI mode:

```
~# esxcli qlfc qcc port bootconfig setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI -e true
```

The following example shows the `port bootconfig setFile` command on a remote host in UEFI mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfig setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI -e true
```

The output for both commands is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter Driver: false  
      Selective Login: true  
      Selective LUN Login: false  
      World Login: true  
      Fabric Assigned Boot LUN: false  
      Drive 0 WWPN: 00:00:00:00:00:00:00:00
```

```
Drive 0 LUN: 0
Drive 1 WWPN: 00:00:00:00:00:00:00:00
Drive 1 LUN: 0
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
Drive 3 LUN: 0
Drive 4 WWPN: 00:00:00:00:00:00:00:00
Drive 4 LUN: 0
Drive 5 WWPN: 00:00:00:00:00:00:00:00
Drive 5 LUN: 0
Drive 6 WWPN: 00:00:00:00:00:00:00:00
Drive 6 LUN: 0
Drive 7 WWPN: 00:00:00:00:00:00:00:00
Drive 7 LUN: 0
```

Message: Success

## Set Port Boot Configuration

The `port bootconfig set` command sets port-level boot configuration for the specified Marvell Adapter port from the local cache file. If the local cache file is not present, this command fails. When this command completes successfully, the local cache file is deleted.

```
~# esxcli qlfc qcc port bootconfig set
```

---

### NOTE

This command is supported only on the physical port (not on the NPIV virtual port).

This command is supported only for Fibre Channel Protocol (FCP) targets. Non-Volatile Memory Express (NVMe) targets are not supported.

---

## Syntax

```
esxcli qlfc qcc port bootconfig set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port bootconfig set` command on a local host:

```
~# esxcli qlfc qcc port bootconfig set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port bootconfig set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfig set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands depends on the last boot mode value used in the `setFile` command.

When the boot mode is BIOS, the command output is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
    Adapter BIOS: false  
    Selectable Boot: true  
    Fabric Assigned Boot LUN: true  
    Drive 0 WWPN: 00:00:00:00:00:00:00:00  
    Drive 0 LUN: 0  
    Drive 1 WWPN: 00:00:00:00:00:00:00:00  
    Drive 1 LUN: 0  
    Drive 2 WWPN: 00:00:00:00:00:00:00:00  
    Drive 2 LUN: 0  
    Drive 3 WWPN: 00:00:00:00:00:00:00:00  
    Drive 3 LUN: 0  
Message: Success  
Reboot Required: false
```

When the boot mode is UEFI, the command output is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
    Adapter Driver: false  
    Selective Login: true
```



```
Selective LUN Login: false
World Login: true
Fabric Assigned Boot LUN: false
Drive 0 WWPN: 00:00:00:00:00:00:00:00
Drive 0 LUN: 0
Drive 1 WWPN: 00:00:00:00:00:00:00:00
Drive 1 LUN: 0
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
Drive 3 LUN: 0
Drive 4 WWPN: 00:00:00:00:00:00:00:00
Drive 4 LUN: 0
Drive 5 WWPN: 00:00:00:00:00:00:00:00
Drive 5 LUN: 0
Drive 6 WWPN: 00:00:00:00:00:00:00:00
Drive 6 LUN: 0
Drive 7 WWPN: 00:00:00:00:00:00:00:00
Drive 7 LUN: 0
```

```
Message: Success
Reboot Required: false
```

9

## Adapter Port Boot Configuration (Extended)

The `port bootconfigext` command configures boot target and LUN settings to boot from SAN from the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port bootconfigext
```

### Syntax

```
esxcli qlfc qcc port bootconfigext {cmd} [cmd options]
```

### Available Commands

`get`

Shows the boot configuration of the specified Marvell Adapter port. See [Get Port Boot Configuration \(Extended\)](#).

`setFile`

Sets the boot configuration of the specified Marvell Adapter port from a local cache file. See [SetFile Port Boot Configuration \(Extended\)](#).

set

Sets the boot configuration of the specified Marvell Adapter port from a local cache file to flash on the adapter. See [Set Port Boot Configuration \(Extended\)](#).

### Get Port Boot Configuration (Extended)

The `port bootconfigext get` command shows port-level boot configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bootconfigext get
```

#### Syntax

```
esxcli qlfc qcc port bootconfigext get [cmd options]
```

#### Keywords

- i|--identifier <str> = Port identifier (required). Obtain the identifier from the port list output.
- b|--boot-mode <str> = Boot mode (BIOS, UEFI, NVME). UEFI and NVME modes are supported only on adapters with ISP2700/2800 Series Controllers. This keyword is required.

#### Example

The following example shows the `port bootconfigext get` command on a local host in BIOS mode:

```
~# esxcli qlfc qcc port bootconfigext get -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS
```

The following example shows the `port bootconfigext get` command on a remote host in BIOS mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfigext get -i FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS
```

The output for both commands is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter BIOS: false  
      Selectable Boot: false  
      Fabric Assigned Boot LUN: true  
      Drive 0 WWPN: 00:00:00:00:00:00:00:00  
      Drive 0 LUN: 0  
      Drive 1 WWPN: 00:00:00:00:00:00:00:00  
      Drive 1 LUN: 0
```

```
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
Drive 3 LUN: 0
Message: Success
```

The following example shows the `port bootconfigext get` command on a local host in UEFI mode:

```
~# esxcli qlfc qcc port bootconfigext get -i
FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI
```

The following example shows the `port bootconfigext get` command on a remote host in UEFI mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port
bootconfigext get -i FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI
```

The output for both commands is:

```
Boot Config Info:
  Boot Config:
    Data:
      Adapter Driver: false
      Selective Login: false
      Selective LUN Login: false
      World Login: true
      Fabric Assigned Boot LUN: false
      Drive 0 WWPN: 00:00:00:00:00:00:00:00
      Drive 0 LUN: 0
      Drive 1 WWPN: 00:00:00:00:00:00:00:00
      Drive 1 LUN: 0
      Drive 2 WWPN: 00:00:00:00:00:00:00:00
      Drive 2 LUN: 0
      Drive 3 WWPN: 00:00:00:00:00:00:00:00
      Drive 3 LUN: 0
      Drive 4 WWPN: 00:00:00:00:00:00:00:00
      Drive 4 LUN: 0
      Drive 5 WWPN: 00:00:00:00:00:00:00:00
      Drive 5 LUN: 0
      Drive 6 WWPN: 00:00:00:00:00:00:00:00
      Drive 6 LUN: 0
```

```
Drive 7 WWPN: 00:00:00:00:00:00:00:00
Drive 7 LUN: 0
```

Message: Success

The following example shows the `port bootconfigext get` command on a local host operating in NVME mode:

```
~# esxcli qlfc qcc port bootconfigext get -i
FC_51:40:2e:c0:12:3c:f4:a0 -b NVME
```

The following example shows the `port bootconfigext get` command on a remote host in UEFI mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port
bootconfigext get -i FC_51:40:2e:c0:12:3c:f4:a0 -b NVME
```

The output for both commands is:

Boot Config Info:

Boot Config:

Data:

```
Adapter Driver: true
Selective Login: false
Selective LUN Login: false
World Login: true
Fabric Assigned Boot LUN: false
FC NVMe: true
Host NQN: nqn.2014-08.com.marvell:nvme:FCBFSAutomationLun0
Host ID: 62978f65f57dabb29525f40270d6f210
Storage 0: true
Storage 0 WWNN: 23:98:00:a0:98:f4:68:4a
Storage 0 WWPN: 23:9a:00:a0:98:f4:68:4a
Storage 0 NQN: nqn.1992-08.com.netapp:sn.
                4d9248d2e18011ecad6d00a098d6abfa:
                subsystem.AM-Automation-SUB
Storage 0 ControllerID: 0x101
Storage 0 NamespaceID: 7
Storage 1: false
Storage 1 WWNN: 00:00:00:00:00:00:00:00
Storage 1 WWPN: 00:00:00:00:00:00:00:00
Storage 1 NQN:
Storage 1 ControllerID: 0x0
Storage 1 NamespaceID: 0
Storage 2: false
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
Storage 2 WWNN: 00:00:00:00:00:00:00:00
Storage 2 WWPN: 00:00:00:00:00:00:00:00
Storage 2 NQN:
Storage 2 ControllerID: 0x0
Storage 2 NamespaceID: 0
Storage 3: false
Storage 3 WWNN: 00:00:00:00:00:00:00:00
Storage 3 WWPN: 00:00:00:00:00:00:00:00
Storage 3 NQN:
Storage 3 ControllerID: 0x0
Storage 3 NamespaceID: 0
Storage 4: false
Storage 4 WWNN: 00:00:00:00:00:00:00:00
Storage 4 WWPN: 00:00:00:00:00:00:00:00
Storage 4 NQN:
Storage 4 ControllerID: 0x0
Storage 4 NamespaceID: 0
Storage 5: false
Storage 5 WWNN: 00:00:00:00:00:00:00:00
Storage 5 WWPN: 00:00:00:00:00:00:00:00
Storage 5 NQN:
Storage 5 ControllerID: 0x0
Storage 5 NamespaceID: 0
Storage 6: false
Storage 6 WWNN: 00:00:00:00:00:00:00:00
Storage 6 WWPN: 00:00:00:00:00:00:00:00
Storage 6 NQN:
Storage 6 ControllerID: 0x0
Storage 6 NamespaceID: 0
Storage 7: false
Storage 7 WWNN: 00:00:00:00:00:00:00:00
Storage 7 WWPN: 00:00:00:00:00:00:00:00
Storage 7 NQN:
Storage 7 ControllerID: 0x0
Storage 7 NamespaceID: 0
```

Message: Success

## SetFile Port Boot Configuration (Extended)

The `port bootconfigext setFile` command sets port-level boot configuration for the specified Marvell Adapter port in a local cache file. This cache file is used by the `set` command to write the boot configuration in the flash. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port bootconfigext setFile
```

### Syntax

```
esxcli qlfc qcc port bootconfigext setFile [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the  
                        identifier from the port list output.  
-a|--enable-bfs<str> = Enable boot-from-SAN  
-b|--boot-mode <str> = Boot mode  
-c|--selective-lun-login <str> = Selective LUN login (UEFI and NVME  
                                modes only)  
-d|--selectable-boot <str> = Selectable boot (BIOS mode only)  
-e|--selective-login <str> = Selective login (UEFI and NVMe modes  
                                only)  
-f|--fabric-assigned-boot-lun <str> = Fabric assigned boot LUN  
    g|--world-login <str> = World login (UEFI and NVMe modes only)  
-l|--boot-target-enable <str> = Boot target enable (NVMe mode only)  
    -m|--fc-nvme <str> = Fibre Channel NVMe (NVMe mode only)  
-n|--boot-target-num <long> = Boot target number  
    -o|--boot-disk-num <long> = Boot disk (LUN or namespace ID) number  
-p|--boot-target-wwpn <str> = Boot target WWPN (":" separated)
```

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
Identifier	Port identifier from the <code>port list</code> command
boot-mode	BIOS, UEFI, NVME
enable-bfs	true, false
selectable-boot	true, false
fabric-assigned-boot-lun	true, false
selective-login	true, false
selective-lun-login	true, false

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
world-login	true, false
fc-nvme	true, false
boot-target-num	0–3 (BIOS) or 0–7 (UEFI mode and NVMe mode)
boot-target-wwpn	“:” separated WWPN
boot-disk-num	0–65,535
boot-target-enable	true, false

### Example

The following example shows the `port bootconfigext setFile` command on a local host in BIOS mode:

```
~# esxcli qlfc qcc port bootconfigext setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS -d true
```

The following example shows the `port bootconfigext setFile` command on a remote host in BIOS mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfigext setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -b BIOS -d  
true
```

The output for both commands is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter BIOS: false  
      Selectable Boot: true  
      Fabric Assigned Boot LUN: true  
      Drive 0 WWPN: 00:00:00:00:00:00:00:00  
      Drive 0 LUN: 0  
      Drive 1 WWPN: 00:00:00:00:00:00:00:00  
      Drive 1 LUN: 0  
      Drive 2 WWPN: 00:00:00:00:00:00:00:00  
      Drive 2 LUN: 0  
      Drive 3 WWPN: 00:00:00:00:00:00:00:00  
      Drive 3 LUN: 0  
  Message: Success
```

The following example shows the `port bootconfigext setFile` command on a local host in UEFI mode:

```
~# esxcli qlfc qcc port bootconfigext setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI -e true
```

The following example shows the `port bootconfigext setFile` command on a remote host in UEFI mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfigext setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -b UEFI -e  
true
```

The output for both commands is:

Boot Config Info:

    Boot Config:

        Data:

        Adapter Driver: false

        Selective Login: true

        Selective LUN Login: false

        World Login: true

        Fabric Assigned Boot LUN: false

        Drive 0 WWPN: 00:00:00:00:00:00:00:00

        Drive 0 LUN: 0

        Drive 1 WWPN: 00:00:00:00:00:00:00:00

        Drive 1 LUN: 0

        Drive 2 WWPN: 00:00:00:00:00:00:00:00

        Drive 2 LUN: 0

        Drive 3 WWPN: 00:00:00:00:00:00:00:00

        Drive 3 LUN: 0

        Drive 4 WWPN: 00:00:00:00:00:00:00:00

        Drive 4 LUN: 0

        Drive 5 WWPN: 00:00:00:00:00:00:00:00

        Drive 5 LUN: 0

        Drive 6 WWPN: 00:00:00:00:00:00:00:00

        Drive 6 LUN: 0

        Drive 7 WWPN: 00:00:00:00:00:00:00:00

        Drive 7 LUN: 0

Message: Success



The following example shows the `port bootconfigext setFile` command on a local host in NVME mode:

```
~# esxcli qlfc qcc port bootconfigext setFile -i  
FC_51:40:2e:c0:12:3c:f4:a0 -b NVME -e true
```

The following example shows the `port bootconfigext setFile` command on a remote host in NVME mode:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfigext setFile -i FC_51:40:2e:c0:12:3c:f4:a0 -b NVME -e  
true
```

The output for both commands is:

Boot Config Info:

    Boot Config:

        Data:

        Adapter Driver: true

        Selective Login: true

        Selective LUN Login: false

        World Login: true

        Fabric Assigned Boot LUN: false

        FC NVMe: true

        Host NQN: nqn.2014-08.com.marvell:nvme:FCBFSAutomationLun0

        Host ID: 62978f65f57dabb29525f40270d6f210

        Storage 0: true

        Storage 0 WWNN: 23:98:00:a0:98:f4:68:4a

        Storage 0 WWPN: 23:9a:00:a0:98:f4:68:4a

        Storage 0 NQN: nqn.1992-08.com.netapp:sn.  
                          4d9248d2e18011ecad6d00a098d6abfa:  
                          subsystem.AM-Automation-SUB

        Storage 0 ControllerID: 0x101

        Storage 0 NamespaceID: 7

        Storage 1: false

        Storage 1 WWNN: 00:00:00:00:00:00:00:00

        Storage 1 WWPN: 00:00:00:00:00:00:00:00

        Storage 1 NQN:

        Storage 1 ControllerID: 0x0

        Storage 1 NamespaceID: 0

        Storage 2: false

        Storage 2 WWNN: 00:00:00:00:00:00:00:00

        Storage 2 WWPN: 00:00:00:00:00:00:00:00

        Storage 2 NQN:

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
Storage 2 ControllerID: 0x0
Storage 2 NamespaceID: 0
Storage 3: false
Storage 3 WWNN: 00:00:00:00:00:00:00:00
Storage 3 WWPN: 00:00:00:00:00:00:00:00
Storage 3 NQN:
Storage 3 ControllerID: 0x0
Storage 3 NamespaceID: 0
Storage 4: false
Storage 4 WWNN: 00:00:00:00:00:00:00:00
Storage 4 WWPN: 00:00:00:00:00:00:00:00
Storage 4 NQN:
Storage 4 ControllerID: 0x0
Storage 4 NamespaceID: 0
Storage 5: false
Storage 5 WWNN: 00:00:00:00:00:00:00:00
Storage 5 WWPN: 00:00:00:00:00:00:00:00
Storage 5 NQN:
Storage 5 ControllerID: 0x0
Storage 5 NamespaceID: 0
Storage 6: false
Storage 6 WWNN: 00:00:00:00:00:00:00:00
Storage 6 WWPN: 00:00:00:00:00:00:00:00
Storage 6 NQN:
Storage 6 ControllerID: 0x0
Storage 6 NamespaceID: 0
Storage 7: false
Storage 7 WWNN: 00:00:00:00:00:00:00:00
Storage 7 WWPN: 00:00:00:00:00:00:00:00
Storage 7 NQN:
Storage 7 ControllerID: 0x0
Storage 7 NamespaceID: 0
```

Message: Success

## Set Port Boot Configuration (Extended)

The `port bootconfigext set` command sets port-level boot configuration for the specified Marvell Adapter port from the local cache file. If the local cache file is not present, this command fails. When this command completes successfully, the local cache file is deleted.

```
~# esxcli qlfc qcc port bootconfigext set
```

---

### NOTE

This command is supported only on the physical port (not on the NPIV virtual port).

This command is supported for both Fibre Channel Protocol (FCP) targets and non-Volatile Memory Express (NVMe) targets.

---

### Syntax

```
esxcli qlfc qcc port bootconfigext set [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port bootconfigext set` command on a local host:

```
~# esxcli qlfc qcc port bootconfigext set -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port bootconfigext set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
bootconfigext set -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is dependent on the last boot mode value used in the `setFile` command.

If BIOS boot mode is used, the output is:

```
Boot Config Info:  
  Boot Config:  
    Data:  
      Adapter BIOS: false  
      Selectable Boot: true
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
Fabric Assigned Boot LUN: true
Drive 0 WWPN: 00:00:00:00:00:00:00:00
Drive 0 LUN: 0
Drive 1 WWPN: 00:00:00:00:00:00:00:00
Drive 1 LUN: 0
Drive 2 WWPN: 00:00:00:00:00:00:00:00
Drive 2 LUN: 0
Drive 3 WWPN: 00:00:00:00:00:00:00:00
Drive 3 LUN: 0
Message: Success
Reboot Required: false
```

#### If UEFI boot mode used, the output is:

```
Boot Config Info:
  Boot Config:
    Data:
      Adapter Driver: false
      Selective Login: true
      Selective LUN Login: false
      World Login: true
      Fabric Assigned Boot LUN: false
      Fabric Assigned Boot LUN: false
      Drive 0 WWPN: 00:00:00:00:00:00:00:00
      Drive 0 LUN: 0
      Drive 1 WWPN: 00:00:00:00:00:00:00:00
      Drive 1 LUN: 0
      Drive 2 WWPN: 00:00:00:00:00:00:00:00
      Drive 2 LUN: 0
      Drive 3 WWPN: 00:00:00:00:00:00:00:00
      Drive 3 LUN: 0
      Drive 4 WWPN: 00:00:00:00:00:00:00:00
      Drive 4 LUN: 0
      Drive 5 WWPN: 00:00:00:00:00:00:00:00
      Drive 5 LUN: 0
      Drive 6 WWPN: 00:00:00:00:00:00:00:00
      Drive 6 LUN: 0
      Drive 7 WWPN: 00:00:00:00:00:00:00:00
      Drive 7 LUN: 0
```

Message: Success  
Reboot Required: false

**If NVMe boot mode is used, the output is:**

Boot Config Info:

Boot Config:

Data:

Adapter Driver: true  
Selective Login: true  
Selective LUN Login: false  
World Login: true  
Fabric Assigned Boot LUN: false  
FC NVMe: true  
Host NQN: nqn.2014-08.com.marvell:nvme:FCBFSAutomationLun0  
Host ID: 62978f65f57dabb29525f40270d6f210  
Storage 0: true  
Storage 0 WWNN: 23:98:00:a0:98:f4:68:4a  
Storage 0 WWPNN: 23:9a:00:a0:98:f4:68:4a  
Storage 0 NQN: nqn.1992-08.com.netapp:  
                  sn.4d9248d2e18011ecad6d00a098d6abfa:  
                  subsystem.AM-Automation-SUB  
Storage 0 ControllerID: 0x101  
Storage 0 NamespaceID: 7  
Storage 1: false  
Storage 1 WWNN: 00:00:00:00:00:00:00:00  
Storage 1 WWPNN: 00:00:00:00:00:00:00:00  
Storage 1 NQN:  
Storage 1 ControllerID: 0x0  
Storage 1 NamespaceID: 0  
Storage 2: false  
Storage 2 WWNN: 00:00:00:00:00:00:00:00  
Storage 2 WWPNN: 00:00:00:00:00:00:00:00  
Storage 2 NQN:  
Storage 2 ControllerID: 0x0  
Storage 2 NamespaceID: 0  
Storage 3: false  
Storage 3 WWNN: 00:00:00:00:00:00:00:00  
Storage 3 WWPNN: 00:00:00:00:00:00:00:00  
Storage 3 NQN:  
Storage 3 ControllerID: 0x0

```
Storage 3 NamespaceID: 0
Storage 4: false
Storage 4 WWNN: 00:00:00:00:00:00:00:00
Storage 4 WWPN: 00:00:00:00:00:00:00:00
Storage 4 NQN:
Storage 4 ControllerID: 0x0
Storage 4 NamespaceID: 0
Storage 5: false
Storage 5 WWNN: 00:00:00:00:00:00:00:00
Storage 5 WWPN: 00:00:00:00:00:00:00:00
Storage 5 NQN:
Storage 5 ControllerID: 0x0
Storage 5 NamespaceID: 0
Storage 6: false
Storage 6 WWNN: 00:00:00:00:00:00:00:00
Storage 6 WWPN: 00:00:00:00:00:00:00:00
Storage 6 NQN:
Storage 6 ControllerID: 0x0
Storage 6 NamespaceID: 0
Storage 7: false
Storage 7 WWNN: 00:00:00:00:00:00:00:00
Storage 7 WWPN: 00:00:00:00:00:00:00:00
Storage 7 NQN:
Storage 7 ControllerID: 0x0
Storage 7 NamespaceID: 0
```

```
Message: Success
Reboot Required: false
```

## Adapter Port Firmware Dump Information

The `port fwdump` command provides firmware dump information from the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port fwdump
```

### Syntax

```
esxcli qlfc qcc port fwdump {cmd} [cmd options]
```

## Available Commands

get

Saves a firmware dump of the specified Marvell Adapter port. See [Get Port Firmware Dump Information](#).

## Get Port Firmware Dump Information

The `port fwdump get` command saves port-level firmware dump information for the specified Marvell Adapter port. This command works only when the firmware dump is generated and saved in the driver buffer. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port fwdump get
```

### Syntax

```
esxcli qlfc qcc port fwdump get [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.
- `-f|--filename <str>` = Filename where the firmware dump will be saved (required) with the absolute path

### Example

The following example shows the `port fwdump get` command on a local host:

```
~# esxcli qlfc qcc port fwdump get -i FC_51:40:2e:c0:12:3c:f4:a0  
-f /scratch/fwdump.bin
```

The following example shows the `port fwdump get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port fwdump  
get -i FC_51:40:2e:c0:12:3c:f4:a0 -f /scratch/fwdump.bin
```

The output for both commands is:

```
FwDump Info:  
Message: Success
```

## Adapter Port Beacon Configuration

The `port beacon` command configures beacon values of the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port beacon
```

### Syntax

```
esxcli qlfc qcc port beacon {cmd} [cmd options]
```

## Available Commands

get

Shows beacon configuration of the specified Marvell Adapter port. See [Get Port Beacon Configuration](#).

set

Sets the beacon configuration of the specified Marvell Adapter port to flash on the adapter. See [Set Port Beacon Configuration](#).

## Get Port Beacon Configuration

The `port beacon get` command shows port-level beacon configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port beacon get
```

### Syntax

```
esxcli qlfc qcc port beacon get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port beacon get` command on a local host:

```
~# esxcli qlfc qcc port beacon get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port beacon get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port beacon get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Beacon Info:  
  Beacon State: OFF  
  Message: Success
```

## Set Port Beacon Configuration

The `port beacon set` command sets port-level beacon configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port beacon set
```



## Syntax

```
esxcli qlfc qcc port beacon set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

`-b|--beacon-state <str>` = Beacon state

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
Identifier	Port identifier from the <code>port list</code> command
beacon-state	ON, OFF

## Example

The following example shows the `port beacon set` command on a local host:

```
~# esxcli qlfc qcc port beacon set -i FC_51:40:2e:c0:12:3c:f4:a0  
-b ON
```

The following example shows the `port beacon set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port beacon  
set -i FC_51:40:2e:c0:12:3c:f4:a0 -b ON
```

The output for both commands is:

```
Beacon Info:  
  Beacon State: ON  
  Message: Success
```

## Adapter Port Diagnostics (DPort) Configuration

The `port dportdiag` command sets the port in diagnostic port (DPort) mode and runs DPort diagnostic commands on the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port dportdiag
```

## Syntax

```
esxcli qlfc qcc port dportdiag {cmd} [cmd options]
```

## Available Commands

`get`

Shows DPort configuration of the specified Marvell Adapter port. See [Get DPort Configuration](#).

**set**  
Sets the DPort configuration of the specified Marvell Adapter port. See [Set DPort Configuration](#).

**run**  
Runs a DPort operation on the specified Marvell Adapter port. See [Run DPort Diagnostics](#).

## Get DPort Configuration

The `port dportdiag get` command shows the port-level DPort configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port dportdiag get
```

### Syntax

```
esxcli qlfc qcc port dportdiag get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port dportdiag get` command on a local host:

```
~# esxcli qlfc qcc port dportdiag get -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port dportdiag get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
dportdiag get -i FC_51-40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
DPort Diag Info:  
  Diagnostics Port Status: false  
  Message: Success
```

## Set DPort Configuration

The `port dportdiag set` command sets port-level DPort configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not) on NPIV virtual port.

```
~# esxcli qlfc qcc port dportdiag set
```

## Syntax

```
esxcli qlfc qcc port dportdiag set [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

`-m|--mode <str>` = DPort mode

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
Identifier	Port identifier from the <code>port list</code> command
mode	true, false

## Example

The following example shows the `port dportdiag set` command on a local host:

```
~# esxcli qlfc qcc port dportdiag set -i  
FC_51:40:2e:c0:12:3c:f4:a0 -m true
```

The following example shows the `port dportdiag set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
dportdiag set -i FC_51:40:2e:c0:12:3c:f4:a0 -m true
```

The output for both commands is:

```
DPort Diag Info:  
  Diagnostics Port Status: true  
  Message: Success  
  Reboot Required: true
```

## Run DPort Diagnostics

The `port dportdiag run` command runs a host port-level DPort configuration for the specified Marvell Adapter port. This command is supported only on the physical port (not on the NPIV virtual port).

```
~# esxcli qlfc qcc port dportdiag run
```

## Syntax

```
esxcli qlfc qcc port dportdiag run [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port dportdiag run` command on a local host:

```
~# esxcli qlfc qcc port dportdiag run -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port dportdiag get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
dportdiag run -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
DPort Diag Info:  
  DPort Diag Result:  
    Data:  
      Start Time: Tue Nov 30 22:23:34 2021  
      Stop Time: Tue Nov 30 22:23:53 2021  
      HBA Port Value: 0x1  
      HBA Port Status: 1  
      HBA Port Result: Passed  
      Electrical Loopback Value: 0xd2  
      Electrical Loopback Status: 1  
      Electrical Loopback Result: Passed  
      Optical Loopback Value: 0xd3  
      Optical Loopback Status: 1  
      Optical Loopback Result: Passed  
      Link Traffic Value: 0xd5  
      Link Traffic Status: 2  
      Link Traffic Result: Skipped  
      Tx Power: 0x173a  
      Rx Power: 0x184b  
      Mbx1: 0x41  
      Mbx2: 0xe000  
      Roundtrip Link Latency: 176 ns  
      Cable Link Distance: 3 meters  
      Allowable Power Loss: 0.014000
```

```
Egress Power: Tx: -2.257750 dBm, Rx: -2.123978 dBm,  
              Diff: -0.133772 dBm  
Ingress Power: Tx: -1.930742 dBm, Rx: -2.062794 dBm,  
              Diff: 0.132052 dBm
```

Message: Success

## Adapter Port Common Pass-thru (CT) Diagnostics

---

### NOTE

This command is supported for FCP targets and NVMe-FC targets.

---

The `port ctdiag` command runs common pass-thru (CT) diagnostic commands on the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port ctdiag
```

### Syntax

```
esxcli qlfc qcc port ctdiag {cmd} [cmd options]
```

### Available Commands

`run`

Runs CT diagnostics on the specified Marvell Adapter port. See [Run Port CT Diagnostics](#).

## Run Port CT Diagnostics

The `port ctdiag run` command runs host port-level CT diagnostics commands for the specified port on the Marvell Adapter. This command is supported on the physical port, but not on the NPIV virtual port.

```
~# esxcli qlfc qcc port ctdiag run
```

### Syntax

```
esxcli qlfc qcc port ctdiag run [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-n|--number-of-tests <long>` = Number of test iterations
- `-e|--stop-on-error <str>` = Test stop on error

`-t|--target <str>` = Target WWPN (":" separated)  
`-p|--test-type <str>` = Test type

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
<code>identifier</code>	Port identifier from the <code>port list</code> command
<code>number-of-tests</code>	1–65535
<code>stop-on-error</code>	true, false
<code>target</code>	":" separated target WWPN
<code>test-type</code>	CTPing, CTFCTraceRoute

### Example

The following example shows the `port ctdiag run` command on a local host:

```
~# esxcli qlfc qcc port ctdiag run -i FC_51:40:2e:c0:12:3c:f4:a0  
-n 2 -e true -t 50:0a:09:82:90:a2:ce:4d -p CTPing
```

The following example shows the `port ctdiag run` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port ctdiag  
run -i FC_51:40:2e:c0:12:3c:f4:a0 -n 2 -e true -t  
50:0a:09:82:90:a2:ce:4d -p CTPing
```

The output for both commands is:

```
CT Diag Result:  
Diagnostic Test: CTPing  
Test Result: Success
```

## Adapter Port Echo ELS Diagnostics

---

### NOTE

This command is supported for FCP targets and NVMe-FC targets.

---

The `port fcecho` command runs Fibre Channel Echo ELS diagnostic commands on the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port fcecho
```

### Syntax

```
esxcli qlfc qcc port fcecho {cmd} [cmd options]
```

## Available Commands

run

Runs Fibre Channel Echo ELS diagnostics on the specified Marvell Adapter port. See [“Run Port Fibre Channel Echo ELS Diagnostics” on page 207](#).

## Run Port Fibre Channel Echo ELS Diagnostics

The `port fcecho run` command runs host port-level Fibre Channel Echo ELS diagnostics commands for the specified Marvell Adapter port. This command is supported on the physical port, but not on the NPIV virtual port.

```
~# esxcli qlfc qcc port fcecho run
```

## Syntax

```
esxcli qlfc qcc port fcecho run [cmd options]
```

## Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-n|--number-of-tests <long>` = Number of test iterations
- `-e|--stop-on-error <str>` = Test stop on error
- `-t|--target <str>` = Target WWPN (“:” separated)

### Parameter

### Value (strings are case-sensitive)

identifier	Port identifier from the <code>port list</code> command
number-of-tests	1–65535
stop-on-error	true, false
target	“:” separated target WWPN

## Example

The following example shows the `port fcecho run` command on a local host:

```
~# esxcli qlfc qcc port fcecho run -i FC_51:40:2e:c0:12:3c:f4:a0  
-n 2 -e true -t 50:0a:09:82:90:a2:ce:4d
```

The following example shows the `port fcecho run` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port fcecho  
run -i FC_51:40:2e:c0:12:3c:f4:a0 -n 2 -e true -t  
50:0a:09:82:90:a2:ce:4d
```

The output for both commands is:

FC Echo ELS Result:

FCEcho Test Results:

```
Destination WWN: 50:0a:09:82:90:a2:ce:4d
Echo Status: Success
Frame Received: 1
Frame Sent: 1
Ping Sequence Number: 1
Response Length: 256
Response Time: 0.00 (ms)
```

```
Destination WWN: 50:0a:09:82:90:a2:ce:4d
Echo Status: Success
Frame Received: 1
Frame Sent: 1
Ping Sequence Number: 2
Response Length: 256
Response Time: 0.00 (ms)
Message: Success
```

## Adapter Port Ping Diagnostics

---

### NOTE

This command is supported for FCP targets and NVMe-FC targets.

---

The `port fcping` command runs Fibre Channel ping diagnostic commands on the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port fcping
```

### Syntax

```
esxcli qlfc qcc port fcping {cmd} [cmd options]
```

### Available Commands

`run`

Runs Fibre Channel ping diagnostics on the specified Marvell Adapter port. See [Run Port Fibre Channel Ping Diagnostics](#).



## Run Port Fibre Channel Ping Diagnostics

The `port fcping run` command runs host port-level Fibre Channel ping diagnostics commands for the specified Marvell Adapter port. This command is supported on physical port, but not on the NPIV virtual port.

```
~# esxcli qlfc qcc port fcping run
```

### Syntax

```
esxcli qlfc qcc port fcping run [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-n|--number-of-tests <long>` = Number of test iterations
- `-e|--stop-on-error <str>` = Test stop on error
- `-t|--target <str>` = Target WWPN (":" separated)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Port identifier from the <code>port list</code> command
<code>number-of-tests</code>	1–65535
<code>stop-on-error</code>	true, false
<code>target</code>	":" separated target WWPN

### Example

The following example shows the `port fcping run` command on a local host:

```
~# esxcli qlfc qcc port fcping run -i FC_51:40:2e:c0:12:3c:f4:a0  
-n 2 -e true -t 50:0a:09:82:90:a2:ce:4d
```

The following example shows the `port fcping run` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port fcping  
run -i FC_51:40:2e:c0:12:3c:f4:a0 -n 2 -e true -t  
50:0a:09:82:90:a2:ce:4d
```

The output for both commands is:

```
FC Ping Result:  
Diagnostic Test: FCPing  
Test Result: Success
```

## Adapter Port Read Port Diagnostics (RDP) Information

The `port rdp` command shows port diagnostics information about the selected Marvell Adapter port:

```
~# esxcli qlfc qcc port rdp
```

### Syntax

```
esxcli qlfc qcc port rdp {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the specified Marvell Adapter port. See [Get Read Port Diagnostics Information](#).

## Get Read Port Diagnostics Information

The `port rdp get` command shows port-level diagnostics information for the specified Marvell Adapter port.

```
~# esxcli qlfc qcc port rdp get
```

### Syntax

```
esxcli qlfc qcc port rdp get [cmd options]
```

### Keywords

```
-i|--identifier <str> = Port identifier (required). Obtain the identifier from the port list output.
```

### Example

The following example shows the `port rdp get` command on a local host:

```
~# esxcli qlfc qcc port rdp get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port rdp get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port rdp get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
RDP Information:
  Message: Success
  Read Diagnostics Parameters Data:
    RDPInfo:
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
-----
Diagnostics Parameters Information
-----
Descriptor Tag: Link Service Request Information
Descriptor Len: 4 Bytes
Descriptor Value: 0x18000000

-----
Port Speed Information
-----
Port Speed Capabilities: 32 16 8 4 Gbps
Port Operating Speed: 32 Gbps

-----
Link Error Status Block Information
-----
Link Failure Count: 13
Loss Of Sync Count: 0
Loss Of Signal Count: 13
Primary Sequence Error Count: 0
Invalid Transmit Word Count: 0
Invalid CRC Count: 0
PN Port Physical Type: 0x40000000
    The sending VN_Port uses an FC-FS-3 PN_Port or PF Port

-----
Port Name Information
-----
Node WWN: 10:00:88:94:71:97:67:63
Port WWN: 20:11:88:94:71:97:67:63

-----
Port Name Information
-----
Node WWN: 51:40:2e:c0:12:3c:f4:a1
Port WWN: 51:40:2e:c0:12:3c:f4:a0

-----
SFP Diagnostics Param Information
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

```
-----  
Temperature: 58 (C)  
Vcc: 3.338599920 V  
Tx Bias: 7.642000198 mA  
Tx Power: 0.737200022 mW  
Rx Power: 0.781500041 mW  
SFP Flag: 0x0051  
    Port Tx Type: Short Wave Laser  
    Connector Type: SFP+  
    Optical Port: On  
    SFP Diagnostics Parameters not valid: Off  
    FEC Active: Off
```

```
-----  
FEC Status Information  
-----
```

```
Correctable Blocks: 0  
UnCorrectable Blocks: 58
```

```
-----  
Buffer Credits Status Information  
-----
```

```
FC Port Buffer To Buffer Credits: 20  
Attached FC Port Buffer To Buffer Credits: 48  
Nominal FC Port RTT: 0 ns
```

```
-----  
Optical Product Data Information  
-----
```

```
Vendor Name: BROCADE  
Part Number: 57-1000333-01  
Serial Number: JAF418500000BL0  
Revision:  
Date: 181211
```

```
-----  
Optical Element Data Information  
-----
```

```
Temperature High Alarm: 75.00
```

## 4–Fibre Channel CLI Command Extensions

### Adapter Port Namespace Commands and Sub-namespaces

---

Temperature Low Alarm: -5.00

Temperature High Warning: 70.00

Temperature Low Warning: 0.00

-----  
Optical Element Data Information  
-----

Voltage High Alarm: 3.599999905

Voltage Low Alarm: 3.000000000

Voltage High Warning: 3.500000000

Voltage Low Warning: 3.099999905

-----  
Optical Element Data Information  
-----

Tx Bias High Alarm: 12.000000954

Tx Bias Low Alarm: 1.000000000

Tx Bias High Warning: 11.500000954

Tx Bias Low Warning: 2.000000000

-----  
Optical Element Data Information  
-----

Tx Power High Alarm: 1.995300174

Tx Power Low Alarm: 0.125900000

Tx Power High Warning: 1.584900141

Tx Power Low Warning: 0.158500001

-----  
Optical Element Data Information  
-----

Rx Power High Alarm: 1.995300174

Rx Power Low Alarm: 0.010000001

Rx Power High Warning: 1.584900141

Rx Power Low Warning: 0.015800001

## Adapter Port Loopback Diagnostics

The `port loopback` command runs loopback diagnostic commands on the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port loopback
```

### Syntax

```
esxcli qlfc qcc port loopback {cmd} [cmd options]
```

### Available Commands

`run`

Runs loopback diagnostics on the specified Marvell Adapter port. See [Run Port Loopback Diagnostics](#).

## Run Port Loopback Diagnostics

The `port loopback run` command runs host port-level loopback diagnostics commands for the specified Marvell Adapter port. This command is supported on the physical port, but not on the NPIV virtual port.

```
~# esxcli qlfc qcc port loopback run
```

### Syntax

```
esxcli qlfc qcc port loopback run [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-n|--number-of-tests <long>` = Number of test iterations
- `-t|--test-increment <long>` = Test increment count
- `-e|--stop-on-error <str>` = Test stop on error
- `-l|--loopback-type <str>` = Loopback test type
- `-z|--data-size <str>` = Data size
- `-p|--data-pattern-type <str>` = Loopback buffer data pattern type
- `-d|--data-pattern <str>` = Custom 8-byte data pattern for loopback buffer

<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
identifier	Port identifier from the port list command
number-of-tests	1–65535
test-increment	1–65535
stop-on-error	Ignore, Stop, Loop
loopback-type	Internal_10bit, Internal, External, FCoE_Echo (only for 8400 and legacy 8100/8200/8300 Series Adapters)
data-size	8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32768, 65535
data-pattern-type	Random, CRPAT, CJTPAT, CSPAT, 00000000, 01010101, 01011010, 10100101, 10101010, 11111111, Custom
data-pattern	8-byte used defined data pattern (only for Custom data-pattern-type)

### Example

The following example shows the `port loopback run` command on a local host:

```
~# esxcli qlfc qcc port loopback run -i FC_51:40:2e:c0:12:3c:f4:a0  
-n 2 -t 5 -e Stop -l External -z 512 -p Random
```

The following example shows the `port loopback run` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port loopback  
run -i FC_51:40:2e:c0:12:3c:f4:a0 -n 2 -t 5 -e Stop -l External -z  
512 -p Random
```

The output for both commands is:

```
Loopback Test Information:  
  Loopback Test Result:  
    Crc Error: 0  
    Disparity Error: 0  
    Failure Count: 0  
    Frame Length Error: 0  
    Success Count: 5  
    Test Iteration: 5  
    Test Status: Success  
  Message: Success
```

## Adapter Port Read and Write Buffer Diagnostics

The `port rwbuffer` command runs read and write buffer diagnostic commands on the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port rwbuffer
```

### Syntax

```
esxcli qlfc qcc port rwbuffer {cmd} [cmd options]
```

### Available Commands

`run`

Runs read and write buffer diagnostics on the specified Marvell Adapter port. See [Run Port Read and Write Buffer Diagnostics](#).

## Run Port Read and Write Buffer Diagnostics

The `port rwbuffer run` command runs host port-level read-write buffer diagnostics commands for the specified Marvell Adapter port. This command is supported on the physical port, but not on the NPIV virtual port.

```
~# esxcli qlfc qcc port rwbuffer run
```

### Syntax

```
esxcli qlfc qcc port rwbuffer run [cmd options]
```

### Keywords

- `-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.
- `-n|--number-of-tests <long>` = Number of test iterations
- `-t|--test-increment <long>` = Test increment count
- `-e|--stop-on-error <str>` = Stop on error
- `-z|--data-size <str>` = Data size
- `-p|--data-pattern-type <str>` = Loopback buffer data pattern type
- `-d|--data-pattern <str>` = User defined 8-byte data pattern for the loopback buffer. Use only when `data-pattern-type` parameter is Custom.



<b><u>Parameter</u></b>	<b><u>Value (strings are case-sensitive)</u></b>
<code>identifier</code>	Port identifier from the <code>port list</code> command
<code>number-of-tests</code>	1–10000
<code>test-increment</code>	1–10000
<code>stop-on-error</code>	Ignore, Stop, Loop
<code>data-size</code>	8, 16, 32, 64, 128
<code>data-pattern-type</code>	Random, CRPAT, CJTPAT, CSPAT, 00000000, 01010101, 01011010, 10100101, 10101010, 11111111, Custom
<code>data-pattern</code>	8-byte used defined data pattern (only for Custom <code>data-pattern-type</code> )

### Example

The following example shows the `port rwbuffer run` command on a local host:

```
~# esxcli qlfc qcc port rwbuffer run -i FC_51:40:2e:c0:12:3c:f4:a0  
-n 2 -t 5 -e Stop -z 64 -p Random
```

The following example shows the `port rwbuffer run` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port rwbuffer  
run -i FC_51:40:2e:c0:12:3c:f4:a0 -n 2 -t 5 -e Stop -z 64 -p Random
```

The output for both commands is:

```
Read Write Buffer Test Information:
```

```
  Message: Success  
  RWBuffer Test Result:  
    Data Miscompare: 0  
    Failure Count: 0  
    Invalid CRC: 0  
    Link Failure: 0  
    Loss Of Signal: 0  
    Loss Of Sync: 0  
    Port ID: 0a:00:00  
    Success Count: 5  
    Test Iteration: 5  
    Test Status: Success
```

## Adapter Port Universal SAN Congestion Mitigation Status

### NOTE

SAN congestion management (SCM) is a common noun, and describes a standards-based Fibre Channel technology.

Universal SAN Congestion Mitigation (USCM) is Marvell's IP, and describes Marvell's capabilities that encompass SCM and additional functionalities to further assist users.

USCM is supported only on 2800 Series Adapters, 2770 Series Adapters, and 2690 Series Adapters.

---

The `port scmchk` command displays the USCM status of the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port scmchk
```

### Syntax

```
esxcli qlfc qcc port scmchk {cmd} [cmd options]
```

### Available Commands

`get`

Shows USCM status information of the specified Marvell Adapter port. See [Get Initiator Port USCM Status](#).

## Get Initiator Port USCM Status

The `port scmchk get` command shows port-level USCM status for the specified Marvell Adapter initiator port:

```
~# esxcli qlfc qcc port scmchk get
```

### Syntax

```
esxcli qlfc qcc port scmchk get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `port list` output.

### Example

The following example shows the `port scmchk get` command on a local host:

```
~# esxcli qlfc qcc port scmchk get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port scmchk get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port scmchk  
get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Port Congestion Information:  
  Message: Success  
  Port Congestion Status:  
    Data:  
    Node Name: 51:40:2e:c0:12:3c:f4:a1  
    Port Name: 51:40:2e:c0:12:3c:f4:a0  
    Port Id: 01:02:00  
    Port State: Online  
    Congestion Current State: Healthy  
    Congestion Severity: None  
    Link Integrity Events: No  
    Delivery Notification Events: No  
    Seconds Since Last Event: 409  
    Fabric Connection Flags: Rdf Completed  
    Virtual Lane: Operational  
    I/O Throttling: None
```

Not all of the port parameters in this section are available on all systems. The attributes are based on the adapter driver version.

### Initiator Port Status

The USCM initiator port congestion status ([Table 4-1](#)) indicates the current status of the particular adapter port, based on congestion events (both extended link service (ELS) and signals) from the switch. At a given point in time, the adapter port is either *congested* or *healthy*. The other status indicates the severity of congestion and the time since the last congestion event.

Contact the fabric/switch vendor for more information relating to congestion severity within their products.

**Table 4-1. USCM Initiator Port Status**

Status	Description
Congestion Current State	Healthy Congested

**Table 4-1. USCM Initiator Port Status (Continued)**

Status	Description
Congestion Severity	<p><b>Warning.</b> Congestion is building and may have reached a severe level.</p> <p><b>Alarm.</b> Congestion has reached a severe level.</p> <p><b>None.</b> No congestion present.</p> <p><b>Reserved</b></p> <p><b>NOTE:</b> For more FPIN information, see the user's guide for your switch.</p>
Link Integrity Events	<p><b>Yes.</b> A link event has been received.</p> <p><b>No</b></p>
Delivery Notification Events	<p><b>Yes.</b> A delivery notification event has been received.</p> <p><b>No</b></p>
Seconds Since Last Event	<p>Event time period (in seconds) since the last congestion notification was received.</p>
Fabric Connection Flags	<p><b>RDF Rejected.</b> The adapter is either not connected or does not support RDF; or the connected switch does not support USCM.</p> <p><b>RDF Completed.</b> Either the connected Brocade or Cisco switch does not support virtual lanes or the virtual lane feature is disabled at the initiator port.</p> <p><b>RDF Completed (Cisco).</b> The connected Cisco switch has virtual lanes up and running.</p> <p><b>NOTE:</b> RDF stands for Registration Diagnostic Function.</p>
Virtual Lane <sup>a</sup>	<p><b>Operational.</b> Virtual lane negotiation is complete and fully functional.</p> <p><b>Non-operational</b> Virtual lane negotiation with the switch failed.</p> <p><b>Disabled</b> Virtual lanes are disabled at either the driver or the initiator port parameter (NVRAM).</p>

**Table 4-1. USCM Initiator Port Status (Continued)**

Status	Description
I/O Throttling <sup>a</sup>	<p><b>Active</b> I/O throttling is currently active. The I/O queue depth is ramping up or down.</p> <p><b>None</b> I/O throttling is not active. I/Os are running with the normal queue depth value.</p> <p><b>Disabled</b> I/O throttling is disabled on the adapter.</p> <p><b>NA</b> I/O throttling is not supported on the adapter.</p>

<sup>a</sup> For more information about virtual lanes and I/O throttling, see the appropriate Marvell QLogic Fibre Channel Adapter user's guide.

## Adapter Port Universal SAN Congestion Mitigation Statistics

For a description of USCM, see the following [NOTE](#).

The `port scmstats` command displays the USCM statistics of the selected FC port:

```
~# esxcli qlfc qcc port scmstats
```

### Syntax

```
esxcli qlfc qcc port scmstats {cmd} [cmd options]
```

### Available Commands

`get`

Shows USCM statistics information of the specified Marvell Adapter Fibre Channel initiator port. See [Get Initiator Port USCM Statistics](#).

`clear`

Clears USCM statistics of the specified Marvell Adapter Fibre Channel initiator port and all the target ports connected to that initiator. See [Clear Initiator Port and Connected Targets USCM Statistics](#).

## Get Initiator Port USCM Statistics

USCM statistics are gathered for all ports on the Marvell QLogic FC adapter and connected targets in the configured zones with active sessions.

- USCM statistics are not gathered for other initiators in the configured zones.
- USCM statistics track the following types of Fabric Performance Impact Notification (FPIN) Extended Link Services (ELSs) to provide SAN congestion awareness:

FPIN ELS Statistic	Initiator Port	Target Port
Congestion	✓	—
Peer congestion	—	✓
Link integrity	✓	✓
Delivery	✓	✓

- USCM also displays a set of congestion mitigation statistics that reflect actions taken by the adapter to minimize the impact of congestion caused by the endpoints.

You can view the USCM congestion mitigation status and statistics; the statistics can also be reset.

For target USCM statistics, see [“Adapter Target Universal SAN Congestion Mitigation Statistics”](#) on page 236.

The `port scmstats get` command shows port-level USCM statistics for the specified Marvell Adapter port:

```
~# esxcli qlfc qcc port scmstats get
```

### Syntax

```
esxcli qlfc qcc port scmstats get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

### Example

The following example shows the `port scmstats get` command on a local host:

```
~# esxcli qlfc qcc port scmstats get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port scmstats get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
scsmstats get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Port SCM Statistics:  
  Message: Success  
  Port SCMStats:  
    Data:  
    Node Name: 51:40:2e:c0:12:3c:f4:a1  
    Port Name: 51:40:2e:c0:12:3c:f4:a0  
    Port Id: 0a:11:00  
    Port State: Online  
-----  
Congestion Mitigation  
-----  
Congestion Alarm Count: 3  
Congestion Warning Count: 8  
Cleared Congestion Count: 21  
Throttled Up Count: 2  
Throttled Down Count: 3  
Bottomed Out Count: 5  
Returned Busy Count:  
-----  
Rx Fabric Performance Impact  
Notifications  
-----  
Link Failure Count: 0  
Link Unknown Event Count: 0  
Loss Of Sync Count: 0  
Loss Of Signal Count: 0  
Link Device Specific Event Count: 0  
Primitive Sequence Protocol Error Count: 0  
Invalid Transmission Word Count: 0
```

```

Invalid CRC Count: 0
Link Uncorrectable FEC Count: 0
Delivery Failure Unknown Count: 0
Delivery Timeout Count: 0
Delivery Unable To Route Count: 0
Delivery Failure Device Specific Count: 0
Congestion Clear Count: 0
Congestion Lost Credit Count: 0
Congestion Credit Stall Count: 0
Congestion Oversubscription Count: 0
Congestion Device Specific Count: 0
  
```

Not all of the port parameters in this section are available on all systems. The attributes are based on the adapter driver version.

### Initiator Port Statistics

The USCM initiator port statistics ([Table 4-2](#)) indicate how many times a congestion event has occurred since the counters were reset.

**Table 4-2. USCM Initiator Port Congestion Mitigation Statistics**

Statistic	Description
Congestion Alarm Count	Counter for the number of alarm events in <a href="#">Congestion Severity</a> .
Congestion Warning Count	Counter for the number of warning events in <a href="#">Congestion Severity</a> .
Cleared Congestion Count	The number of times the congestion event was cleared for this port.
Throttled Down Count	<p>The fabric is congested at this port.</p> <ul style="list-style-type: none"> <li>■ Each increment indicates that the port is receiving congestion notifications from the fabric.</li> <li>■ For each increment, the port decreases the I/O bandwidth.</li> <li>■ Incrementing stops when the low watermark performance for the port is reached.</li> </ul>



**Table 4-2. USCM Initiator Port Congestion Mitigation Statistics (Continued)**

Statistic	Description
Throttled Up Count	<p>The fabric is <i>not</i> congested at this port.</p> <ul style="list-style-type: none"> <li>■ Each increment indicates that the port is <i>not</i> receiving congestion notifications from the fabric.</li> <li>■ For each increment, the port increases the I/O bandwidth (up to the maximum I/O bandwidth for the port).</li> <li>■ Incrementing starts only after the Throttle Down Count increments (and congestion notifications abate).</li> <li>■ Incrementing stops when the port reaches its optimal performance.</li> </ul>
Bottomed Out Count	<p>This port is operating at its low watermark performance and the fabric continues to be congested at this port.</p> <ul style="list-style-type: none"> <li>■ Each increment indicates that the port is receiving congestion notifications from the fabric.</li> <li>■ This port cannot decrease the I/O bandwidth any further.</li> </ul>
Returned Busy Count	<p>The number of times the driver returns an I/O request queued by the initiator's storage stack. This request must be retried because the port is congested.</p> <p>The count is incremented faster when the driver is throttling down, and slower when the driver is throttling up.</p>

### Clear Initiator Port and Connected Targets USCM Statistics

The `port scmstats clear` command clears port-level USCM statistics for both the specified Marvell Adapter Fibre Channel initiator port and all the targets connected to that port:

```
~# esxcli qlfc qcc port scmstats get
```

#### Syntax

```
esxcli qlfc qcc port scmstats clear [cmd options]
```

#### Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the `list` output.

### Example

The following example shows the `port scmstats clear` command on a local host:

```
~# esxcli qlfc qcc port scmstats clear -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port scmstats clear` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port scmstats  
clear -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
SCM Statistics Clear:  
Message: Success
```

## Adapter Port Universal SAN Congestion Mitigation Profile

The `port scmprofile` command displays the USCM congestion profile of the selected FC port:

```
~# esxcli qlfc qcc port scmprofile
```

### Syntax

```
esxcli qlfc qcc port scmprofile {cmd} [cmd options]
```

### Available Commands

`get`

Shows USCM congestion profile information of the specified Marvell Adapter Fibre Channel port. See [Get Port Universal SAN Congestion Mitigation Profile](#).

`set`

Sets USCM congestion profile information of the specified Marvell Adapter port. See [Set Port Universal SAN Congestion Mitigation Profile](#).

For more information about USCM profiles, see the appropriate Marvell QLogic Fibre Channel Adapter user's guide.

### Get Port Universal SAN Congestion Mitigation Profile

The `port scmprofile get` command displays the port-level USCM profile settings of the selected FC port:

```
~# esxcli qlfc qcc port scmprofile get
```

### Syntax

```
esxcli qlfc qcc port scmprofile get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Port identifier (required). Obtain the identifier from the port list output.

## Example

The following example shows the `port scmprofile get` command on a local host:

```
~# esxcli qlfc qcc port scmprofile get -i  
FC_51:40:2e:c0:12:3c:f4:a0
```

The following example shows the `port scmprofile get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
scmprofile get -i FC_51:40:2e:c0:12:3c:f4:a0
```

The output for both commands is:

```
Port USCM Profile:  
  Congestion Profile:  
    Data:  
      Node Name: 51:40:2e:c0:12:3c:f4:a1  
      Port Name: 51:40:2e:c0:12:3c:f4:a0  
      Port Id: 0a:11:00  
      Port State: Online  
      USCM Configuration Status: true  
      USCM Profile Management: Driver_Settings  
      USCM Profile Activation: Monitor_Only  
  
Message: Success
```

## Set Port Universal SAN Congestion Mitigation Profile

The `port scmprofile set` command sets the port-level USCM profile settings of the selected FC port:

```
~# esxcli qlfc qcc port scmprofile set
```

## Syntax

```
esxcli qlfc qcc port scmprofile set [cmd options]
```

## Keywords

- i|--identifier <str> = Port identifier (required). Obtain the identifier from the port list output.
- a|--activation <str> = Congestion profile activation value
- r|--restore <str> = Restore congestion profile to the default driver setting

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
identifier	Port identifier from the port list command
activation	Monitor_Only (default), Conservative, Moderate, Aggressive These values are referred to as the <i>port profiles</i> ; see <a href="#">Table 4-3</a> .
restore	Driver_Settings

The `activation` and `restore` parameters are mutually exclusive. Settings are activated immediately without reboot. Settings are persistent across reboots.

The `restore` parameter sets profile settings defined using either the driver module parameter or the default value (if not defined using the driver module parameter). The default value is `Monitor_Only`.

**Table 4-3. USCM Adapter Port Profiles**

Profile	Description
USCM Configuration Status	Indicates if the USCM feature of the specified adapter port is supported. Valid values are: <b>True</b> <b>False</b>
USCM Profile Management	Indicates the current active profile setting for congestion on the specified adapter port. Valid values are: <b>Driver_Settings</b> (default). The USCM profile is set using either a Windows driver registry parameter; or a Linux or VMware ESXi driver module parameter. <b>NVRAM Settings</b> . The USCM profile is set in the adapter NVRAM.

**Table 4-3. USCM Adapter Port Profiles (Continued)**

Profile	Description
USCM Profile Activation	Valid values are: <b>Monitor Only</b> (default). Records adapter performance and congestion history for review. No actions are taken to resolve congestion. <b>Conservative</b> . Maintains optimum throughput while gradually reducing congestion. Queue depth (outstanding I/Os) is reduced to half of the current value as part of the throttle down operation. Marvell recommends this setting for high-priority workloads. <b>Moderate</b> . Queue depth (outstanding I/Os) is reduced to one-quarter of the current value as part of the throttle down operation. <b>Aggressive</b> . Reduces congestion on priority while reducing throughput. Queue depth (outstanding I/Os) is reduced to one-eighth of the current value as part of the throttle down operation. Marvell recommends this setting for low-priority workloads.

**Example**

The following example shows the `port scmprofile set activation` command on a local host:

```
~# esxcli qlfc qcc port scmprofile set -i
FC_51:40:2e:c0:12:3c:f4:a0 -a Aggressive
```

The following example shows the `port scmprofile set activation` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port
scmprofile set -i FC_51:40:2e:c0:12:3c:f4:a0 -a Aggressive
```

The output for both commands is:

```
Port USCM Profile:
  Congestion Profile:
    Data:
      Node Name: 51:40:2e:c0:12:3c:f4:a1
```

```
Port Name: 51:40:2e:c0:12:3c:f4:a0
Port Id: 0a:11:00
Port State: Online
USCM Configuration Status: true
USCM Profile Management: NVRAM
USCM Profile Activation: Aggressive
```

Message: Success

The following example shows the `port scmprofile set restore` command on a local host:

```
~# esxcli qlfc qcc port scmprofile set -i
FC_51:40:2e:c0:12:3c:f4:a0 -r Driver_Settings
```

The following example shows the `port scmprofile set restore` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port
scmprofile set -i FC_51:40:2e:c0:12:3c:f4:a0 -r Driver_Settings
```

The output for both commands is:

```
Port USCM Profile:
  Congestion Profile:
    Data:
      Node Name: 51:40:2e:c0:12:3c:f4:a1
      Port Name: 51:40:2e:c0:12:3c:f4:a0
      Port Id: 0a:11:00
      Port State: Online
      USCM Configuration Status: true
      USCM Profile Management: Driver_Settings
      USCM Profile Activation: Monitor_Only
```

Message: Success

## Adapter Target Namespace Commands and Sub-namespaces

This section provides information on the following:

- [Adapter Target List](#)
- [Adapter Target Information](#)
- [Adapter Target Universal SAN Congestion Mitigation Status](#)

- [Adapter Target Universal SAN Congestion Mitigation Statistics](#)
- [Adapter Target iidDMA Configuration](#)

---

### NOTE

These commands are supported for FCP targets and NVMe-FC targets.

---

To view all Marvell Adapter target namespace and subspace commands, issue the following:

```
# esxcli qlfc qcc target
```

### Syntax

```
esxcli qlfc qcc target {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for target information
scmchk	QCC CLI for target USCM status
scmstats	QCC CLI for target USCM statistics
iidma	QCC CLI for target maximum link speed
stats	QCC CLI for target link statistics

### Available Commands

```
list
```

Lists identifiers for the Marvell Adapter targets discovered on the host. See [Adapter Target List](#).

## Adapter Target List

The `target list` command shows all the targets detected, as follows:

```
~# esxcli qlfc qcc target list
```

The following example shows the `target list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target list
```

The command output is:

```
Targets
```

```
-----  
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

```
FC_51:40:2e:c0:12:3c:f4:a2_Target_ 20:02:00:11:0d:27:b2:00
```

## Adapter Target Information

The `target info` command shows target information about the selected target:

```
~# esxcli qlfc qcc target info
```

### Syntax

```
esxcli qlfc qcc target info {cmd} [cmd options]
```

### Available Commands

`get`

Shows information about the specified target on the Marvell Adapter port. See [Get Target Information](#).

## Get Target Information

The `target info get` command shows target information for the specified target.

```
~# esxcli qlfc qcc target info get
```

### Syntax

```
esxcli qlfc qcc target info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.

### Example

The following example shows the `target info get` command for FCP targets on a local host:

```
~# esxcli qlfc qcc target info get -i  
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The following example shows the `target info get` command for FCP targets on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target info  
get -i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The output for both commands is:

```
Target Information:  
  Message: Success  
  Target Info:
```



```
Data:
Target Node Name: 50:0a:09:80:80:a2:ce:4d
Target Port Name: 50:0a:09:81:90:a2:ce:4d
Target Port ID: 01:12:00
Target Number: 0
Vendor ID: NETAPP
Product ID: LUN
Product Revision: 820a
Product Type: FCP Disk
Serial Number: 80ADI+KeW-ca
Lun Count: 1
Luns: LUN_1
Remote Type: Unknown
Session State: NA
Secure Mode: Disabled
Congestion Current State: Healthy
Virtual Lane: Normal
I/O Throttling: None
Status: Online
```

The following example shows the `target info get` command for NVME targets on a local host:

```
~# esxcli qlfc qcc target info get -i
FC_51:40:2e:c0:12:3c:f4:a2_Target_20:02:00:11:0d:27:b2:00
```

The following example shows the `target info get` command for NVME targets on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target info
get -i FC_51:40:2e:c0:12:3c:f4:a2_Target_20:02:00:11:0d:27:b2:00
```

The output for both commands is:

```
Target Information:
  Message: Success
  Target Info:
    Data:
      Target Node Name: 20:02:00:11:0d:27:b2:00
      Target Port Name: 20:02:00:11:0d:27:b2:00
      Target Port ID: 01:00:00
      Target Number: 1
      Vendor ID: SANBlaze
      Product ID: VLUN P2T0
```

```
Product Revision: V8.1-dev
Product Type: NVMe Disk
Serial Number: 00-200200110d27b200
Storage NQN: nqn.2014-08.com.sanblaze:virtualun.
              virtuallunnvme.2.0
Storage Controller ID: 0x103
Namespace Count: 1
Namespaces: NSID_1
Remote Type: Unknown
Session State: NA
Secure Mode: Disabled
Congestion Current State: Healthy
Virtual Lane: Normal
I/O Throttling: None
Status: Online
```

## Adapter Target Universal SAN Congestion Mitigation Status

For a description of USCM, see the following [NOTE](#).

The `target scmchk` command displays USCM status of the selected target discovered on the Marvell Adapter target:

```
~# esxcli qlfc qcc target scmchk
```

### Syntax

```
esxcli qlfc qcc target scmchk {cmd} [cmd options]
```

### Available Commands

`get`

Shows USCM status information of the specified target. See [Get Target USCM Status](#).

## Get Target USCM Status

The `target scmchk get` command displays target-level USCM status of the selected target discovered on the Marvell Adapter port:

```
~# esxcli qlfc qcc target scmchk get
```

### Syntax

```
esxcli qlfc qcc target scmchk get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.

## Example

The following example shows the `target scmchk get` command on a local host:

```
~# esxcli qlfc qcc target scmchk get -i  
FC_51:40:2e:c0:12:3c:f4:a0_Target_50:0a:09:81:90:a2:ce:4d
```

The following example shows the `target scmchk get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target scmchk  
get -i FC_51:40:2e:c0:12:3c:f4:a0_Target_50:0a:09:81:90:a2:ce:4d
```

The output for both commands is:

```
Target Congestion Information:  
  Message: Success  
  Target Congestion Status:  
    Data:  
      Node Name: 50:0a:09:80:80:a2:ce:4d  
      Port Name: 50:0a:09:81:90:a2:ce:4d  
      Port Id: 01:12:00  
      Target Number: 0  
      Congestion Current State: Healthy  
      Link Integrity Events: No  
      Seconds Since Last Event: 153  
      Virtual Lane: Normal  
      I/O Throttling: None
```

## Target Port Status

The USCM target congestion status ([Table 4-4](#)) indicates the current status/health of connected target ports based on the FPIN ELSs received from the switch.

This status includes peer congestion and link integrity, as well as details about each of these events for each active target port.

**Table 4-4. USCM Target Port Status**

Status	Description
Congestion Current State	See <a href="#">Congestion Current State</a>
Link Integrity Events	<b>Yes</b> . A link event has been received. <b>No</b>
Seconds Since Last Event	See <a href="#">Seconds Since Last Event</a> .
Virtual Lane <sup>a</sup>	Slow. The current target is marked as slow device and was moved to a slow virtual lane due to congestion. Normal. The current target is healthy. No congestion is detected. Fast. Fast traffic is flowing to a fast virtual lane. Non-operational. Either virtual lanes is disabled at the initiator or it is not supported by the connected switch. NA. Virtual lanes is not supported on the connected adapter and/or the driver.
I/O Throttling <sup>a</sup>	See <a href="#">I/O Throttling</a>

<sup>a</sup> For more information about virtual lane and I/O throttling, see the appropriate Marvell QLogic Fibre Channel Adapter user's guide.

## Adapter Target Universal SAN Congestion Mitigation Statistics

For a description of USCM, see the following [NOTE](#).

For more information about USCM statistics, see [“Get Initiator Port USCM Statistics” on page 222](#).

The `target scmstats` command displays USCM statistics for the specified target discovered on the Marvell Adapter port:

```
~# esxcli qlfc qcc target scmstats
```

## Syntax

```
esxcli qlfc qcc target scmstats {cmd} [cmd options]
```

## Available Commands

get

Shows USCM statistics information of the specified target. See [Get Target SAN Congestion Management \(SCM\) Statistics](#).

## Get Target USCM Statistics

The `target scmstats get` command displays target-level USCM statistics for the specified target discovered on the Marvell Adapter port.

```
~# esxcli qlfc qcc target scmstats get
```

## Syntax

```
esxcli qlfc qcc target scmstats get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.

## Example

The following example shows the `target scmstats get` command on a local host:

```
~# esxcli qlfc qcc port scmstats get -i  
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The following example shows the `target scmstats get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc port  
scsmstats get  
-i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The output for both commands is:

```
Target SCM Statistics:  
  Message: Success  
  Target SCMStats:  
    Data:  
      Node Name: 50:0a:09:80:80:a2:ce:4d  
      Port Name: 50:0a:09:81:90:a2:ce:4d  
      Port Id: 01:12:00  
      Target Number: 0
```

```

-----
Congestion Mitigation
-----
Cleared Congestion Count: 3
Throttled Up Count: 1
Throttled Down Count: 4
Bottomed Out Count: 0
Returned Busy Count: 12
-----
Rx Fabric Performance Impact
Notifications
-----
Link Failure Count: 0
Link Unknown Event Count: 0
Loss Of Sync Count: 0
Loss Of Signal Count: 0
Link Device Specific Event Count: 0
Primitive Sequence Protocol Error Count: 0
Invalid Transmission Word Count: 0
Invalid CRC Count: 0
Link Uncorrectable FEC Count: 0
Congestion Clear Count: 3
Congestion Lost Credit Count: 2
Congestion Credit Stall Count: 5
Congestion Oversubscription Count: 2
Congestion Device Specific Count: 0
Pun Count: 0

```

### Target Port Statistics

The USCM target statistics ([Table 4-5](#)) indicate how many times a congestion event has occurred since the counters were reset.

**Table 4-5. USCM Target Port Congestion Mitigation Statistics**

Statistic	Description
Cleared Congestion Count	Counter for the number of times the congestion event was cleared for this target.
Throttled Up Count	See <a href="#">Throttled Up Count</a> .

**Table 4-5. USCM Target Port Congestion Mitigation Statistics (Continued)**

Statistic	Description
Throttled Down Count	See <a href="#">Throttled Down Count</a> .
Bottomed Out Count	See <a href="#">Bottom Out Count</a> .
Returned Busy Count	See <a href="#">Returned Busy Count</a> .
Link Failure Count	Counter for number of link failure events.
Link Unknown Event Count	Counter for the number of unknown events.
Loss of Sync Count	Counter for the number of loss of sync events.
Loss of Signal Count	Counter for the number of loss of signal count events.
Link Device Specific Event Count	Counter for the number of device specific events.
Primitive Seq Protocol Error Count	Counter for the number of primitive sequence protocol errors.
Invalid Transmission Word Count	Counter for the number of transmission word errors.
Invalid CRC Count	Counter for the number of invalid CRC events.
Link Uncorrectable FEC Count	Counter for the number of uncorrectable FEC errors.
Congestion Clear Count	Counter for the number of times the peer congestion event was cleared for this target.
Congestion Lost Credit Count	Counter for the number of lost credit events.
Congestion Credit Stall Count	Counter for the number of credit stall events.

**Table 4-5. USCM Target Port Congestion Mitigation Statistics (Continued)**

Statistic	Description
Congestion Over-subscription Count	Counter for the number of oversubscription events.
Congestion Device Specific Count	Counter for the number of device-specific events.
PUN Count	Number of priority update notifications received.

## Adapter Target iiDMA Configuration

The `target iidma` command configures the maximum target link speed at which data is sent for the selected FC target from the Marvell Adapter port:

```
~# esxcli qlfc qcc target iidma
```

### Syntax

```
esxcli qlfc qcc target iidma {cmd} [cmd options]
```

### Available Commands

`get`

Shows current maximum link speed configuration of the specified target detected on Marvell FC Port. See [Get Target iiDMA Configuration](#).

`set`

Sets maximum link speed configuration of the specified target detected on Marvell FC Port. See [Set Target iiDMA Configuration](#).

## Get Target iiDMA Configuration

The `target iidma get` command shows target link speed configuration for the specified FC target.

```
~# esxcli qlfc qcc target iidma get
```

### Syntax

```
esxcli qlfc qcc target iidma get [cmd options]
```



## Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.

## Example

The following example shows the `target iidma get` command on a local host:

```
~# esxcli qlfc qcc target iidma get -i  
FC_51:40:2e:c0:12:3c:f4:A2_Target_50:0a:09:81:90:a2:ce:4d
```

The following example shows the `target iidma get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target iidma  
get -i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The output for both commands is:

```
Target IIDMA Information:  
  Message: Success  
  Target IIDMAInfo:  
    Data:  
      Node Name: 50:0a:09:80:80:a2:ce:4d  
      Port Name: 50:0a:09:81:90:a2:ce:4d  
      Port Id: 01:12:00  
      Target Number: 0  
      Target Maximum Link Speed: 16_Gbps
```

## Set Target iiDMA Configuration

The `target iidma set` command sets the target link speed for the specified FC target.

```
~# esxcli qlfc qcc target iidma set
```

---

### NOTE

The maximum link speed is limited to the maximum supported port speed shown in the `port info` command.

---

## Syntax

```
esxcli qlfc qcc target iidma set [cmd options]
```

## Keywords

- `-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.
- `-s|--link-speed <str>` = Link speed (required)

<u>Parameter</u>	<u>Value (strings are case-sensitive)</u>
<code>identifier</code>	Port identifier from the <code>port list</code> command
<code>link-speed</code>	1_Gbps, 2_Gbps, 4_Gbps, 8_Gbps, 16_Gbps, 32_Gbps, 64_Gbps

## Example

The following example shows the `target iidma set` command on a local host:

```
~# esxcli qlfc qcc target iidma set -i  
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d -s  
32_Gbps
```

The following example shows the `target iidma set` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target iidma  
set -i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d  
-s 32_Gbps
```

The output for both commands is:

```
Target IIDMA Information:  
  Message: Success  
  Target IIDMAInfo:  
    Data:  
      Node Name: 50:0a:09:80:80:a2:ce:4d  
      Port Name: 50:0a:09:81:90:a2:ce:4d  
      Port Id: 01:12:00  
  Target Number: 0  
  Target Maximum Link Speed: 32_Gbps
```

## Target Link Statistics

The `target stats` command shows target link statistics for the selected FC target from the Marvell Adapter port:

```
~# esxcli qlfc qcc target stats
```

## Syntax

```
esxcli qlfc qcc target stats {cmd} [cmd options]
```

## Available Commands

get

Shows link statistics of the specified FC target detected on the Marvell FC port.  
See [Get Target Link Statistics](#).

## Get Target Link Statistics

The `target stats get` command shows target link statistics for the specified FC target detected on the Marvell FC port.

```
~# esxcli qlfc qcc target stats get
```

## Syntax

```
esxcli qlfc qcc target stats get [cmd options]
```

## Keywords

`-i|--identifier <str>` = Target identifier (required). Obtain the identifier from the `target list` output.

## Example

The following example shows the `target stats get` command on a local host:

```
~# esxcli qlfc qcc target stats get -i  
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The following example shows the `target stats get` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc target stats  
get -i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d
```

The output for both commands is:

```
Target Statistics:  
  Message: Success  
  Target Stats:  
    Data:  
    Node Name: 50:0a:09:80:80:a2:ce:4d  
    Port Name: 50:0a:09:81:90:a2:ce:4d  
    Port Id: 0a:00:00  
    Target Number: 0  
    Link Failure Count: 1
```

```
Loss Of Sync Count: 0
Loss Of Signal Count: 0
Primitive Sequence Protocol Error Count: 0
Invalid Transmission Word Count: 0
Invalid CRC Count: 0
```

## Adapter LUN Namespace Commands and Sub-namespaces

This section provides information on the following:

- [Adapter LUN List](#)
- [Adapter LUN Information](#)

---

### NOTE

These commands are supported for FCP targets and NVMe-FC targets.

---

To view the Marvell Adapter LUN namespace commands and sub-namespaces, issue the following command:

```
# esxcli qlfc qcc lun
```

### Syntax

```
esxcli qlfc qcc lun {cmd} [cmd options]
```

### Namespaces

Available namespaces include the following:

<u>Namespace</u>	<u>Description</u>
info	QCC CLI for LUN information

### Available Commands

```
list
```

Lists identifiers for the LUNs discovered on the Marvell Adapter ports. See [Adapter LUN List](#).

## Adapter LUN List

The `lun list` command shows all the LUNs detected, as follows:

```
~# esxcli qlfc qcc lun list
```

The following example shows the `lun list` command on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc lun list
```

The command output is:

```
Luns/Namespace
-----
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d_LUN_0
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d_LUN_1
FC_51:40:2e:c0:12:3c:f4:a2_Target_ 20:02:00:11:0d:27:b2:00_NSID_1
```

## Adapter LUN Information

The `lun info` command shows LUN information of the selected FC LUN:

```
~# esxcli qlfc qcc lun info
```

### Syntax

```
esxcli qlfc qcc lun info {cmd} [cmd options]
```

### Available Commands

`get`

Shows LUN information of the specified LUN. See [Get LUN Information](#).

## Get LUN Information

The `lun info get` command shows information for the specified LUN.

```
~# esxcli qlfc qcc lun info get
```

### Syntax

```
esxcli qlfc qcc lun info get [cmd options]
```

### Keywords

`-i|--identifier <str>` = LUN identifier (required). Obtain the identifier from the LUN list output.

### Example

The following example shows the `lun info get` command for an FCP target on a local host:

```
~# esxcli qlfc qcc lun info get -i
FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d_LUN_1
```

The following example shows the `lun info get` command an FCP target on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc lun info get
-i FC_51:40:2e:c0:12:3c:f4:a2_Target_50:0a:09:81:90:a2:ce:4d_LUN_1
```

The output for both commands is:

```
Lun Information:
```

```
Lun Info:
  Data:
    Vendor ID: NETAPP
    Product ID: LUN
    Product Revision: 820a
    Lun Number: 1
    Lun Size In MB: 3074
    Lun Worldwide Unique ID:
4e:45:54:41:50:50:20:20:20:4c:55:4e:20:38:30:41:44:49:2b:4b:65:57:
2d:63:61:00:00:00:00:00:00:00
```

Message: Success

The following example shows the `lun info get` command for an NVMe target on a local host:

```
~# esxcli qlfc qcc lun info get -i
FC_51:40:2e:c0:12:3c:f4:a2_Target_20:02:00:11:0d:27:b2:00_NSID_1
```

The following example shows the `lun info get` command for an NVMe target on a remote host:

```
# esxcli -s 172.27.9.144 -u root -p password qlfc qcc lun info get
-i FC_51:40:2e:c0:12:3c:f4:a2_Target_20:02:00:11:0d:27:b2:00_NSID_1
```

The output for both commands is:

```
Lun Information:
  Lun Info:
    Data:
      Vendor ID: SANBlaze
      Product ID: VLUN P2T0
      Product Revision: V8.1-dev
      Namespace ID: 1
      Namespace Size In MB: 5000
```

Message: Success

# A Revision History

Document Revision History	
Revision A, April 15, 2016	
Revision B, June 21, 2017	
Revision C, November 17, 2017	
Revision D, June 27, 2018	
Revision E, January 18, 2019	
Revision F, September 27, 2019	
Revision G, October 31, 2019	
Revision H, November 20, 2019	
Revision J, May 8, 2020	
Revision K, July 17, 2020	
Revision L, August 25, 2020	
Revision M, February 5, 2021	
Revision N, August 20, 2021	
Revision P, December 15, 2021	
Revision R, March 29, 2022	
Revision T, September 30, 2022	
Revision W, March 24, 2023	
Changes	Sections Affected
<p>Removed support for VMware ESXi 6.0 and later.            Added support for VMware ESXi 8.0 and later.</p> <p>In the Keywords section:            Added the <code>-m --mode</code> keyword.            Added the <code>identifier</code> and <code>mode</code> parameters.</p> <p>In the Example section:            Updated the first two command examples to reflect Driver mode. Updated the corresponding output.            Added two command examples for the command on a local and remote host for Firmware. Added the corresponding command output.</p>	<p>All</p> <p><a href="#">“Get Port Statistics” on page 152</a></p>

<p>Added the <code>port stats reset</code> command.</p> <p>In the example output, updated the SFP DMI data display with 64GFC SFP related additional fields.</p> <p>In <a href="#">Table 4-1</a>, I/O Throttling row, Description cell, <b>Active</b> value, changed the second sentence to “The I/O queue depth is ramping up <b>or down</b>.”</p> <p>In the Example section, in the command output, Rx Fabric Performance Impact Notifications section, added a line for the Link Uncorrectable FEC Count.</p> <p>In <a href="#">Table 4-3</a>, added profiles for USCM Configuration Status and USCM Profile Management.</p> <p>In the Namespaces section, in the Namespace table, added the <code>stats</code> namespace.</p> <p>In the Example section, in the command output, Rx Fabric Performance Impact Notifications section, added a line for the Link Uncorrectable FEC Count.</p> <p>In <a href="#">Table 4-3</a>, added a new statistic, Link Uncorrectable FEC Count.</p> <p>Added the <code>target stats get</code> command to view target link statistics of the selected FC target.</p>	<p><a href="#">“Reset Port Statistics” on page 154</a></p> <p><a href="#">“Get Port SFP DMI Information” on page 155</a></p> <p><a href="#">“Initiator Port Status” on page 219</a></p> <p><a href="#">“Get Initiator Port USCM Statistics” on page 222</a></p> <p><a href="#">“Set Port Universal SAN Congestion Mitigation Profile” on page 227</a></p> <p><a href="#">“Adapter Target Namespace Commands and Sub-namespaces” on page 230</a></p> <p><a href="#">“Get Target USCM Statistics” on page 237</a></p> <p><a href="#">“Target Port Statistics” on page 238</a></p> <p><a href="#">“Target Link Statistics” on page 242</a>, <a href="#">“Get Target Link Statistics” on page 243</a></p>
---	---





Marvell first revolutionized the digital storage industry by moving information at speeds never thought possible. Today, that same breakthrough innovation remains at the heart of the company's storage, networking and connectivity solutions. With leading intellectual property and deep system-level knowledge, Marvell semiconductor solutions continue to transform the enterprise, cloud, automotive, industrial, and consumer markets. For more information, visit [www.marvell.com](http://www.marvell.com).

© 2023 Marvell. All rights reserved. The MARVELL mark and M logo are registered and/or common law trademarks of Marvell and/or its Affiliates in the US and/or other countries. This document may also contain other registered or common law trademarks of Marvell and/or its Affiliates.

Doc. No. BC0151101-00 Rev. W Revised: March 24, 2023